


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	SJ	KB	2758	02/08/22	First Issue
b	YZL	KB	2958	19/05/23	Replaced SA070 with KLS2
c					
d					
e					
f					
g					
h					
i					
j					
k					
l					
m					






GC3PR/FL KammBar

Instructions

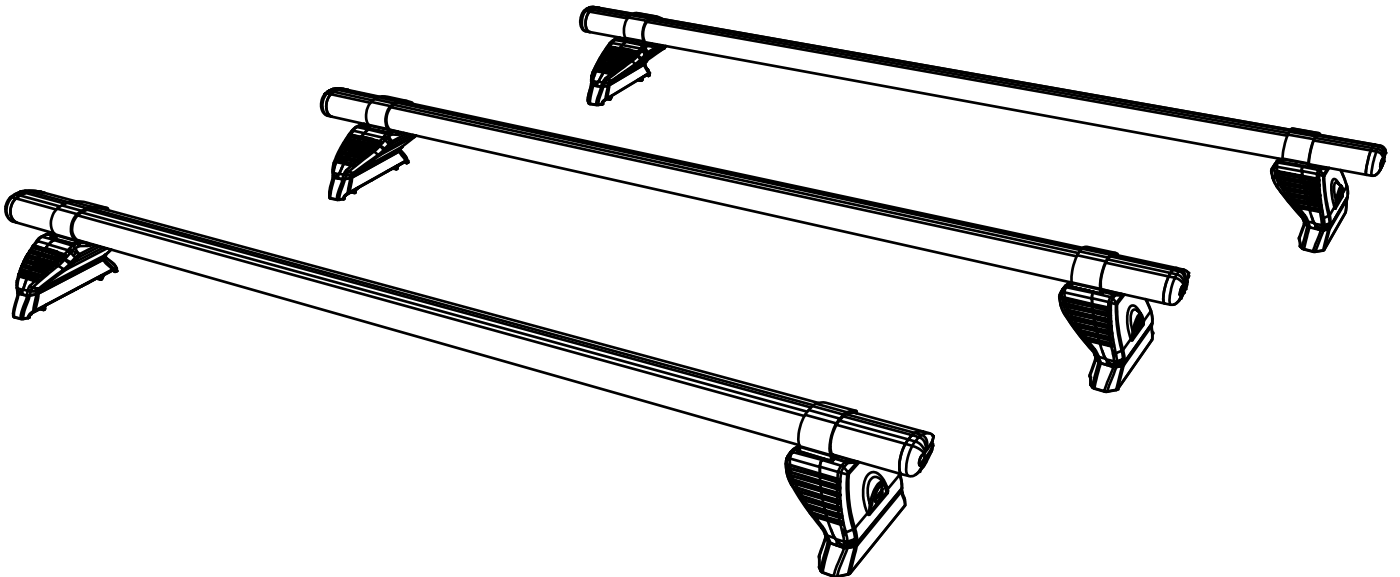


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

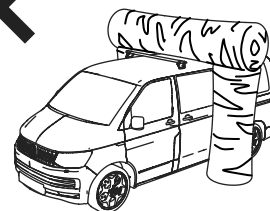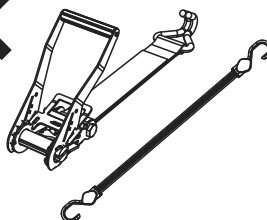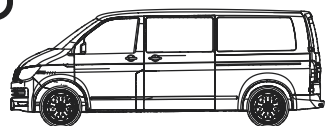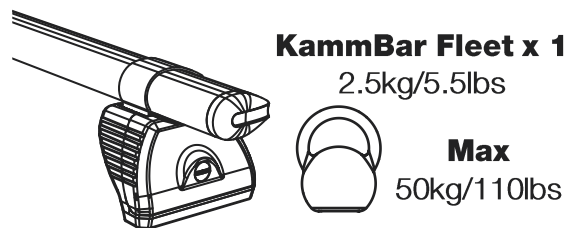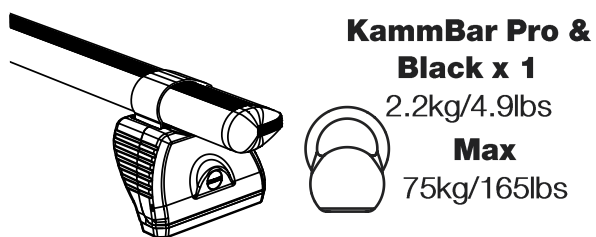


KammBar Pro & Black

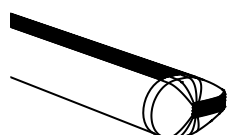


**SA420/
SA537 x 3** ☐

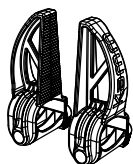

KLS2 x 1 ☐

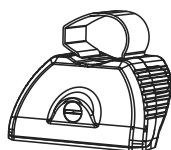


SA397 x 3 ☐

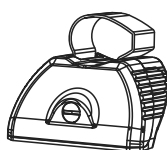


SA398 x 3 ☐


KammBar Fleet

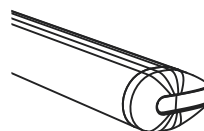


SA394 x 3 ☐



C04 x 3
optional upgrade

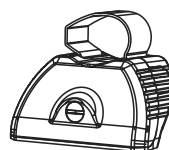


SA397 x 3 ☐

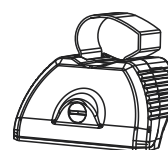


SA398 x 3 ☐


Fitting Kit




PS178 x 2 ☐




PS254L x 1 ☐




PS254R x 1 ☐



PS405 x 2 ☐

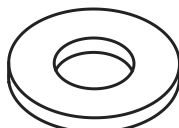


FW002 (M8) x 6 ☐

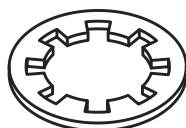


FW009 (M8) x 6 ☐




FT01 x 1 ☐




PS412 x 2 ☐




**FS105
(M8 x 55) x 2** ☐



**FS061
(M8 x 35) x 2** ☐




**FS062
(M8 x 25) x 2** ☐




PS047 x 2 ☐

1.

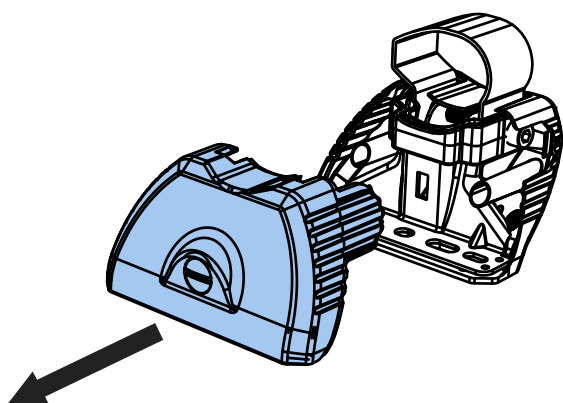

2.

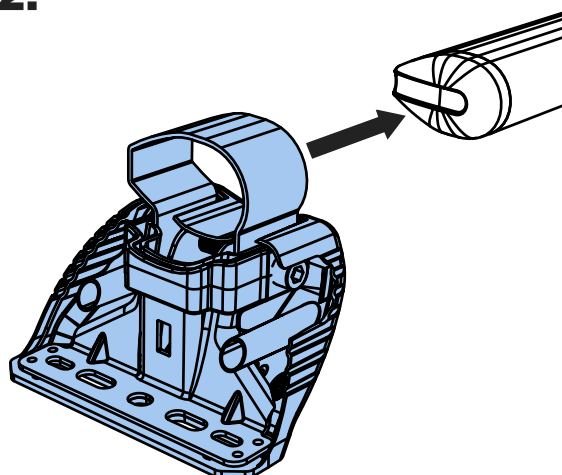

3.




SA397
PS178




SA397



SA397
PS254L

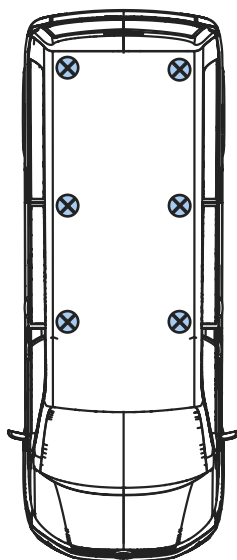


SA398
PS178




SA398




SA398
PS254R









4.

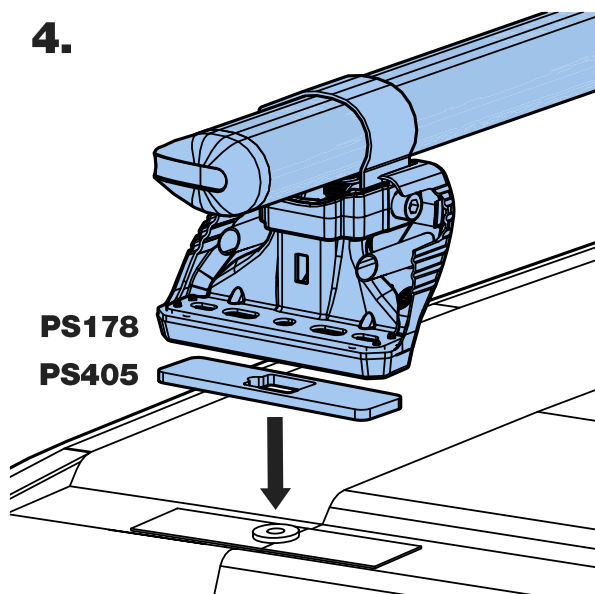


5.

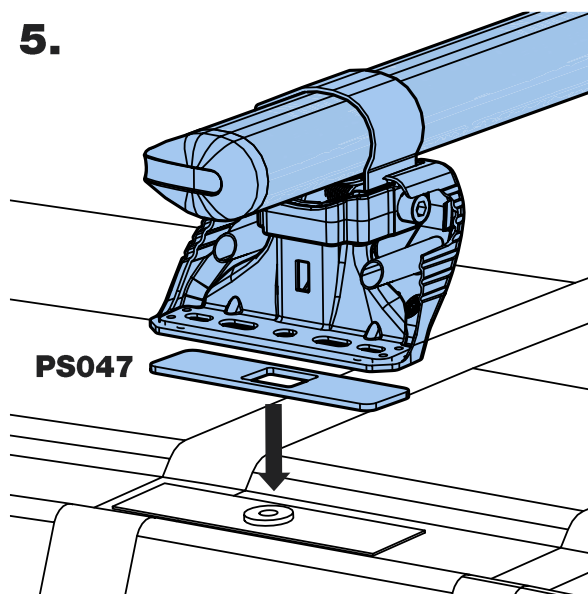


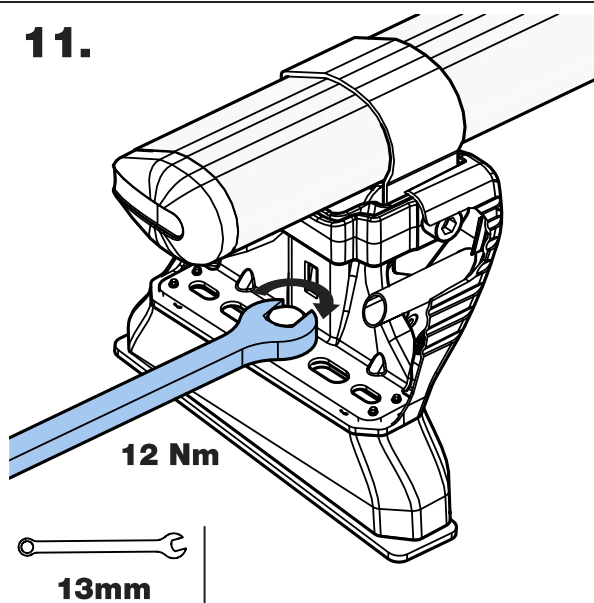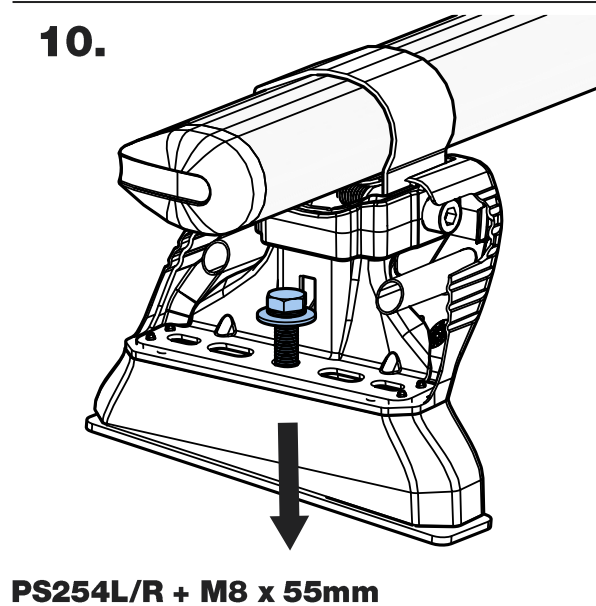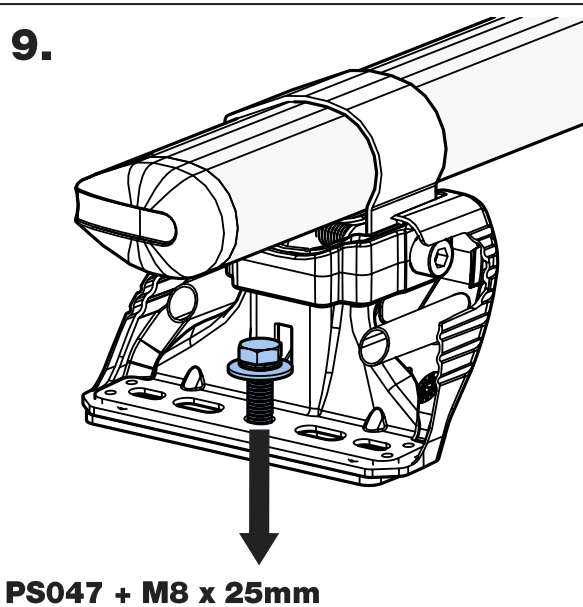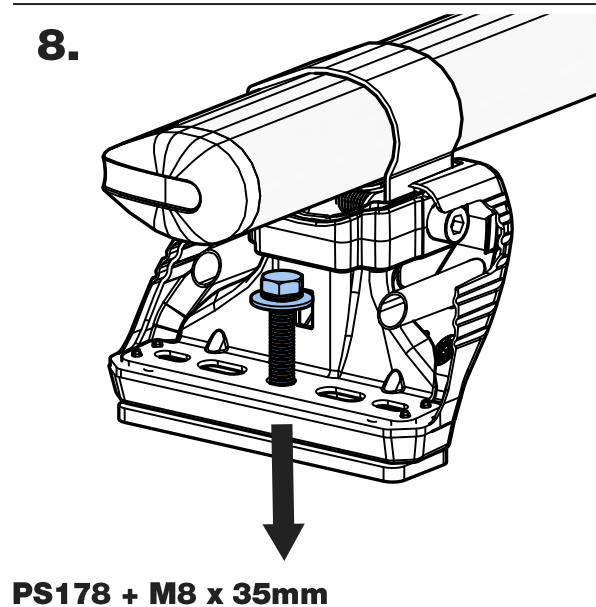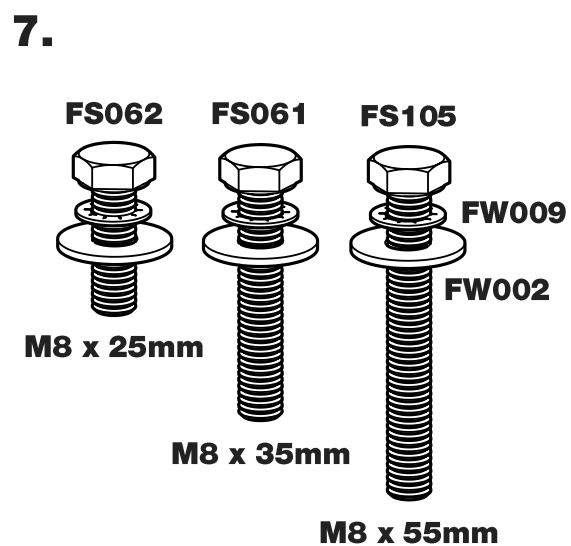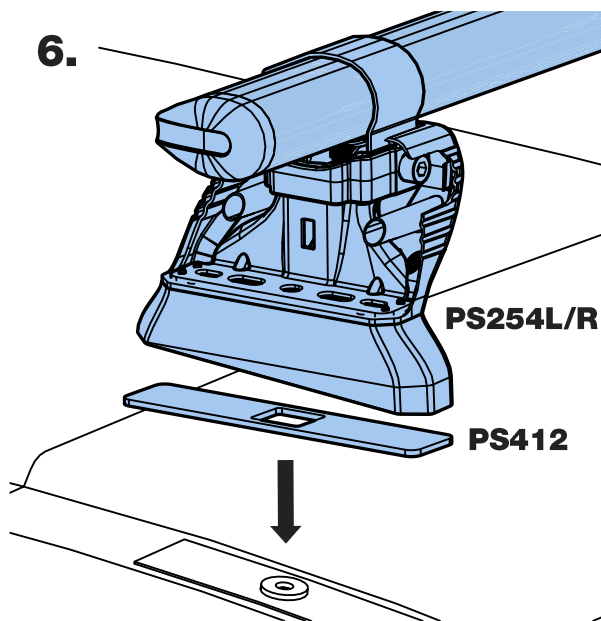


12.

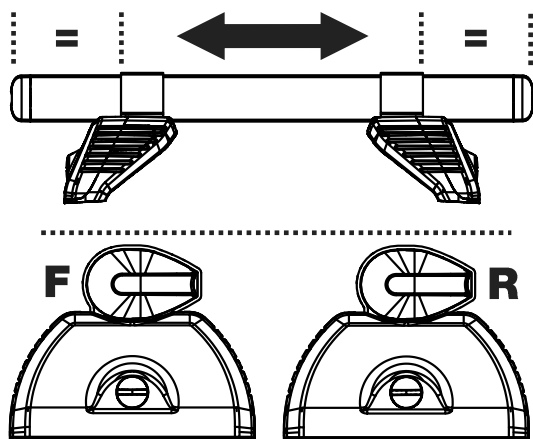

13.

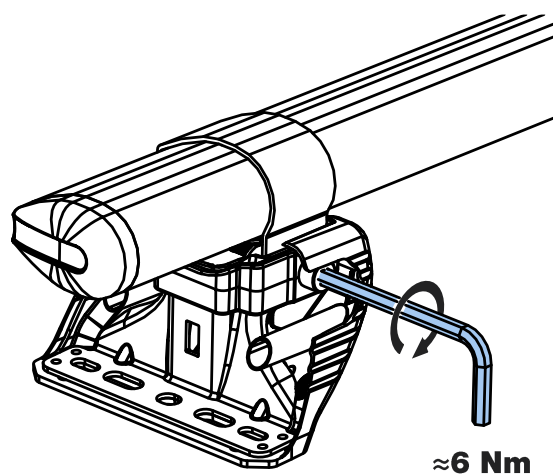

14.

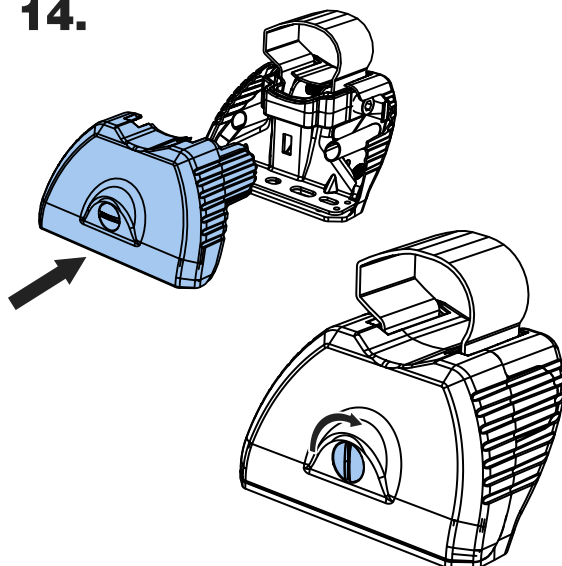

15.

