


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	SJ	KB	2758	02/08/22	First Issue
b	YZL	KB	2958	19/05/23	Replaced SA070 with KLS2
c					
d					
e					
f					
g					
h					
i					
j					
k					
l					
m					






IA3PR/FL KammBar

Instructions

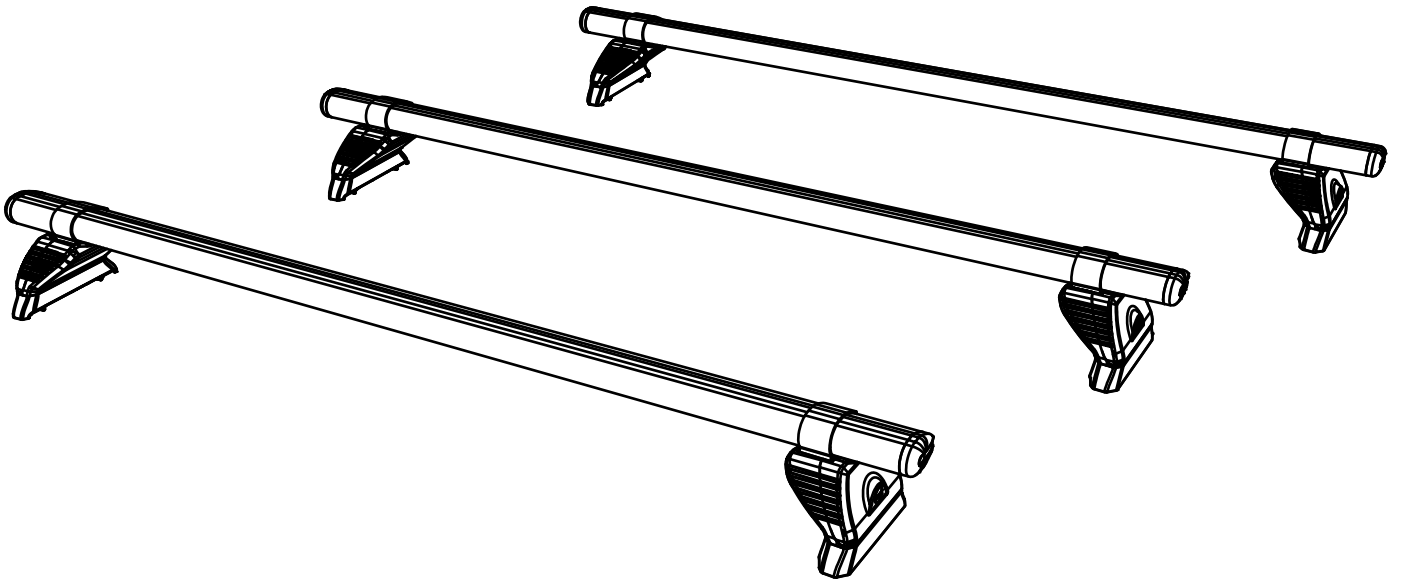


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

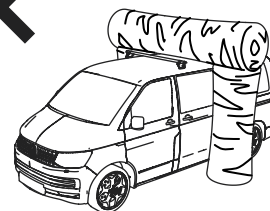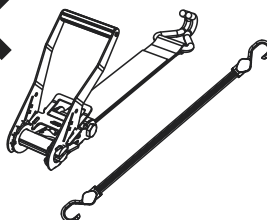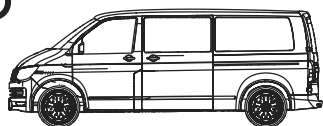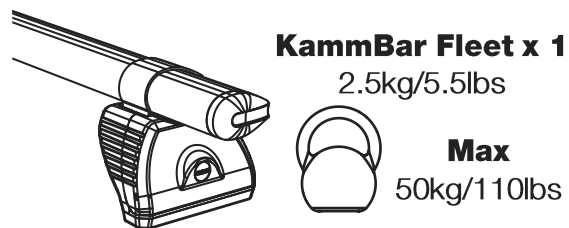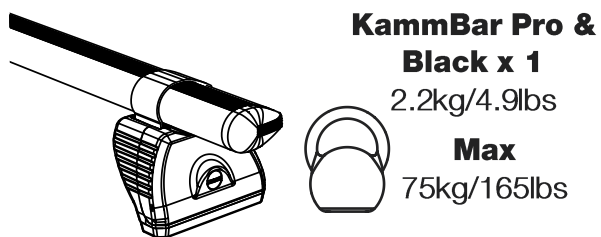


KammBar Pro & Black

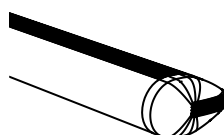


**SA422/
SA539 x 3** ☐

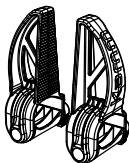

KLS2 x 1 ☐

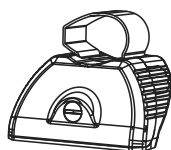


SA397 x 3 ☐

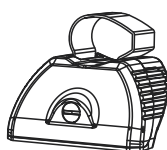


SA398 x 3 ☐


KammBar Fleet

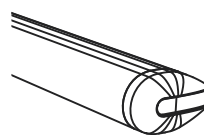


SA396 x 3 ☐



C04 x 3
optional upgrade

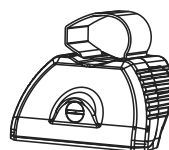


SA397 x 3 ☐

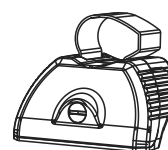


SA398 x 3 ☐


Fitting Kit




PS180 x 6 ☐

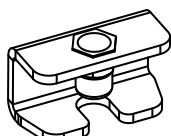


SA068 x 6 ☐




PS047 x 6 ☐

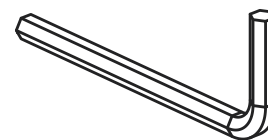


FT01 x 1 ☐

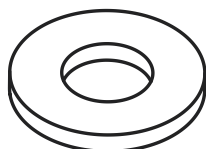

FW002 (M8) x 6 ☐

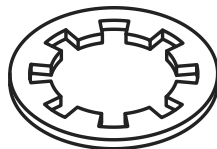


FW009 (M8) x 6 ☐




**FS067
(M8 x 20) x 6** ☐


1.

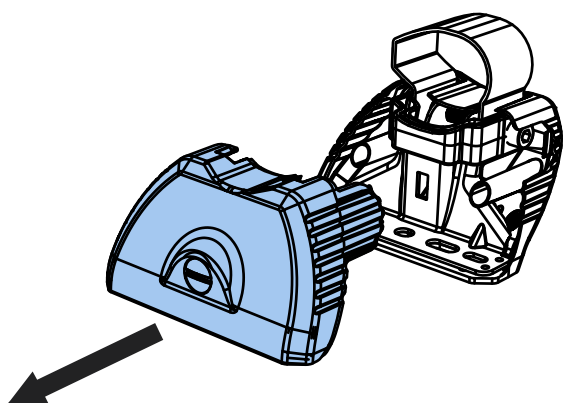


2.

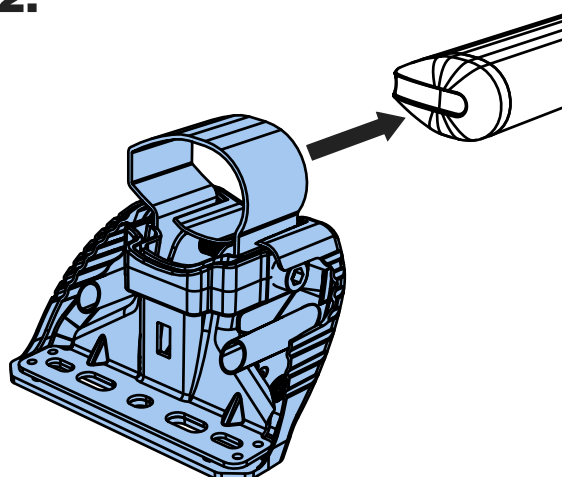


3.




SA397
PS180




SA397
PS180




SA397
PS180

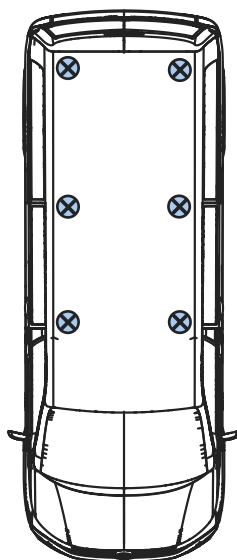


SA398
PS180




SA398
PS180




SA398
PS180




4.

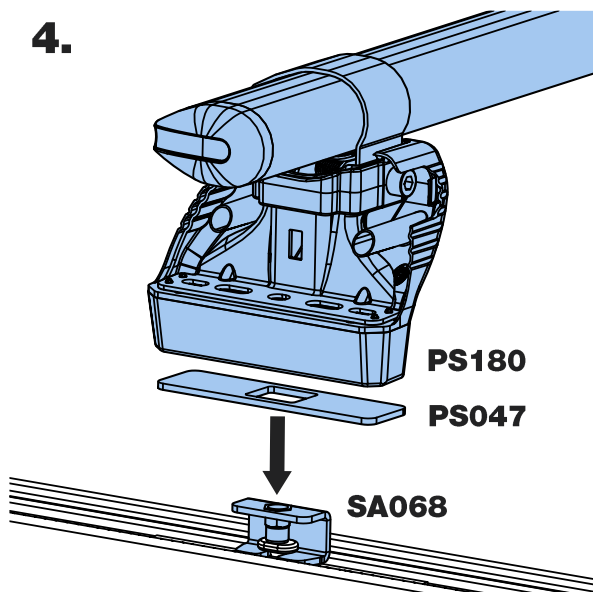

5.

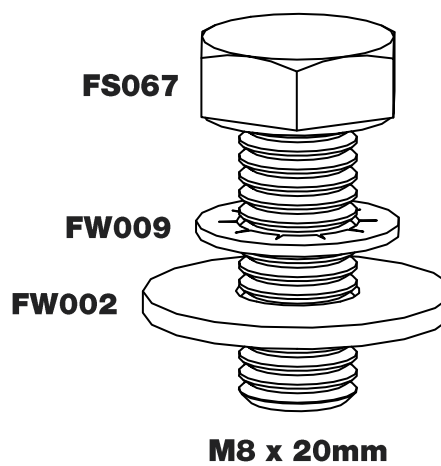


6.

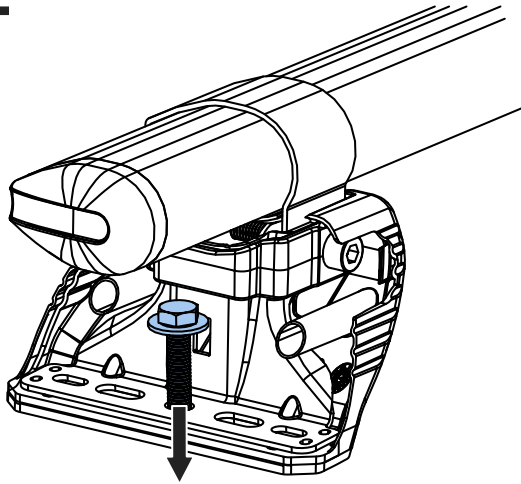


PS180 + M8 x 20mm


7.

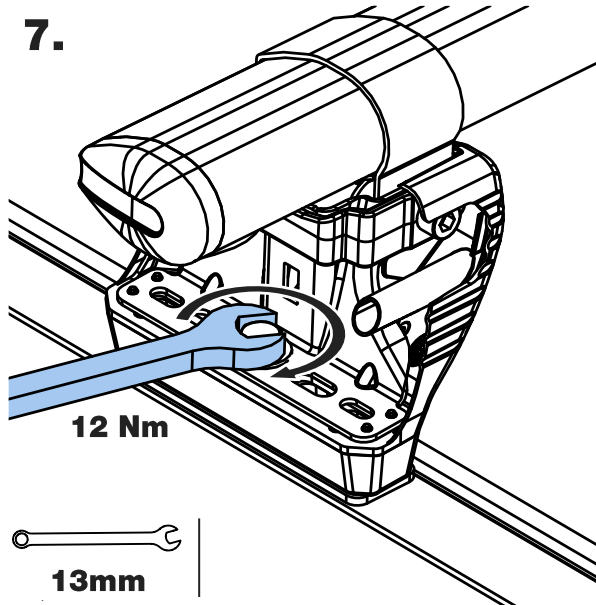


8.

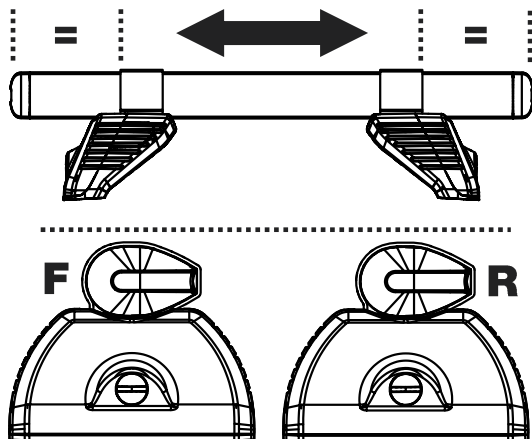

9.

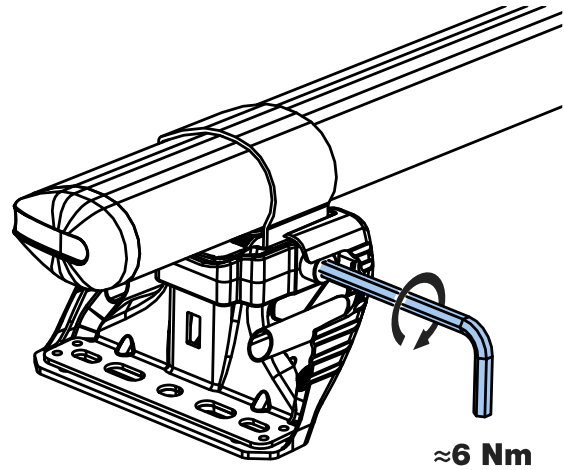

10.

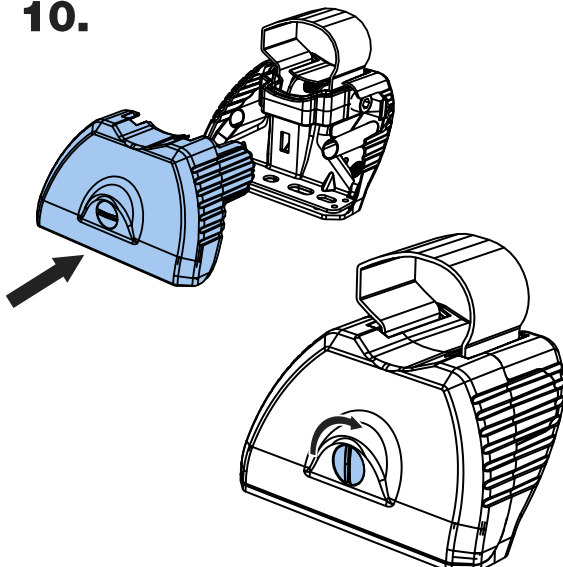

11.

