


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	MK	KB	2754	27/06/22	First Issue
b	MK	KB	2833	11/11/22	Updated instructions for track nut positions, clicking of side frame onto bars and where to strap onto rack.
c	MK	KB	2931	27/03/23	Changed SA428 with SA429 and SA436 with SA437
d	YZL	KB	3034	11/09/23	Updated instructions to include new black Kamm rack part codes. Changed torque value from 10Nm to 6Nm in step 11.
e	SJ	KB	3109	12/12/23	Added TP153, TP154 and TP156
f					
g					
h					
i					
j					
k					
l					
m					

JD3KR

KammRack

Instructions

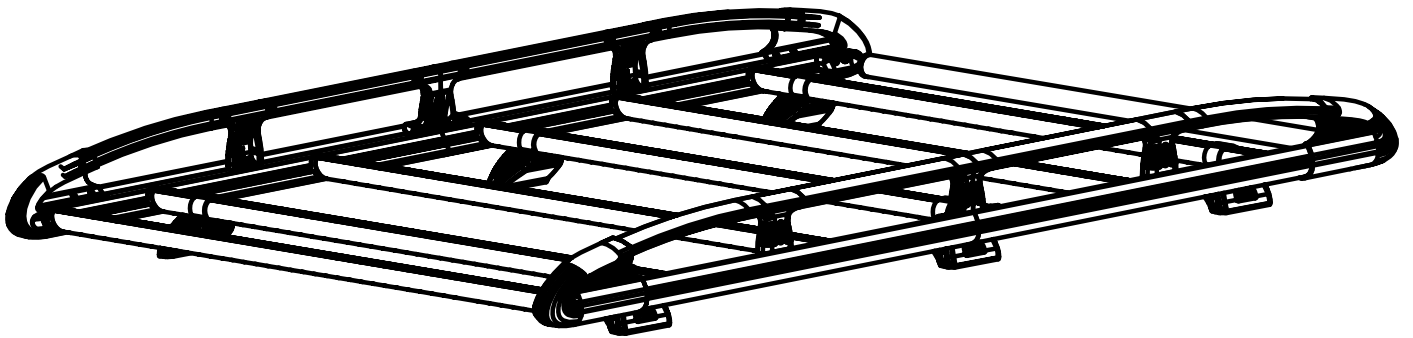

CITY CRASH (✓)

According to ISO/ PAS 11154:2006




JD3KR:

CITROEN Jumper/Dispatch, 2016 –

PEUGEOT Expert, 2016 –


TOYOTA Proace, 2016 –

VAUXHALL Opel Vivaro, 2019 –

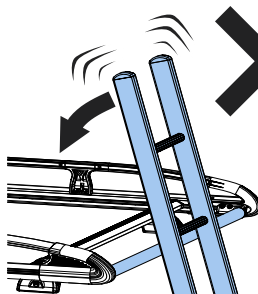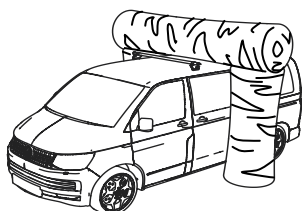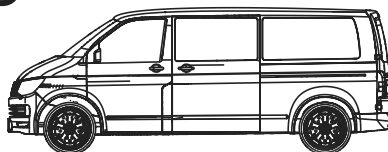


Max


50kg/110lbs

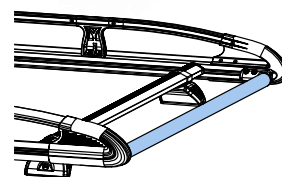


KammRack

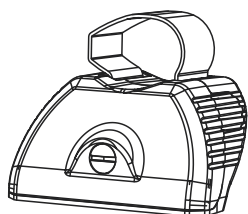


SA397U x 3 ☐

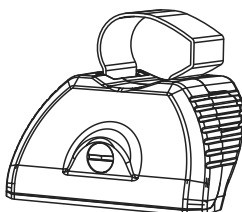

SA398U x 3 ☐

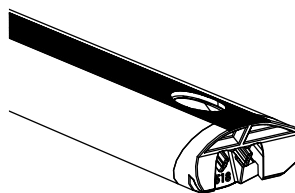

**SA429/
SA467** ☐




C04 x 6


optional upgrade

LHS x 2



RHS x 2

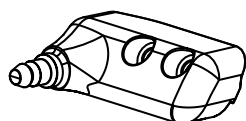


PS519 x 1 ☐

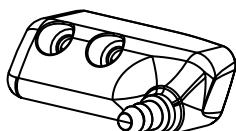


PS520 x 1 ☐

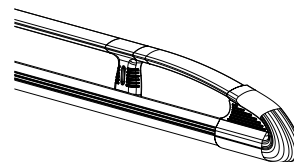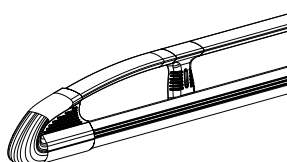

ASF x 1 ☐

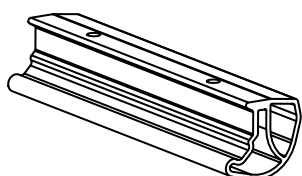


EXT15-02 x 2 ☐

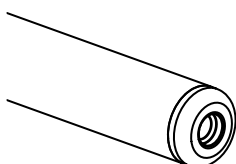


SA437 x 1 ☐


Fitting Kit




PS252 x 2 ☐




PS253 x 2 ☐




PS254L x 1 ☐



PS254R x 1 ☐

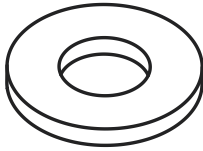


FW001 (M6) x 6 ☐

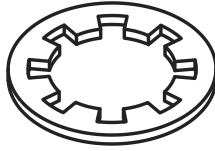


FW008 (M6) x 6 ☐




FN020 (M6) x 6 ☐

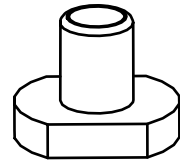


FN085 x 16 ☐




FS042 ☐
(M6 x 40) x 2




FS040 ☐
(M6 x 35) x 2




FS039 ☐
(M6 x 30)
x 2




FS059 ☐
(M8 x 25)
x 16




PS210 x 6 ☐

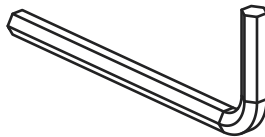


FT01 x 1 ☐

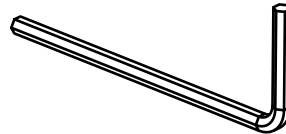


FT05 x 1 ☐



TP154 x 2 ☐




TP153 x 2 ☐


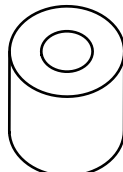


TP156 x 2 ☐


K659/B659- Jumpy/Dispatch/Proace/Expert 2016- Opel Vivaro 2019- L1, H1, Twin Doors

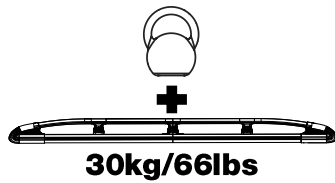



**150kg
Max**

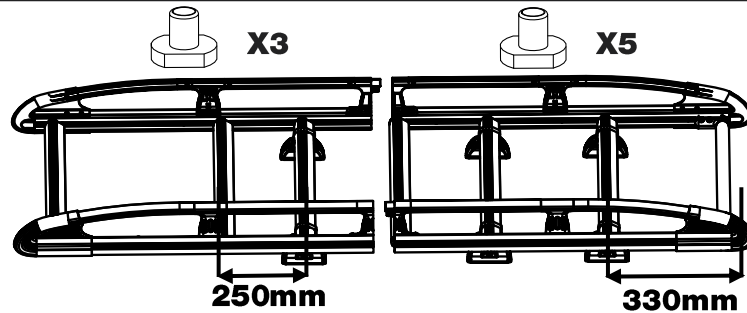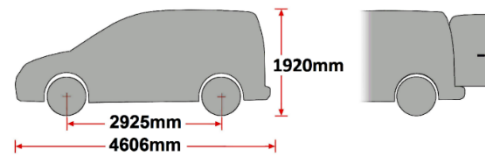


K660/B660- Jumpy/Dispatch/Proace/Expert 2016- Opel Vivaro 2019- L1, H1, Tailgate

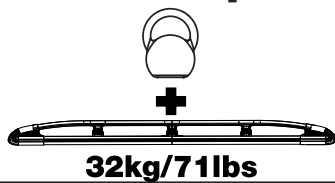


**150kg
Max**

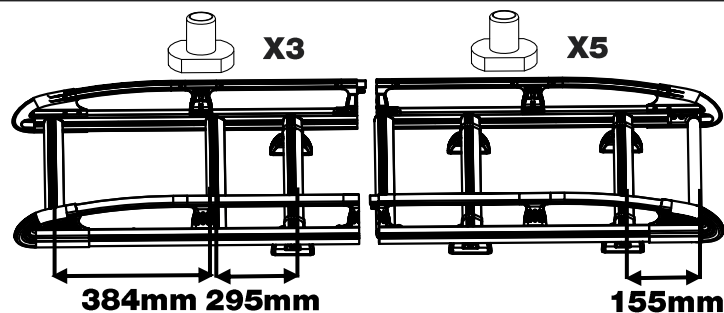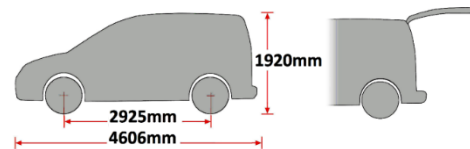


1.

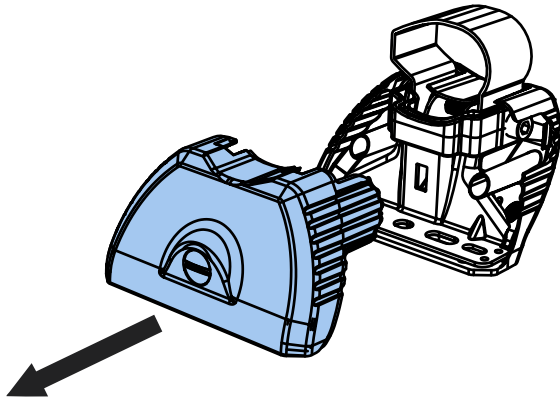


2.

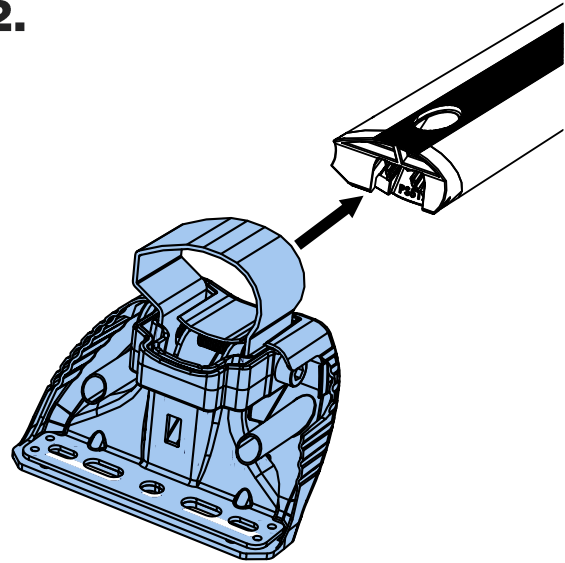


3.

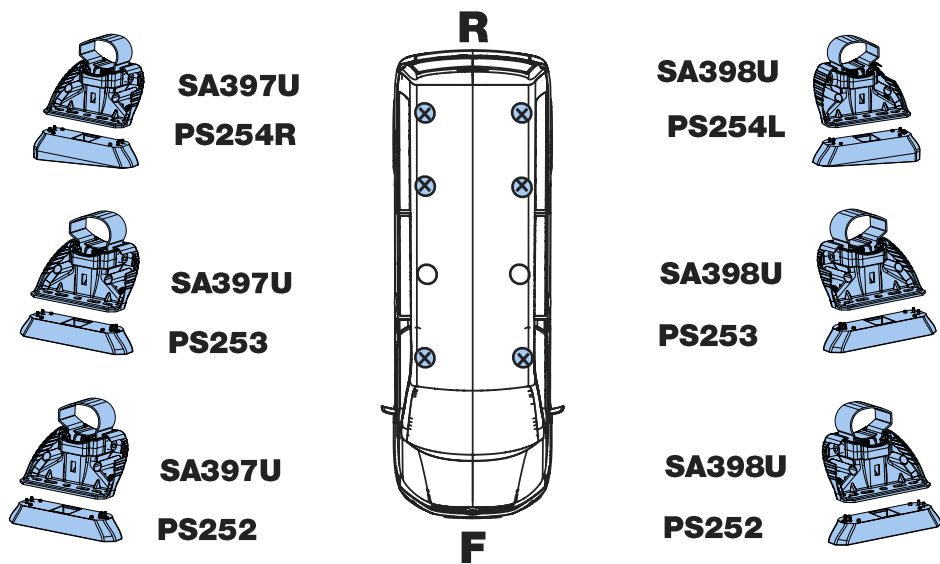


4.

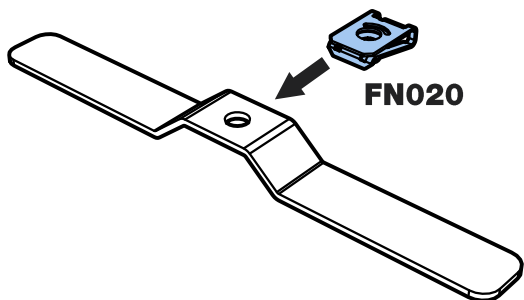


5.

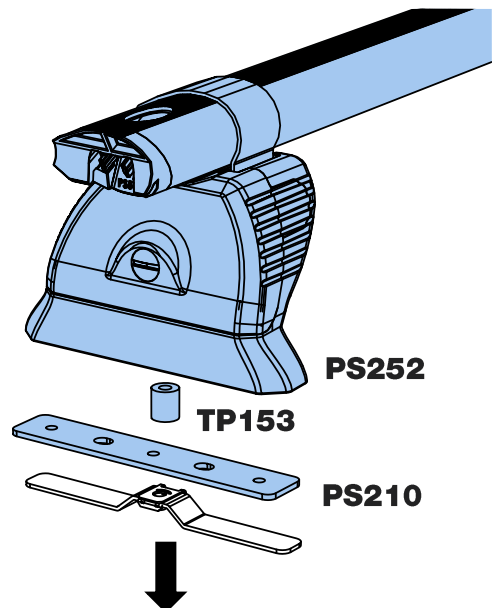


6.

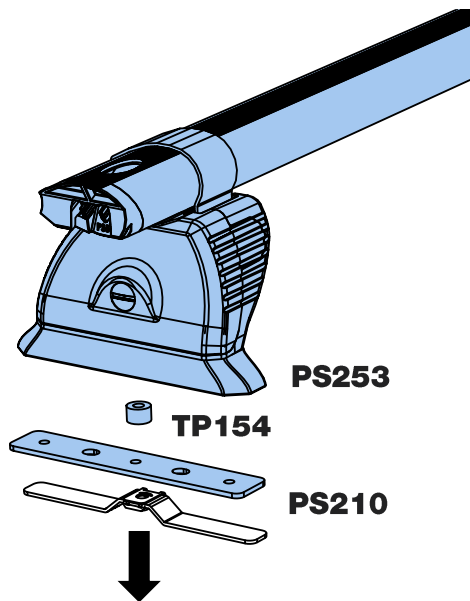


7.

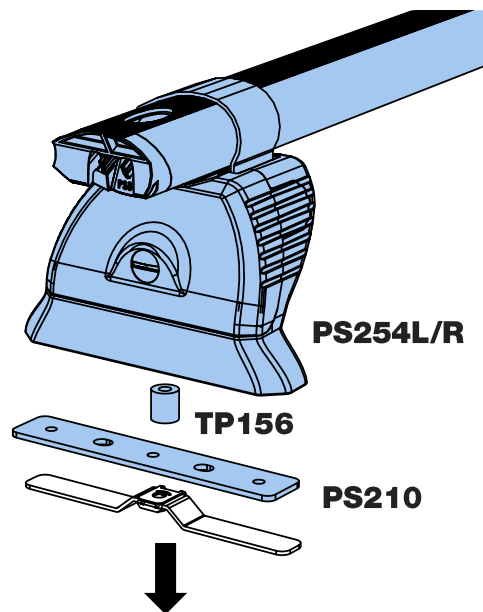


8.

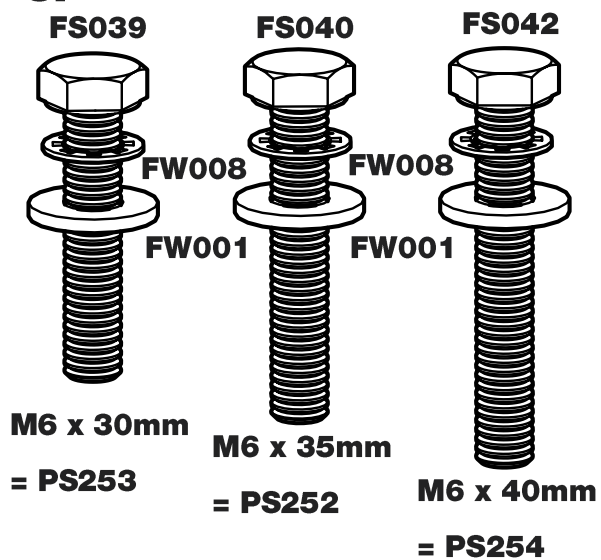


9.

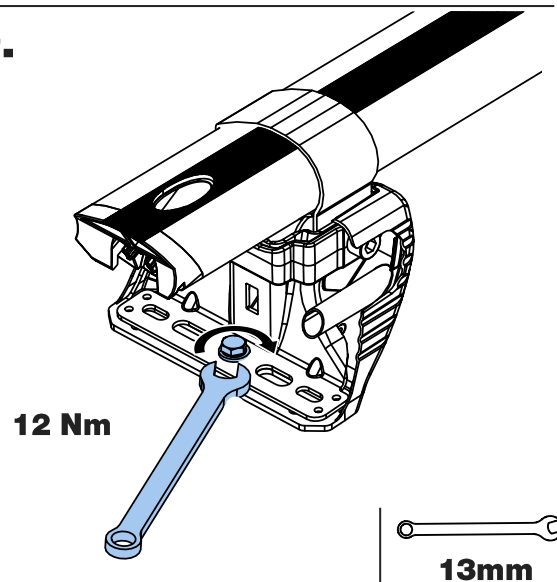


10.


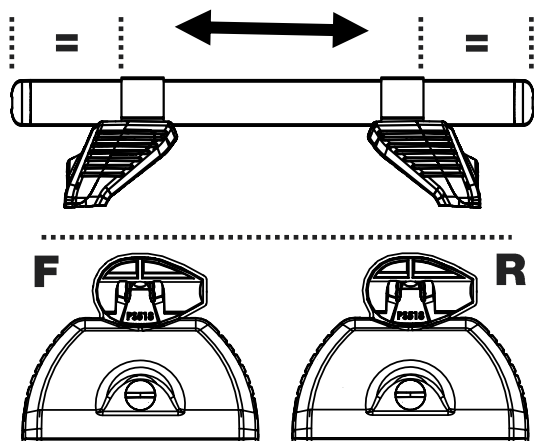


11.

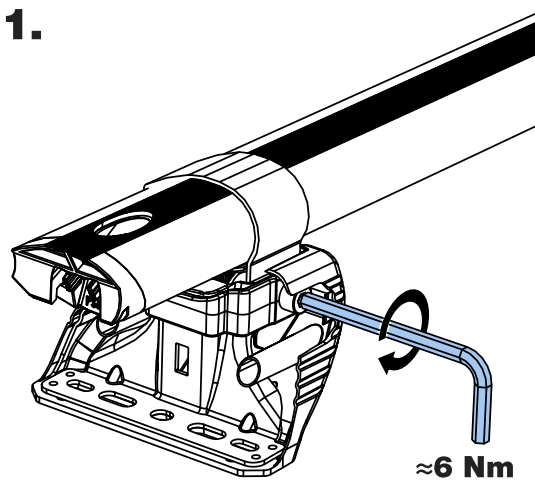


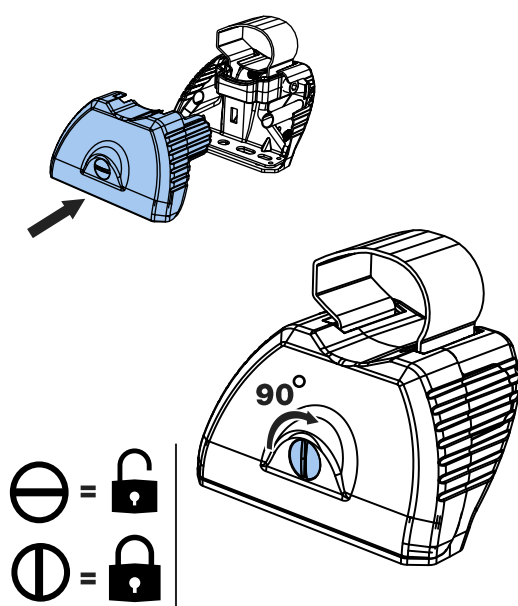


13.

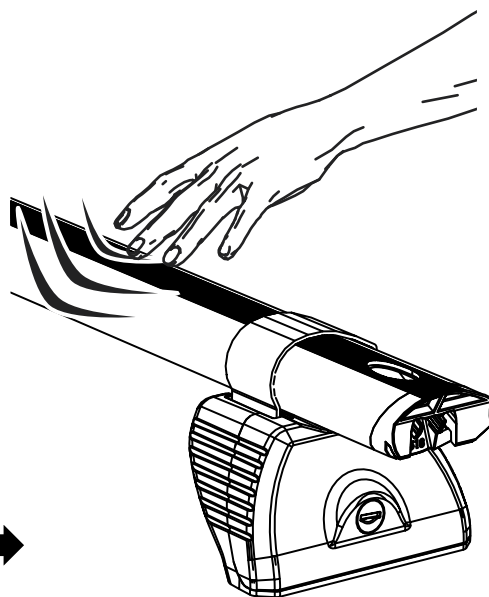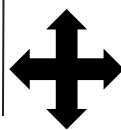


14.

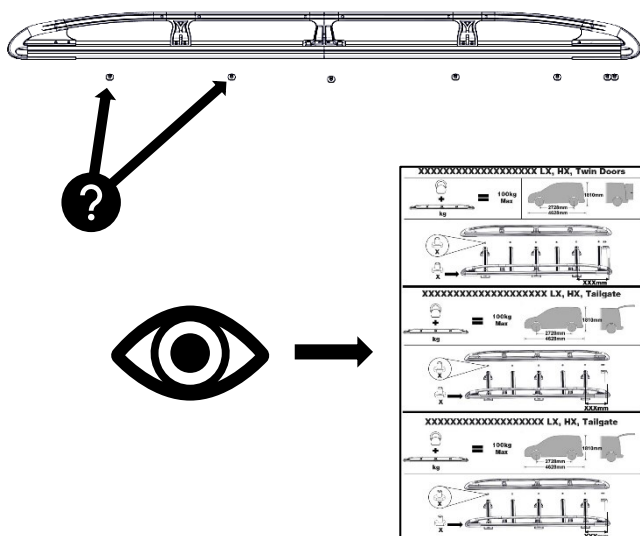


15.

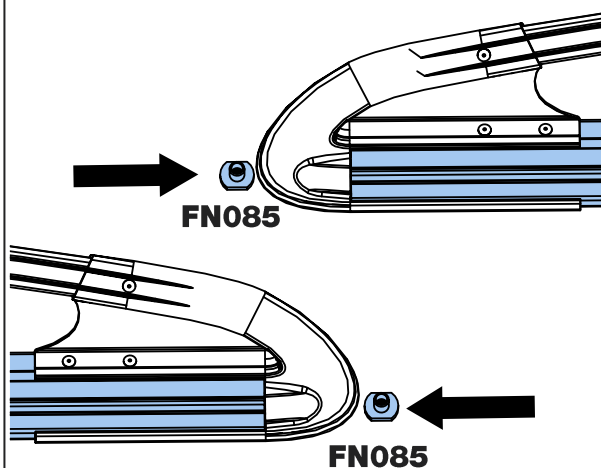


16.

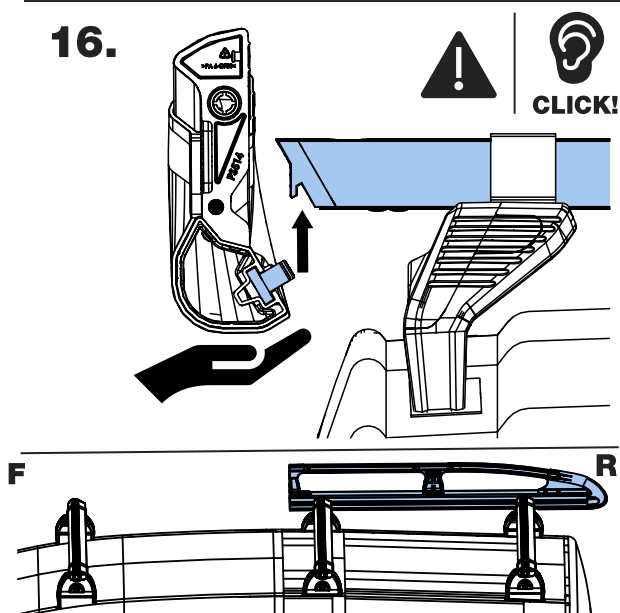


17.

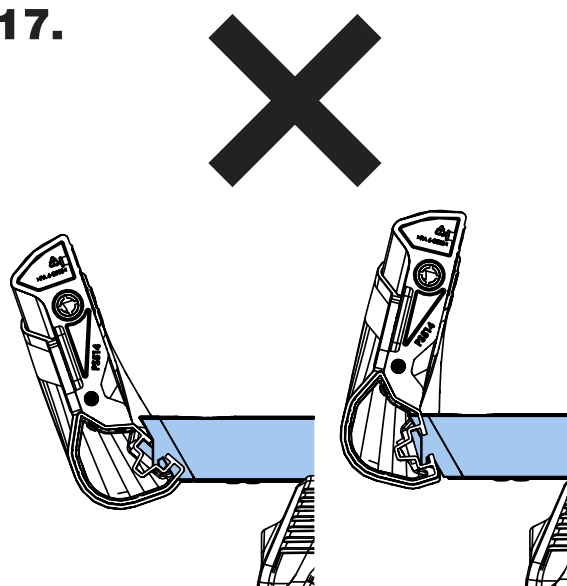


18.

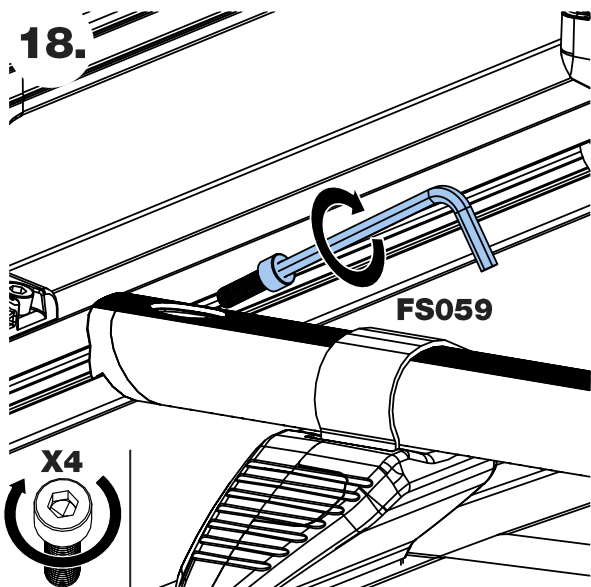


19.

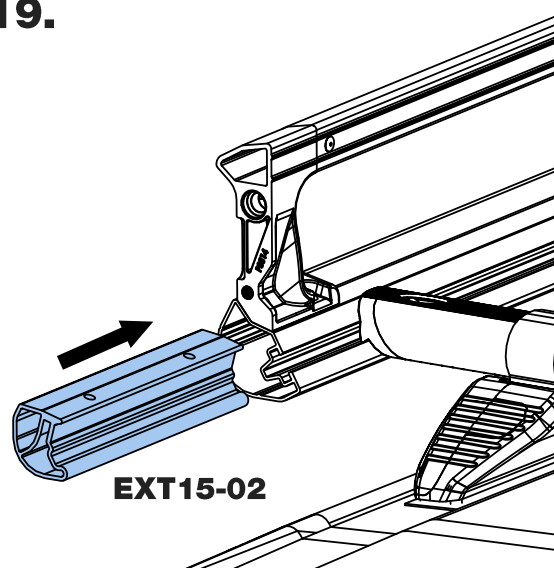


20.

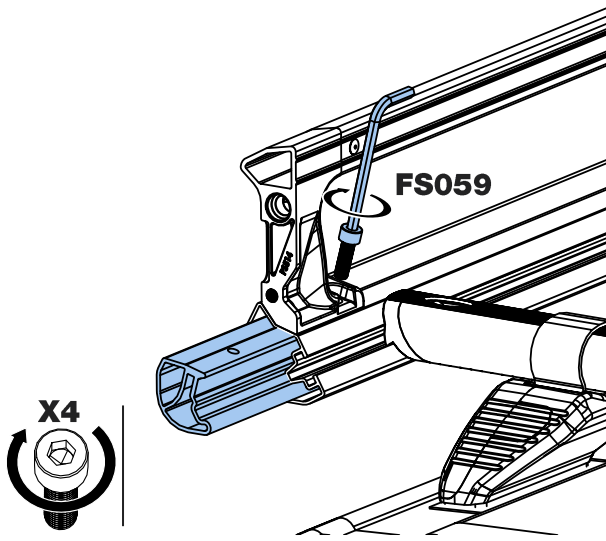


21.

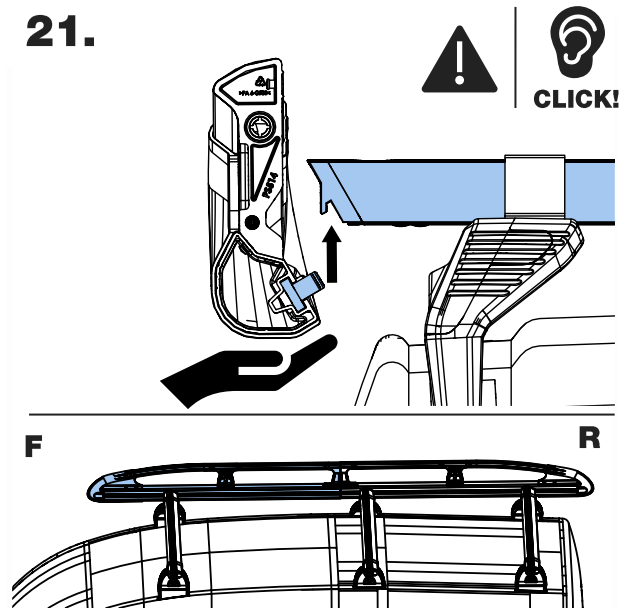


22.

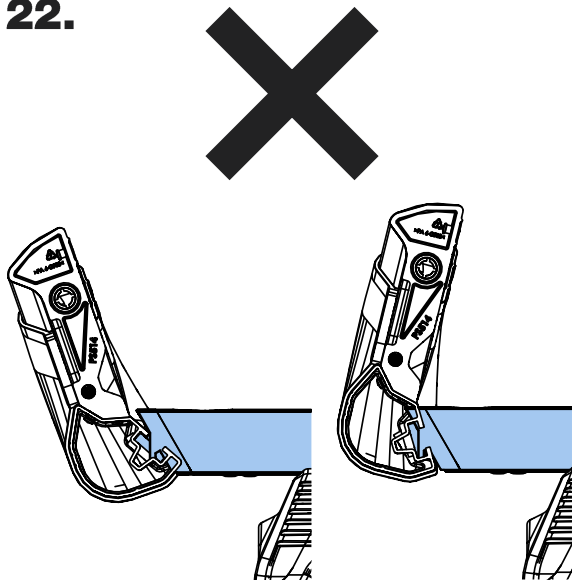


23.

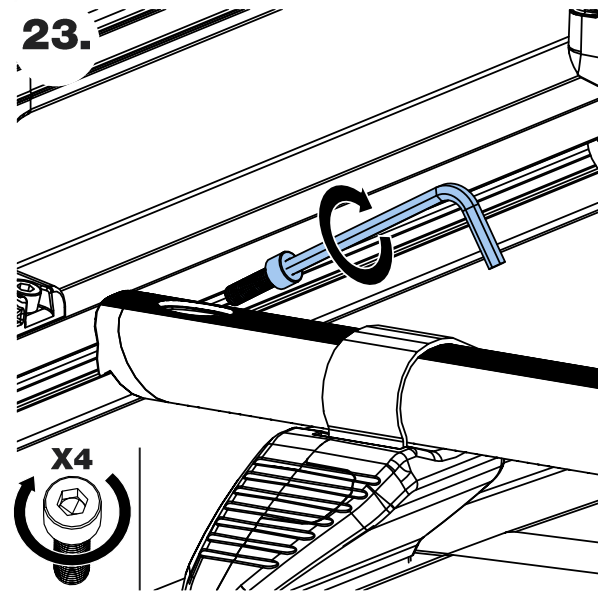


24.

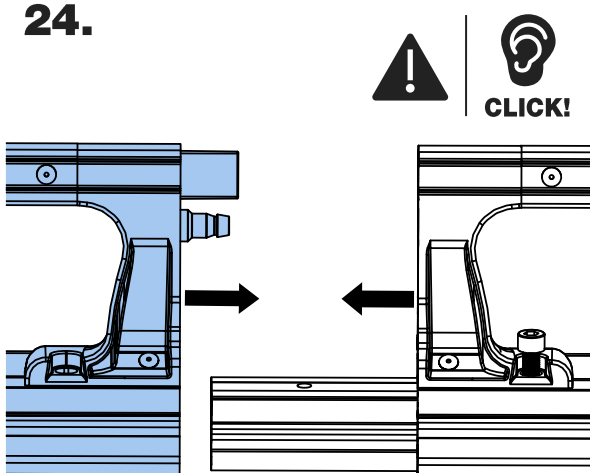



25.

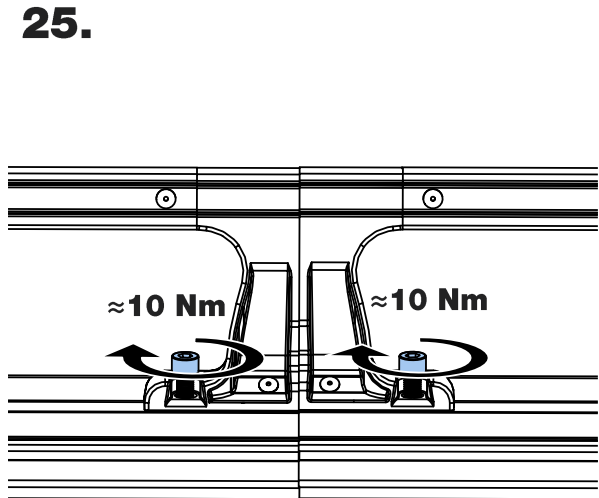



26.

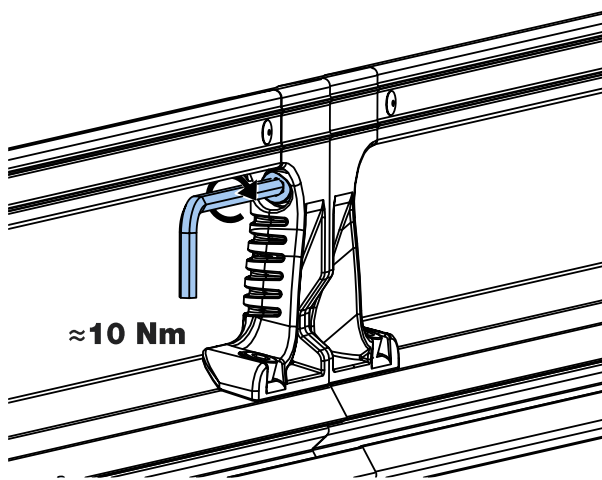


27.

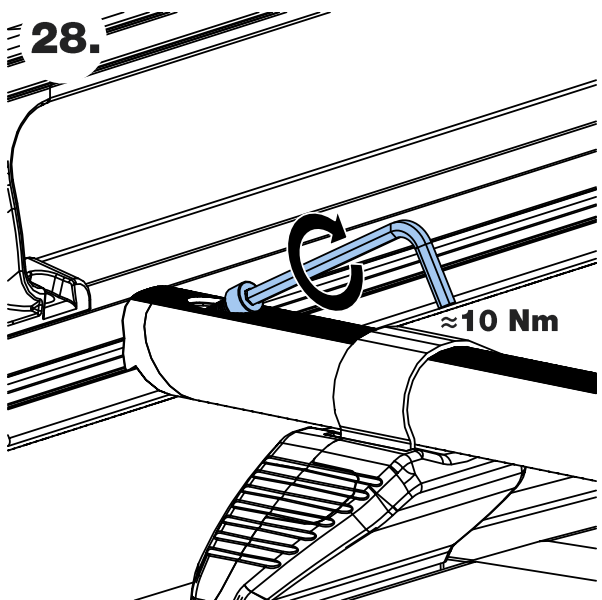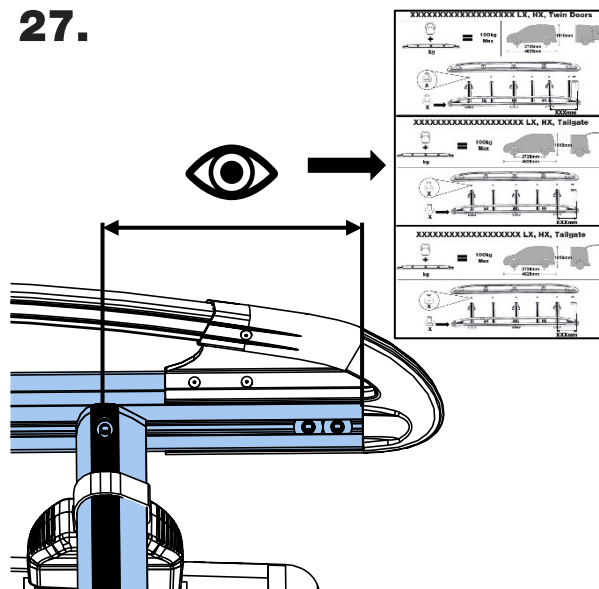


29.

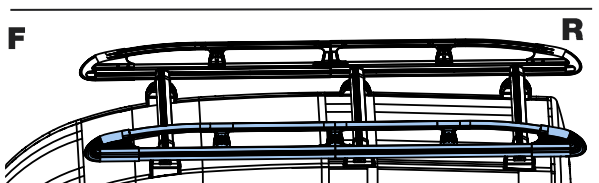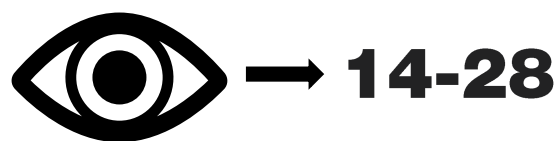


30.

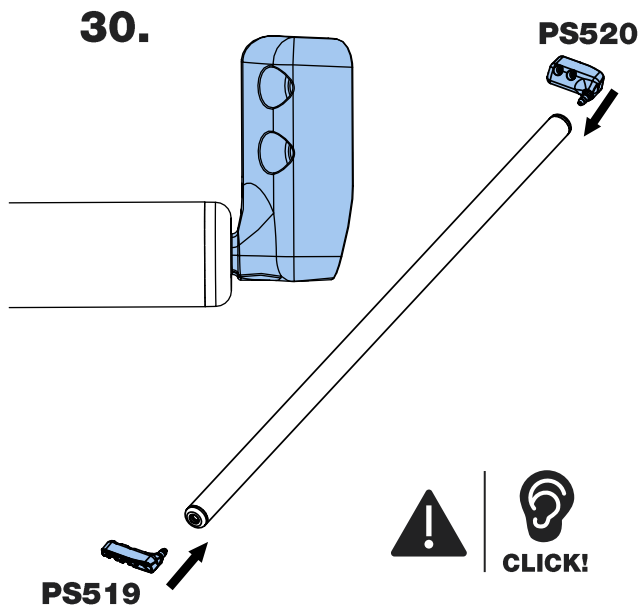


31.

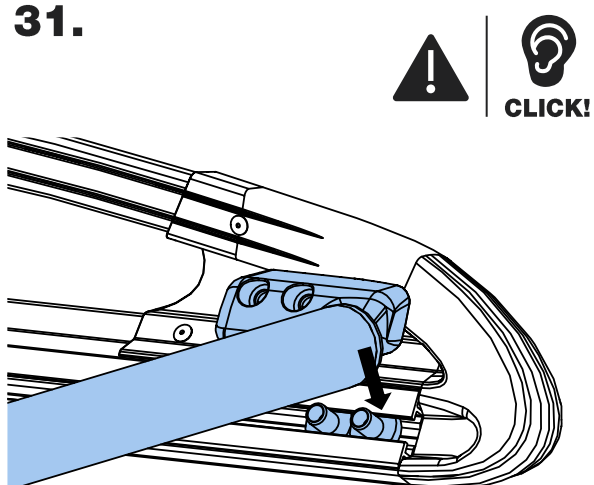


32.

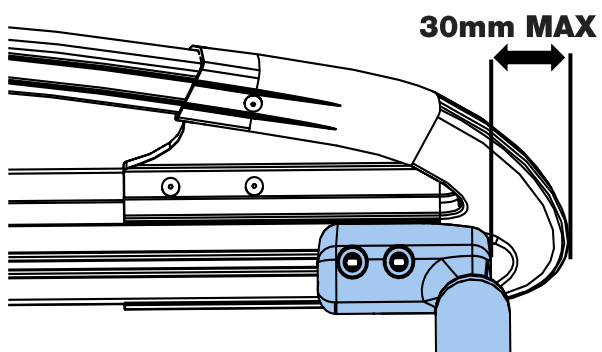


33.

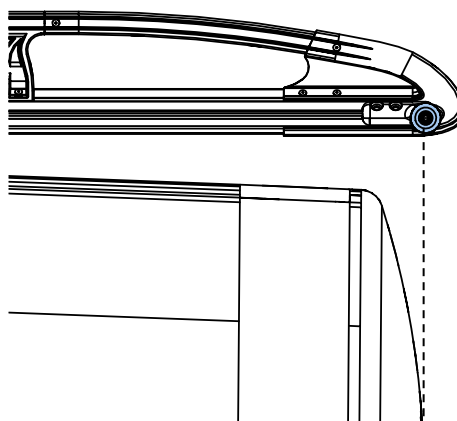


34.

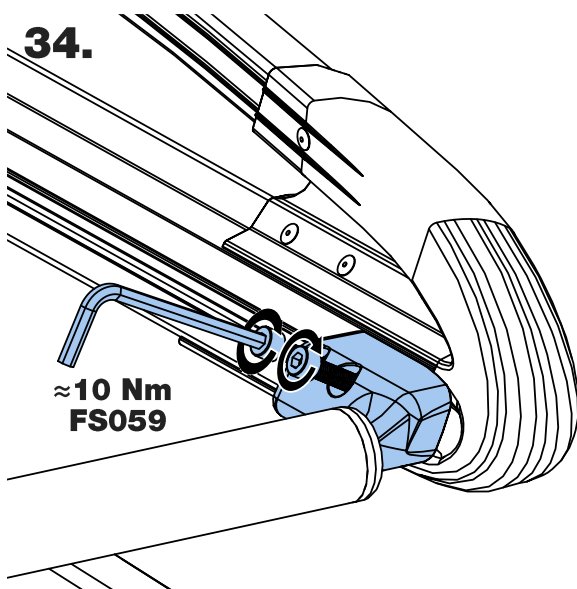


35.

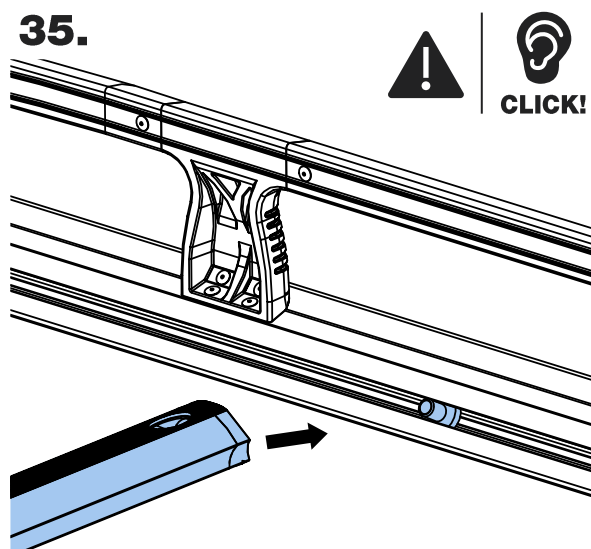


36.

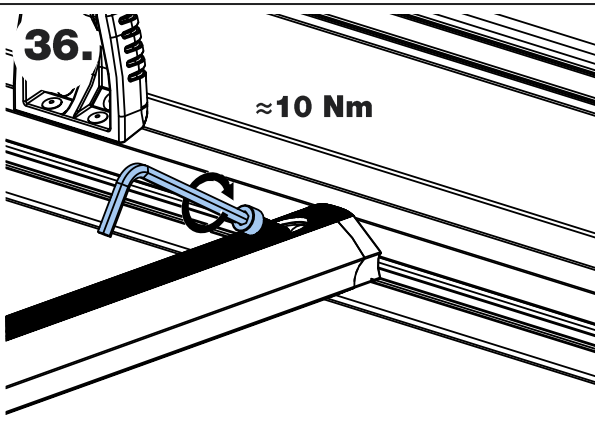

37.

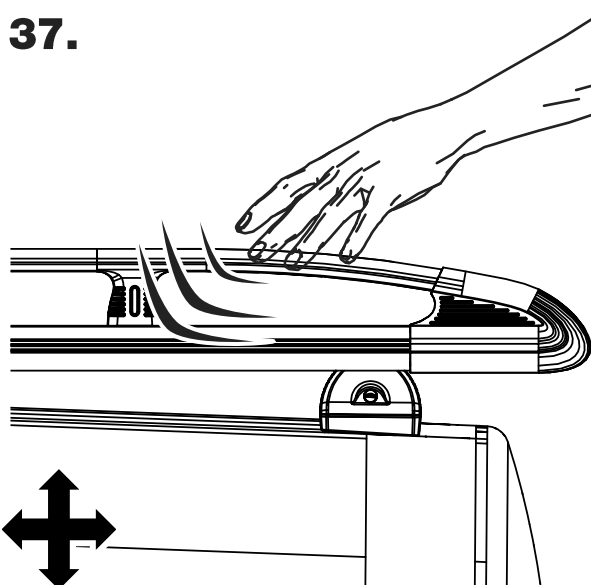

38.

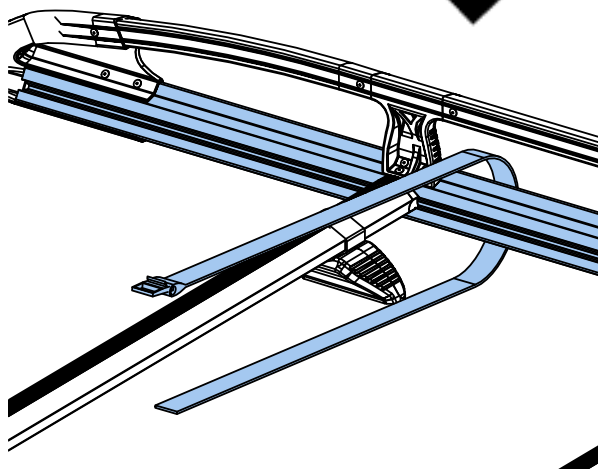

39.

