


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	SJ	KB	2758	02/08/22	First Issue
b	YZL	KB	2958	19/05/23	Replaced SA070 with KLS2
c					
d					
e					
f					
g					
h					
i					
j					
k					
l					
m					





JD3PR/FL KammBar

Instructions

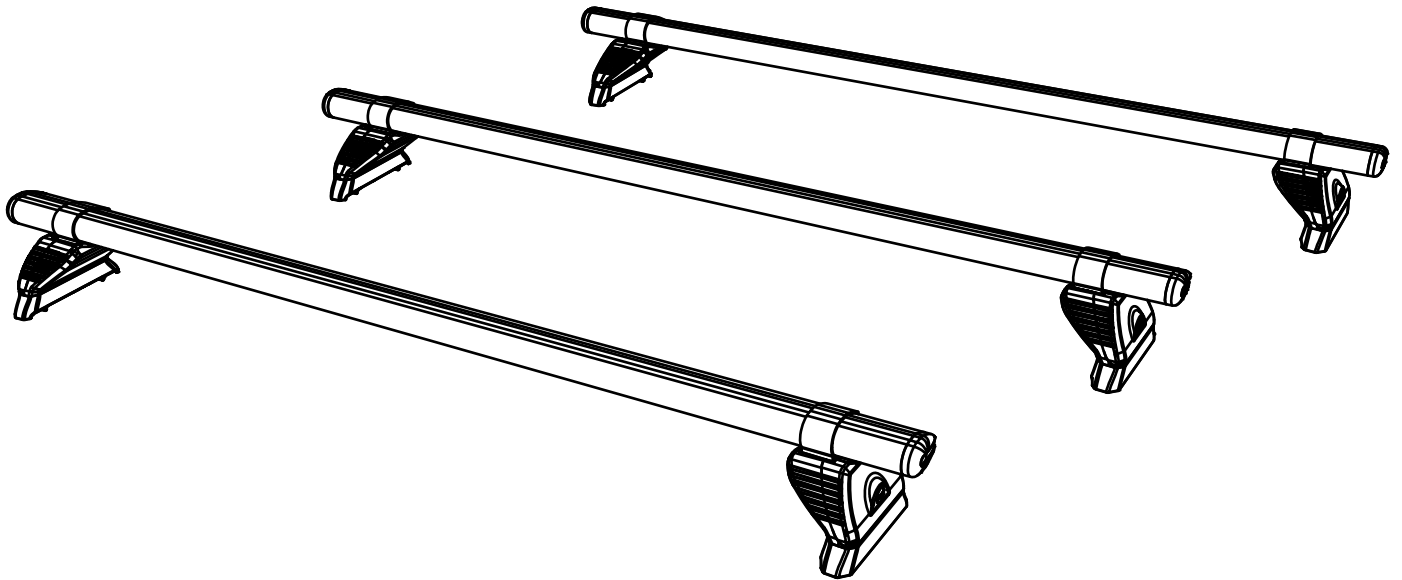

CITY CRASH (✓)


According to ISO/ PAS 11154:2006

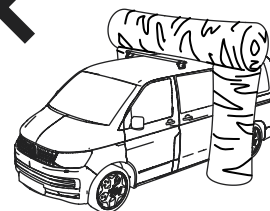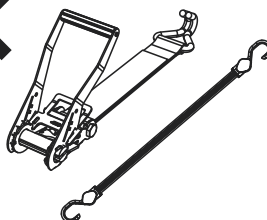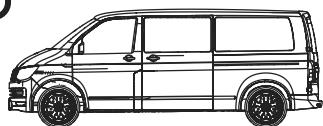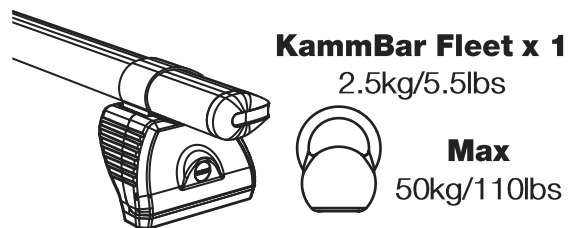


KammBar Pro




SA420 x 3 ☐

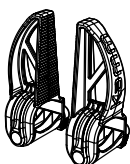

KLS2 x 1 ☐

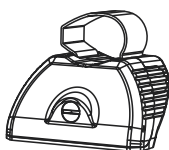


SA397 x 3 ☐

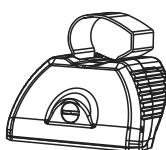


SA398 x 3 ☐


KammBar Fleet

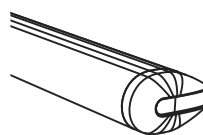


SA394 x 3 ☐



C04 x 3
optional upgrade

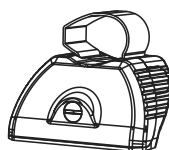

SA397 x 3 ☐

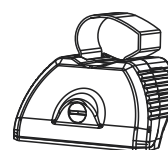


SA398 x 3 ☐


Fitting Kit




PS252 x 2 ☐




PS253 x 2 ☐




PS254L x 1 ☐



PS254R x 1 ☐

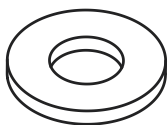


FW001 (M6) x 6

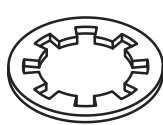


FW008 (M6) x 6




FN020 (M6) x 6




PS210 x 6



**FS042
(M6 x 40) x 2**



**FS040
(M6 x 35) x 2**




**FS039
(M6 x 30) x 2**




FT01 x 1 ☐

1.

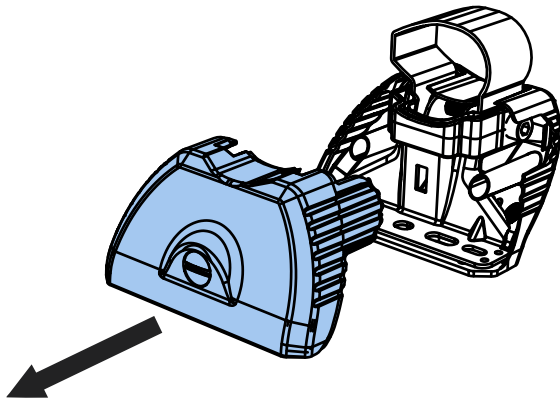

2.

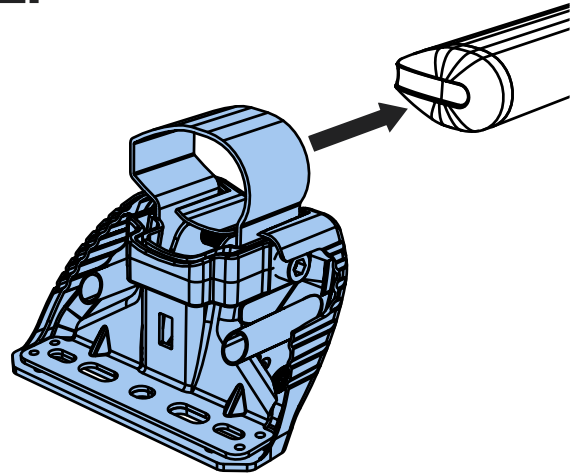

3.




SA397
PS254R



SA397
PS253



SA397
PS252

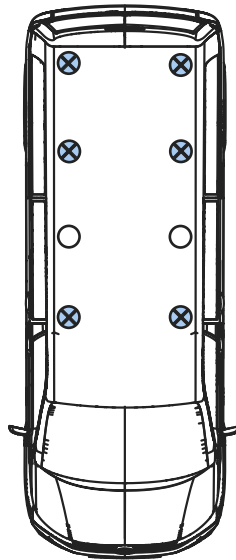

SA398
PS254L




SA398
PS253




SA398
PS252




4.

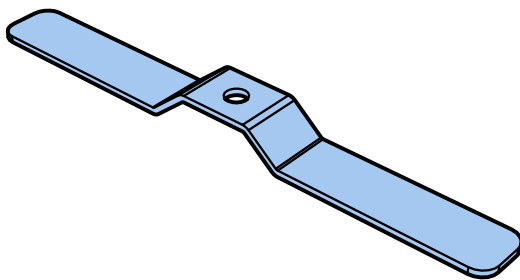


5.

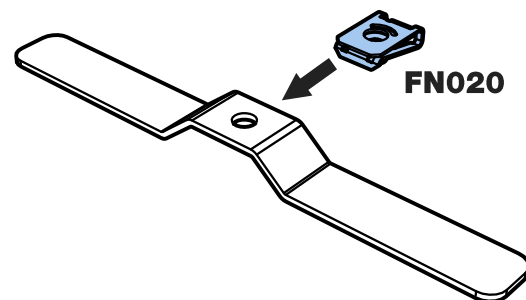


6.

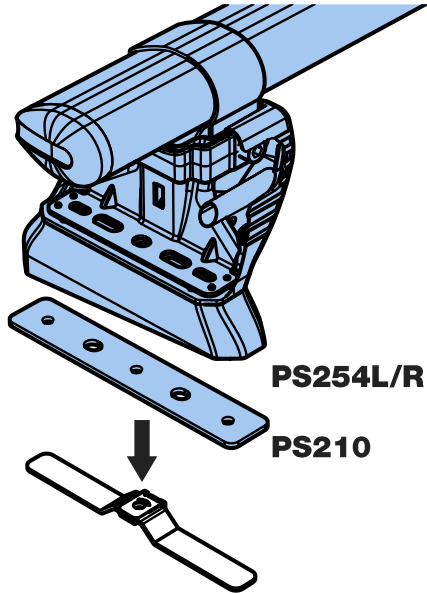


7.

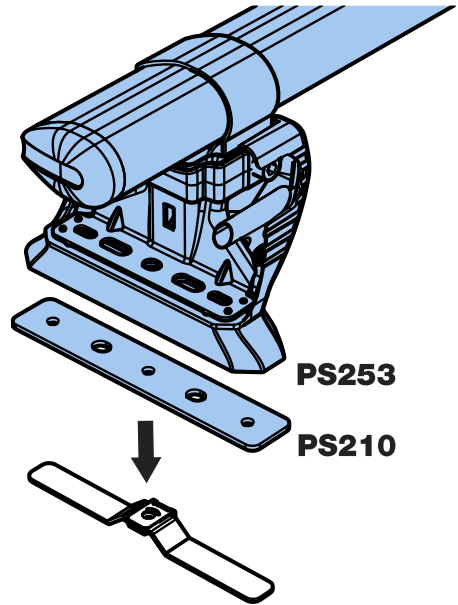


8.

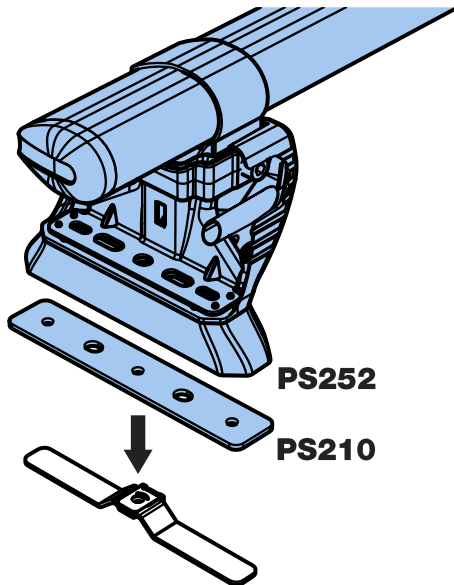


9.

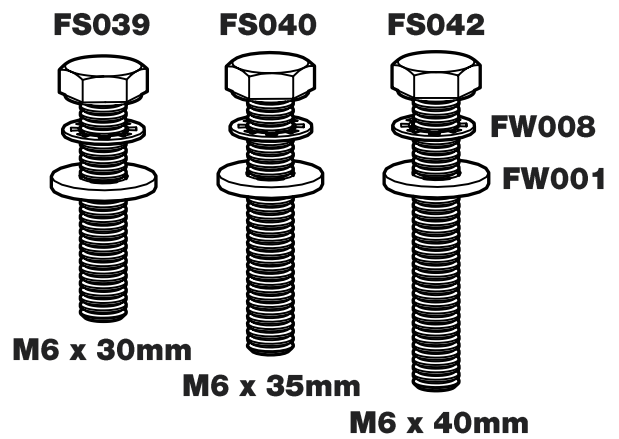


10.

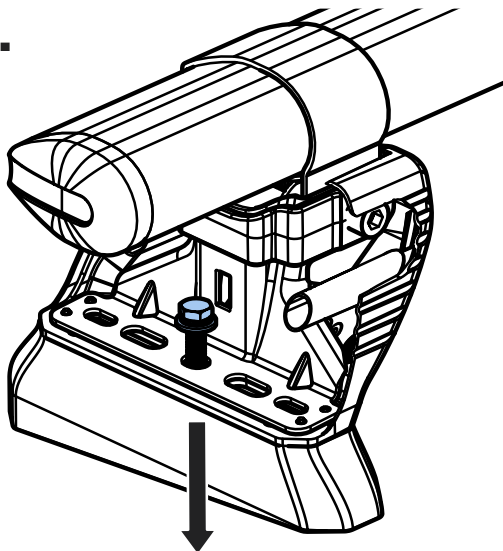

11.

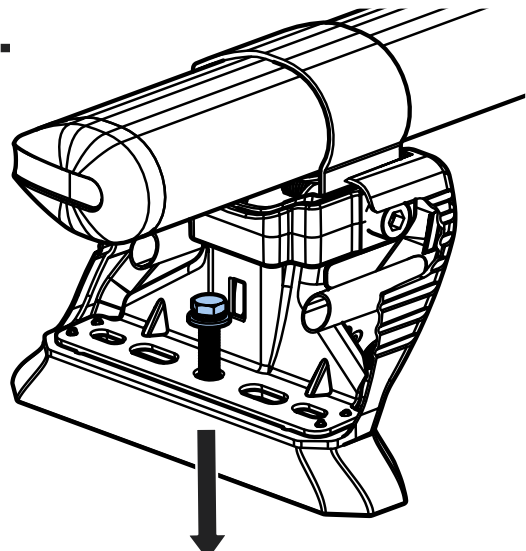


12.

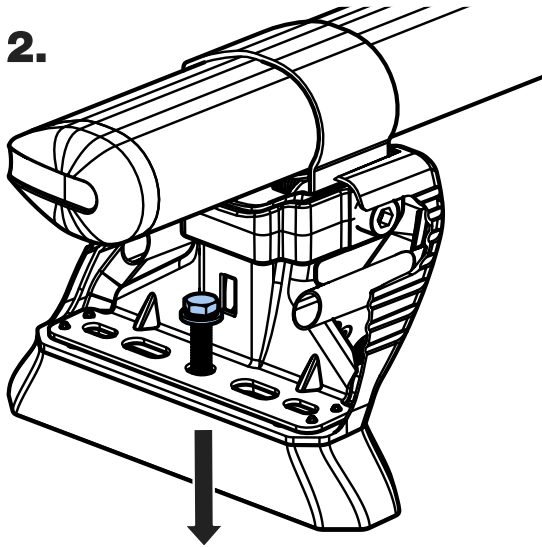


PS252 + M6 x 35mm


13.

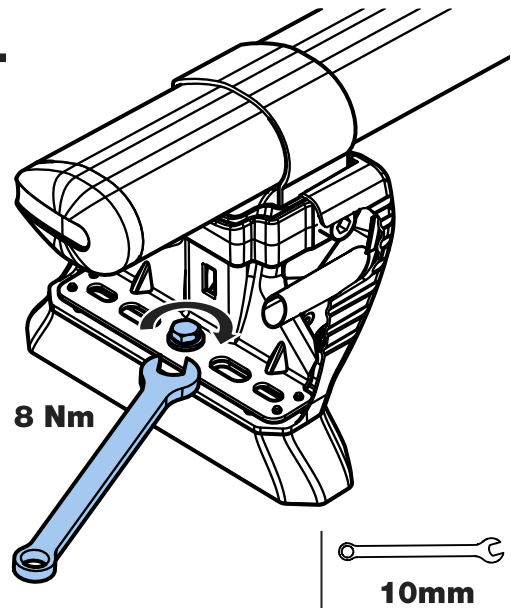


14.

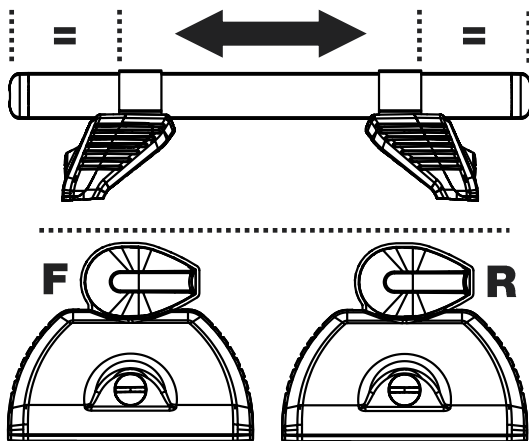

15.

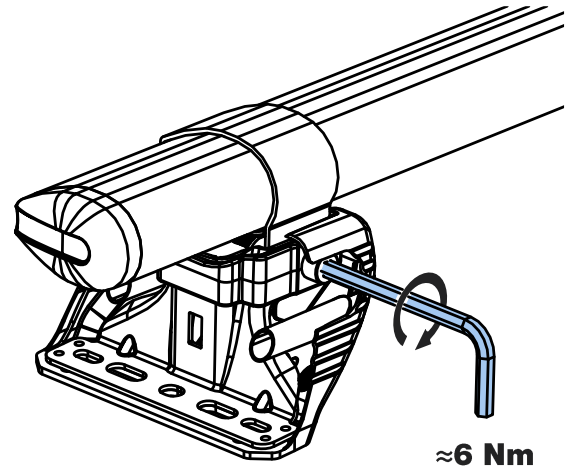

16.

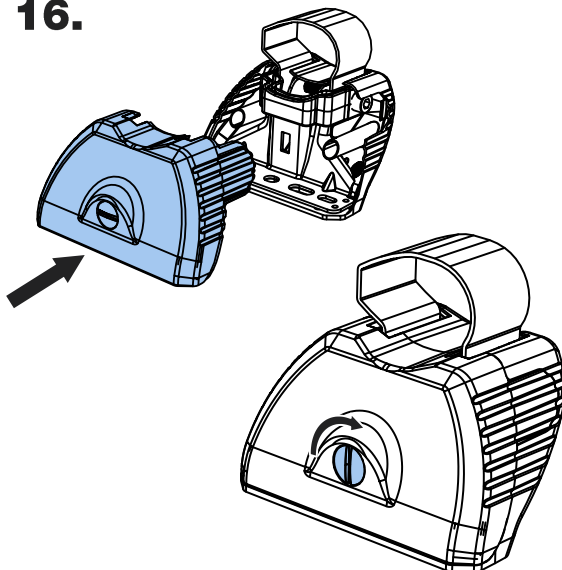

17.

