


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	SJ	KB	2758	02/08/22	First Issue
b	MK	KB	2950	10/05/23	Replaced SA393 with SA460 and replaced SA070 with KLS2
c					
d					
e					
f					
g					
h					
i					
j					
k					
l					
m					

KB3PR/FL





KammBar

Instructions

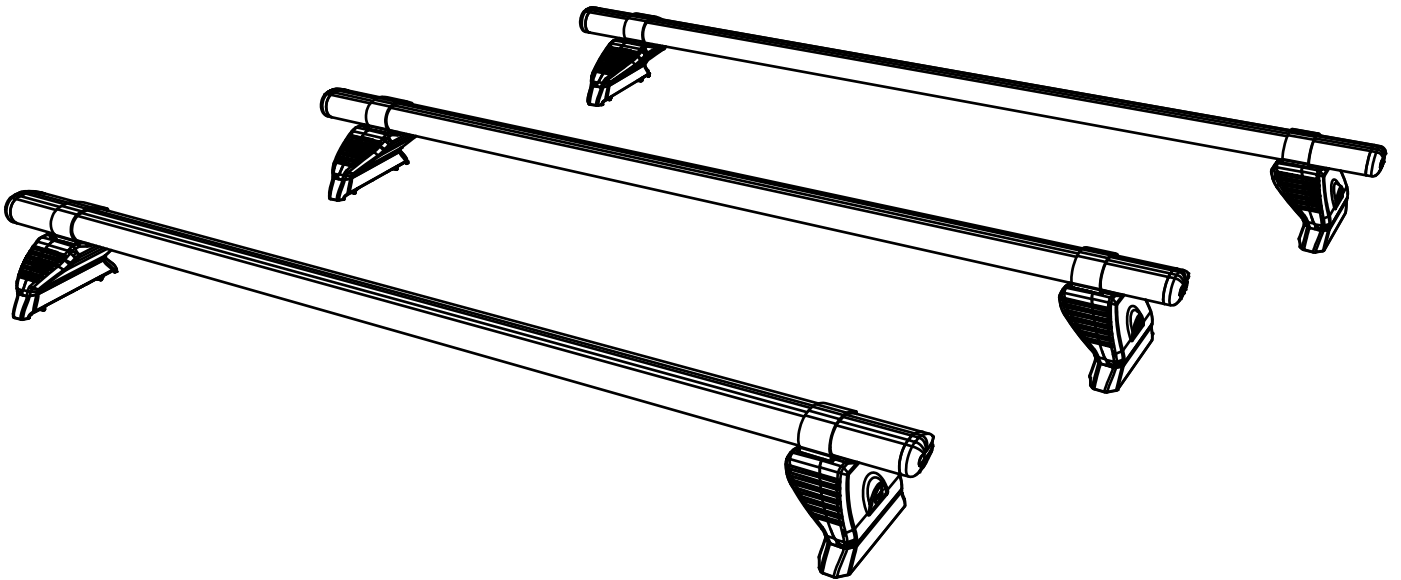

CITY CRASH (✓)


According to ISO/ PAS 11154:2006

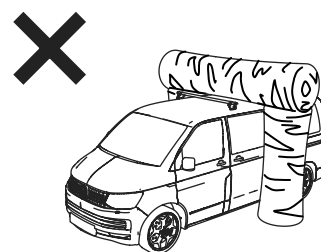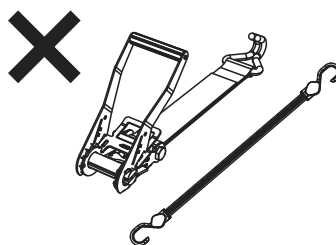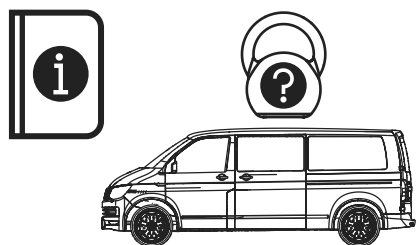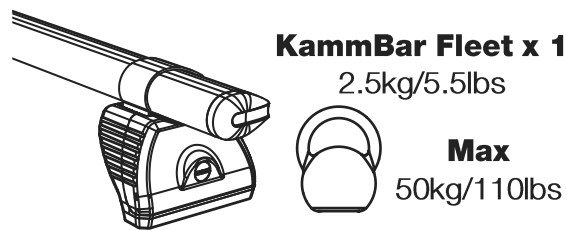


KammBar Pro




SA419 x 3 ☐

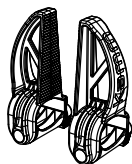

KLS2 x 1 ☐

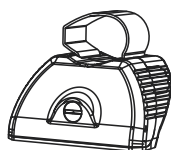


SA397 x 3 ☐

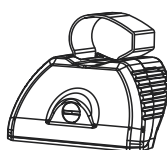


SA398 x 3 ☐


KammBar Fleet

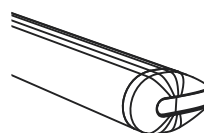


SA460 x 3 ☐



C04 x 3
optional upgrade

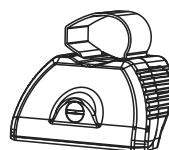


SA397 x 3 ☐

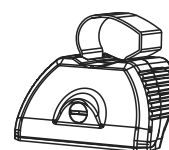


SA398 x 3 ☐


Fitting Kit



PS176 x 4 ☐




PS178 x 2 ☐




PS023 x 6 ☐




FT01 x 1 ☐

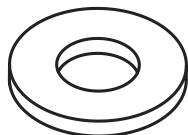


FW002 (M8) x 6

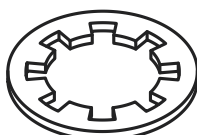


FW009 (M8) x 6

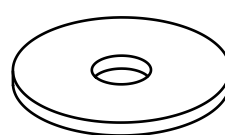


PS208 (M8) x 6

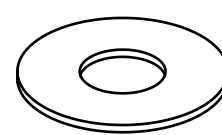


PS153 (M8) x 6

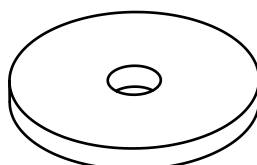

PS260 (M8) x 6




**FS081
(M8 x 50)
x 4** ☐




**FS061
(M8 x 35)
x 2** ☐


1.

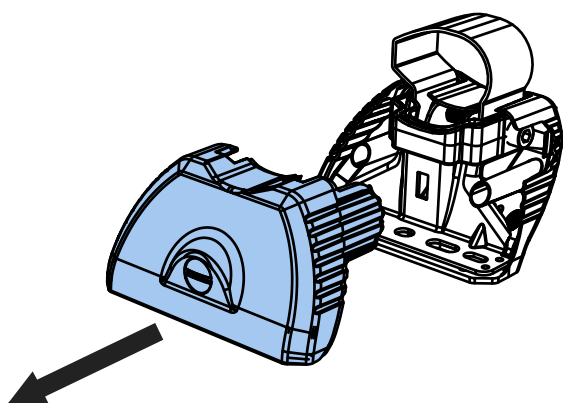

2.

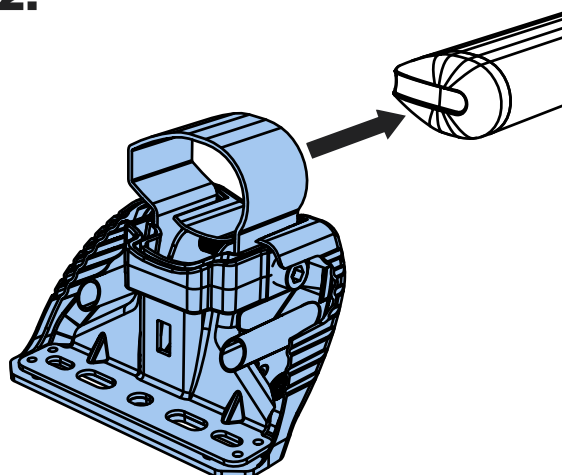


3.




SA397

PS176




SA397

PS178




SA397

PS176

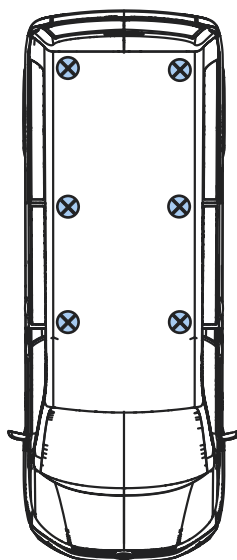


SA398

PS176




SA398

PS178



SA398


PS176




4.


MODEL	PS153	PS260
Kangoo	✓	✗
NV200	✗	✗
Citan	✓	✗
Caddy Maxi	✗	✓

5.

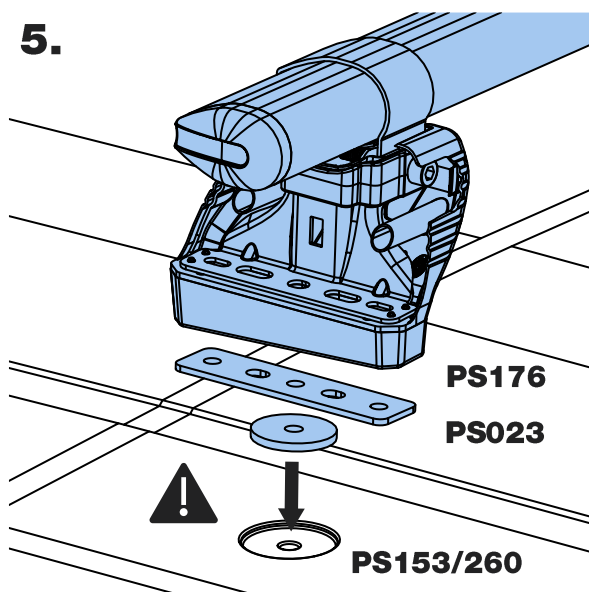


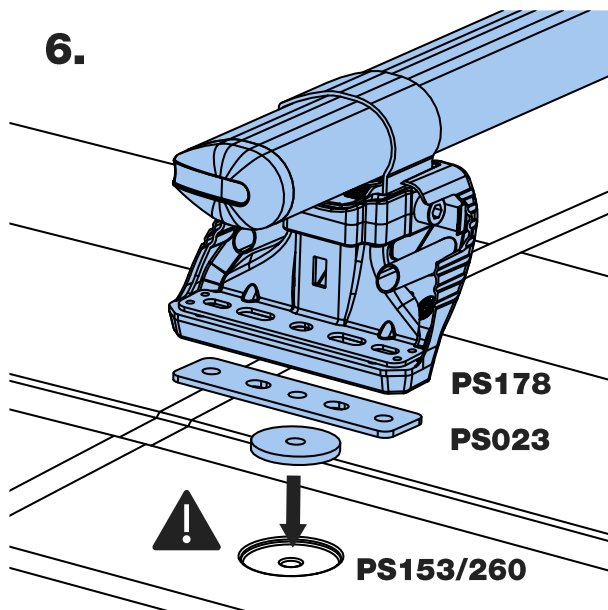


7.

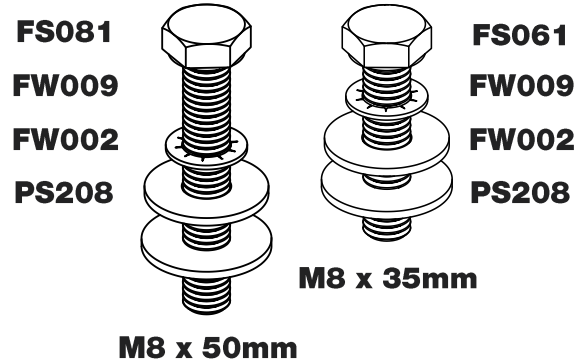



8.

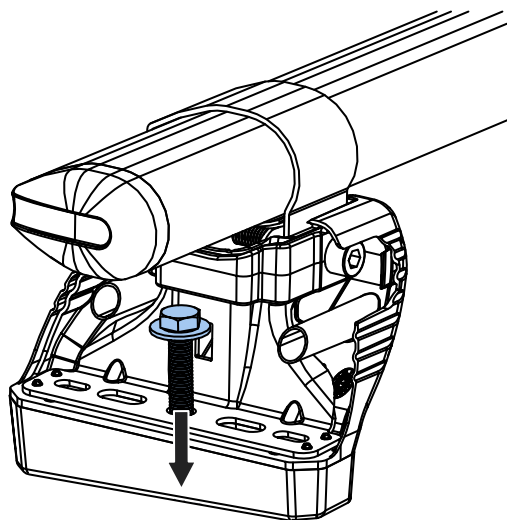


9.

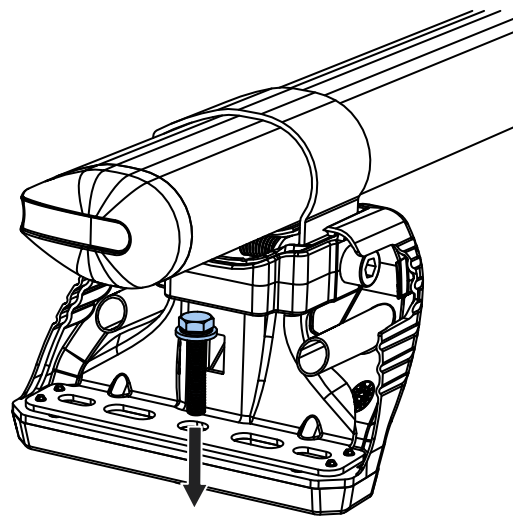


10.

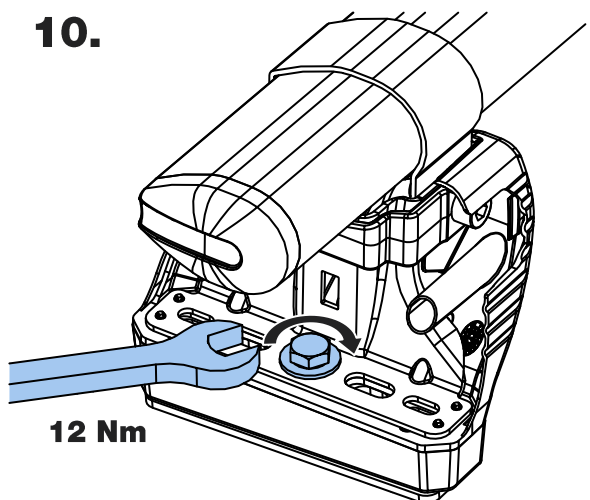


11.

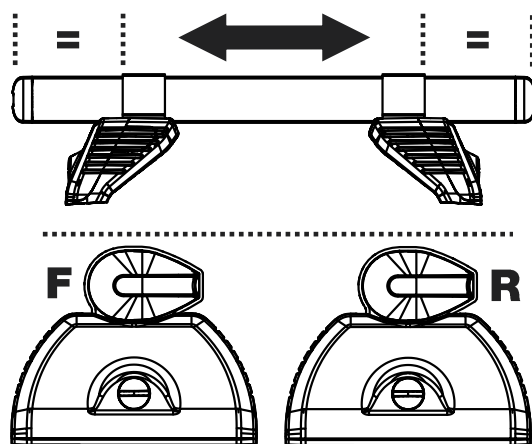


12.

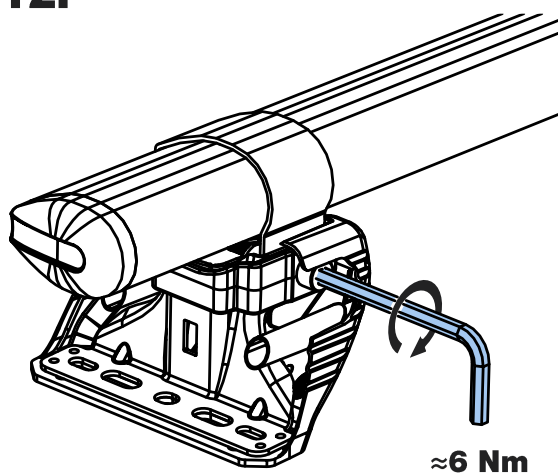

13.

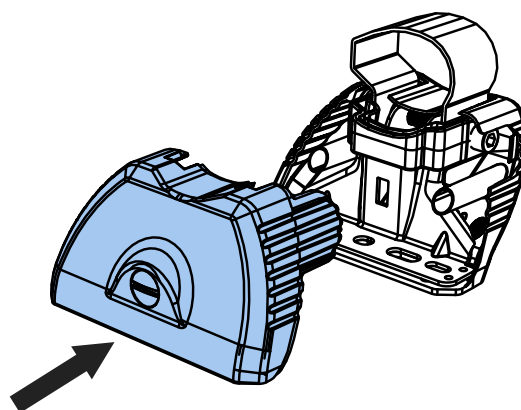

14.

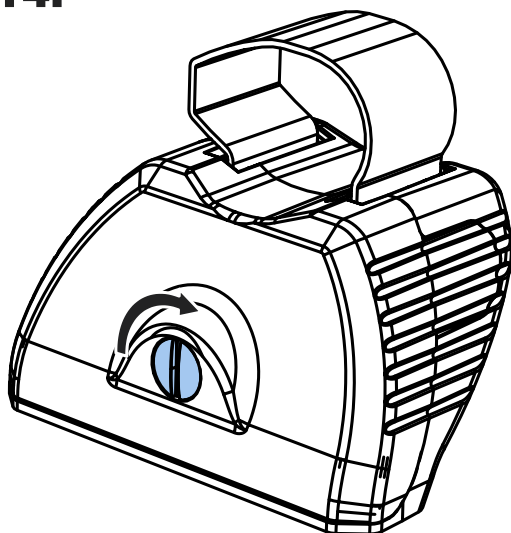

15.

