


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	SJ	KB	2758	02/08/22	First Issue
b	YZL	KB	2958	22/05/23	Replaced SA070 with KLS2
c					
d					
e					
f					
g					
h					
i					
j					
k					
l					
m					

KD2PR/FL






KammBar

Instructions

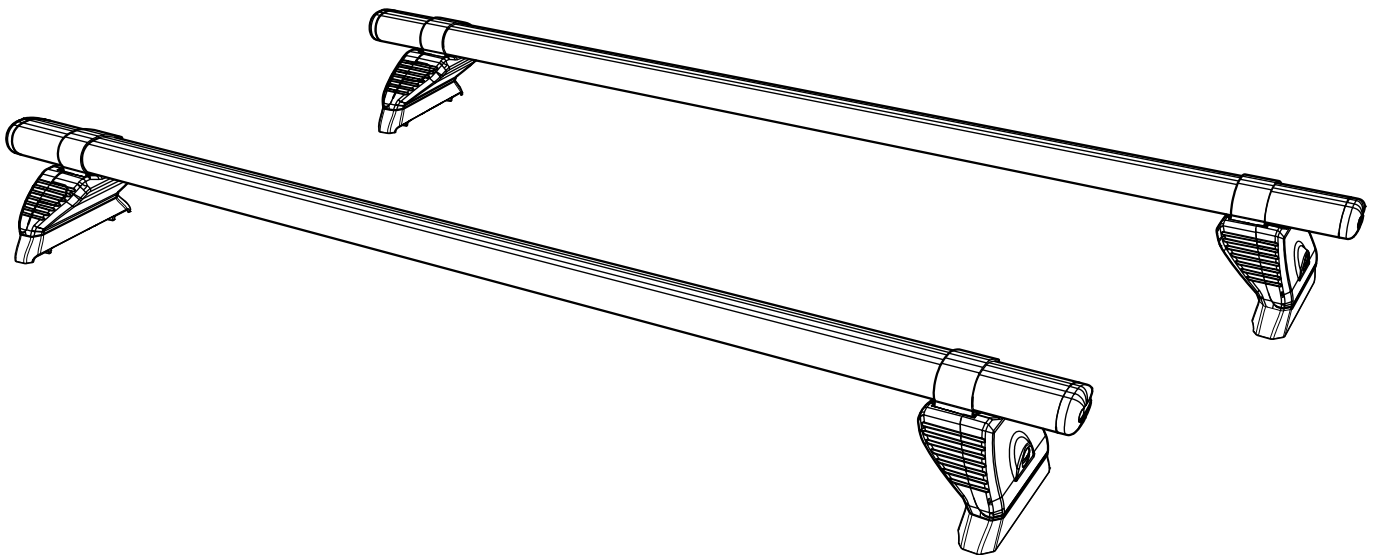


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

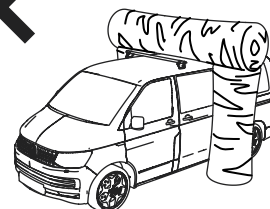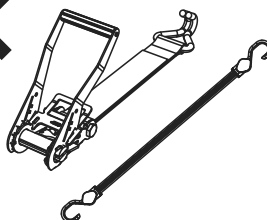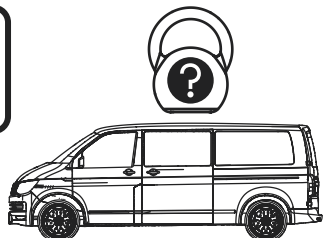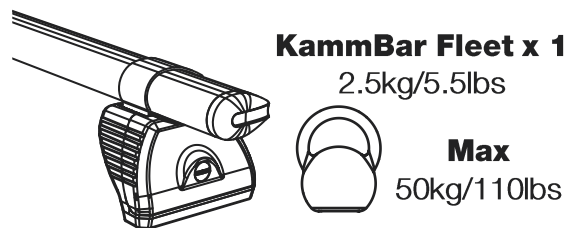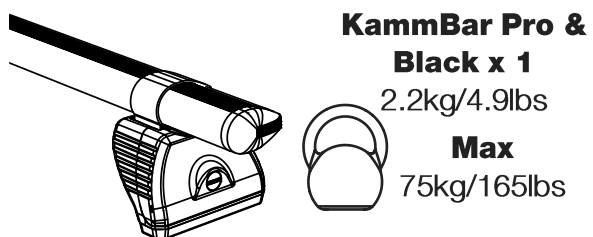


KammBar Pro & Black

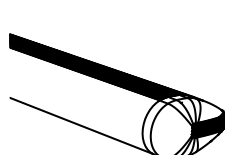


**SA419/
SA536 x 2** ☐

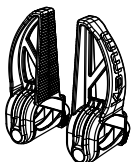

KLS2 x 1 ☐

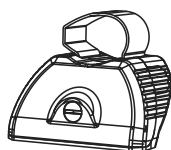


SA397 x 2 ☐

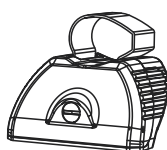


SA398 x 2 ☐


KammBar Fleet

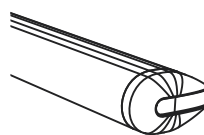


SA393 x 2 ☐



C04 x 2
optional upgrade

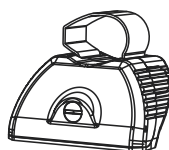


SA397 x 2 ☐

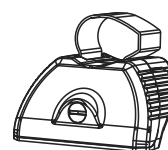

SA398 x 2 ☐


Fitting Kit




PS176 x 4 ☐




FT01 x 1 ☐




PS319 x 4 ☐




**FS081
(M8 x 50)
x 4** ☐

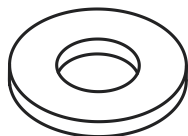

FW002 (M8) x 4

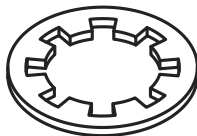


FW009 (M8) x 4

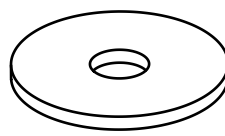


PS208 (M8) x 4




1.

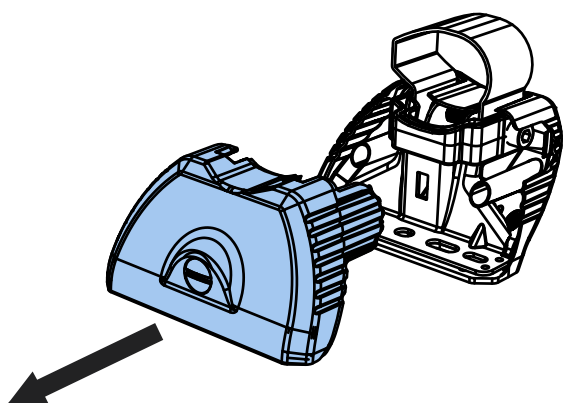

2.

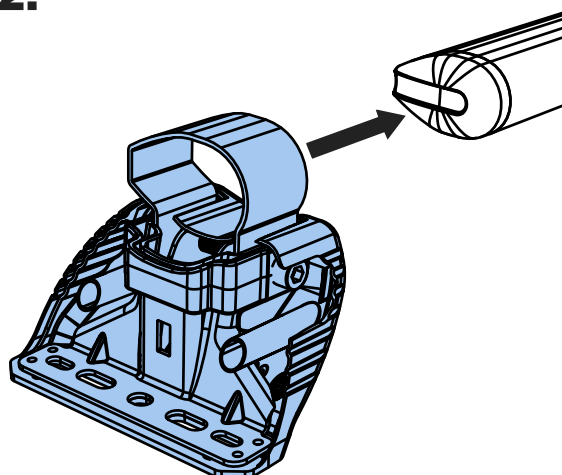

3.





SA397

PS176

SA398

PS176





SA397


PS176

SA398


PS176

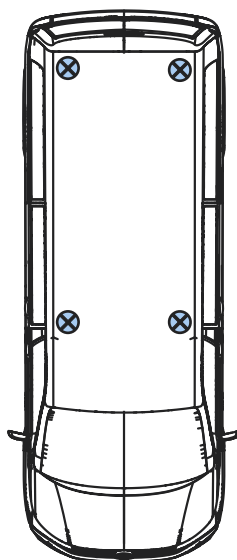

4.

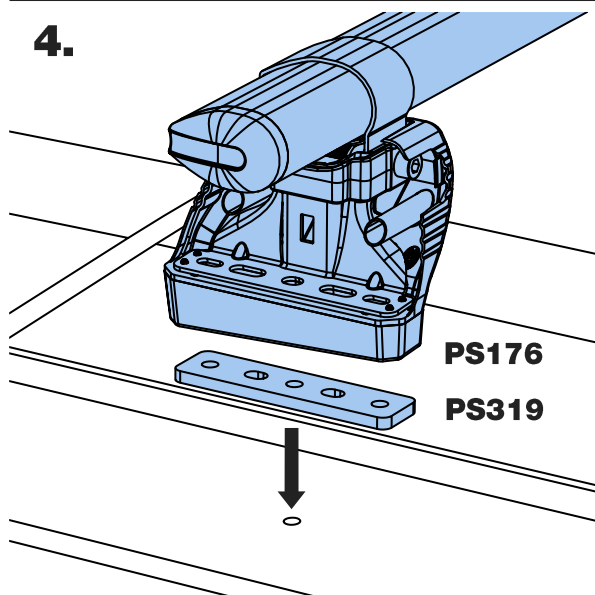

5.

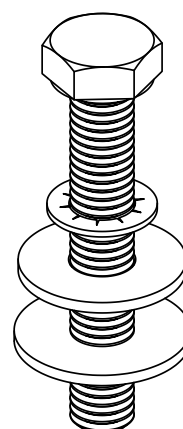

FS081


FW009

FW002

PS208


M8 x 50mm

6.

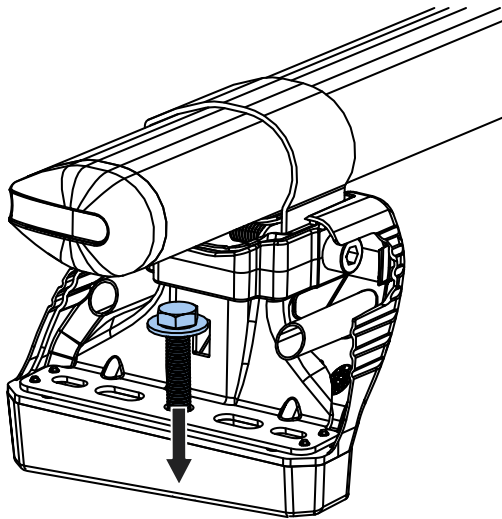


PS176 + M8 x 50mm

7.

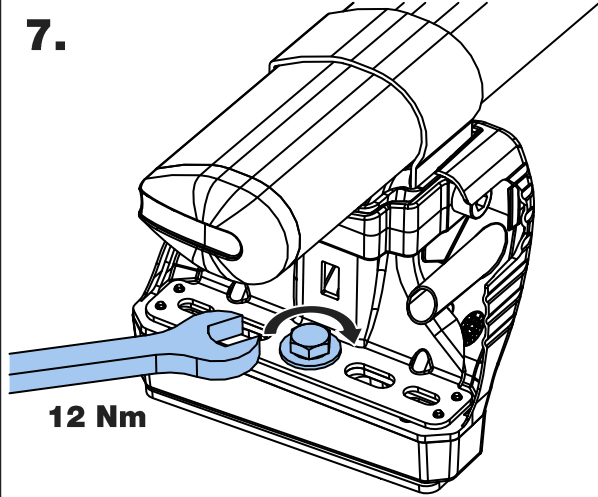


12 Nm




13mm

8.

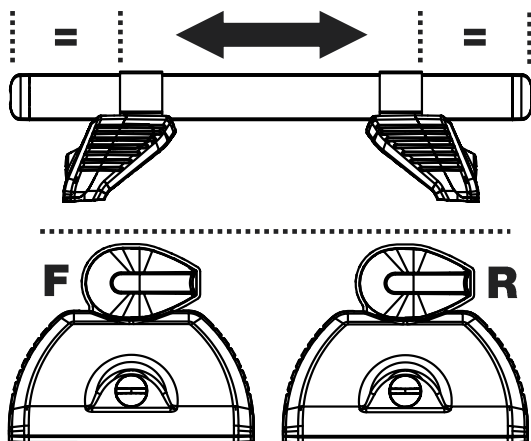


9.

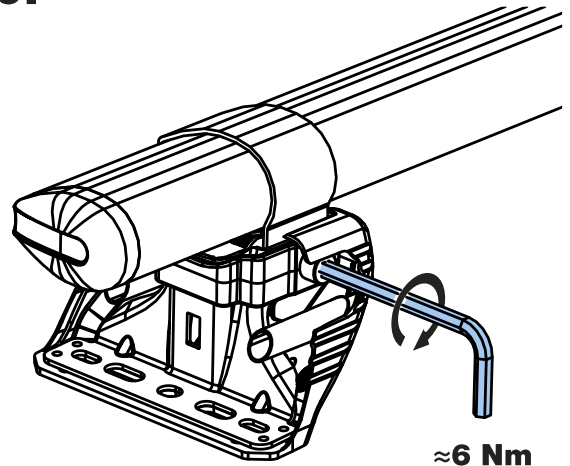

≈6 Nm

10.

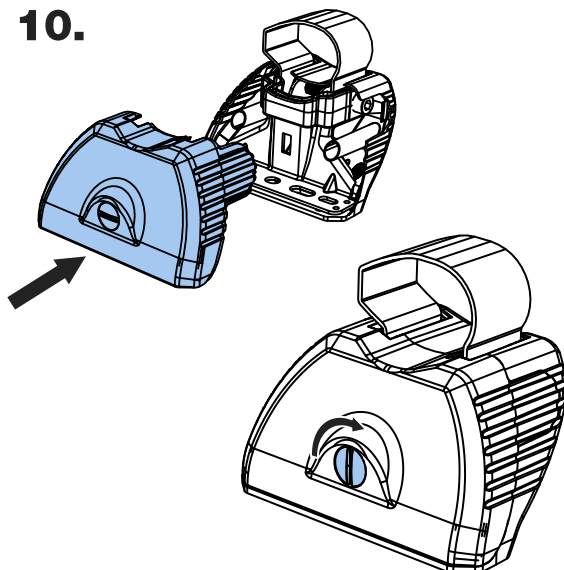

11.

