


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	SJ	KB	2758	02/08/22	First Issue
b	SJ	KB	2781	16/08/22	Updated bar SA codes
c	SJ	KB	2861	08/12/22	Added instructions for raised leg
d	YZL	KB	2958	22/05/23	Replaced SA070 with KLS2
e					
f					
g					
h					
i					
j					
k					
l					
m					





MC3PR/FL KammBar

Instructions


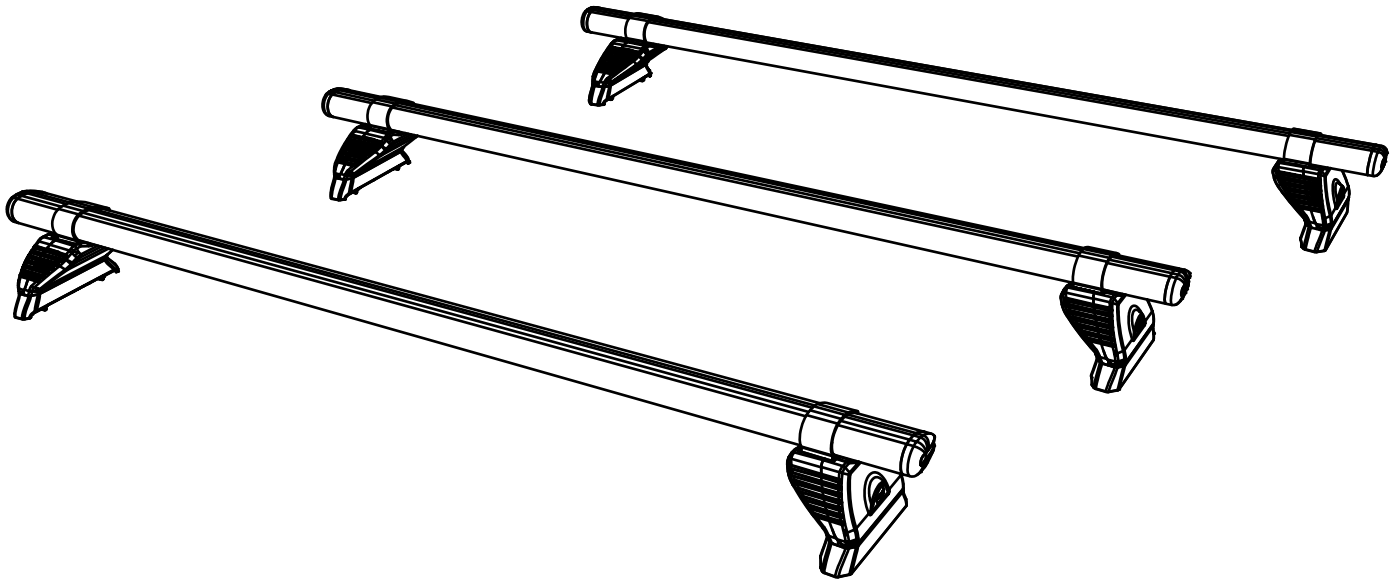


CITY CRASH (✓)



According to ISO/ PAS 11154:2006

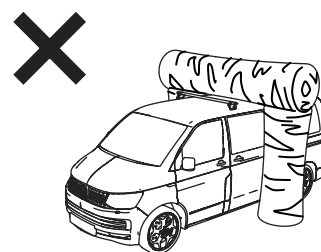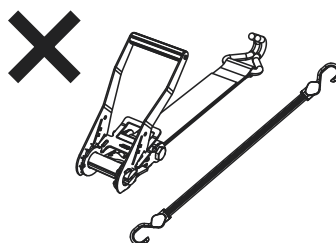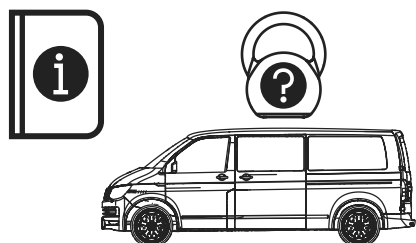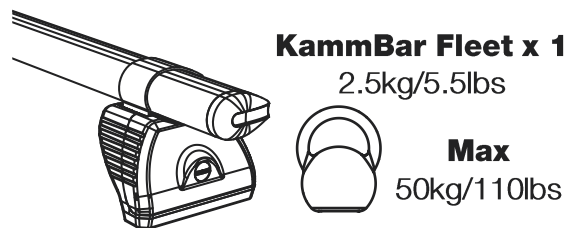


KammBar Pro

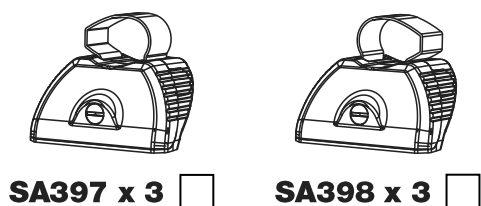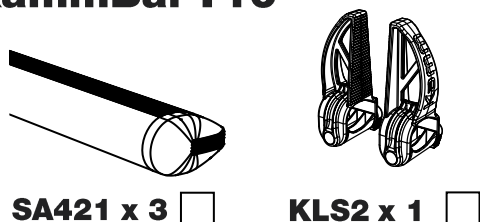


KammBar Fleet

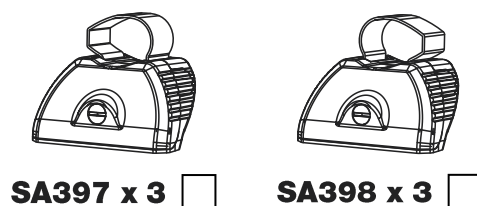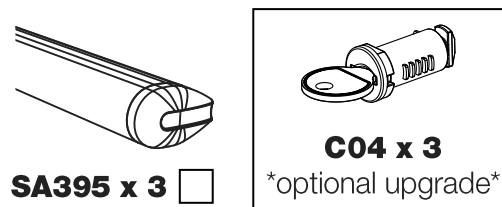


Fitting Kit

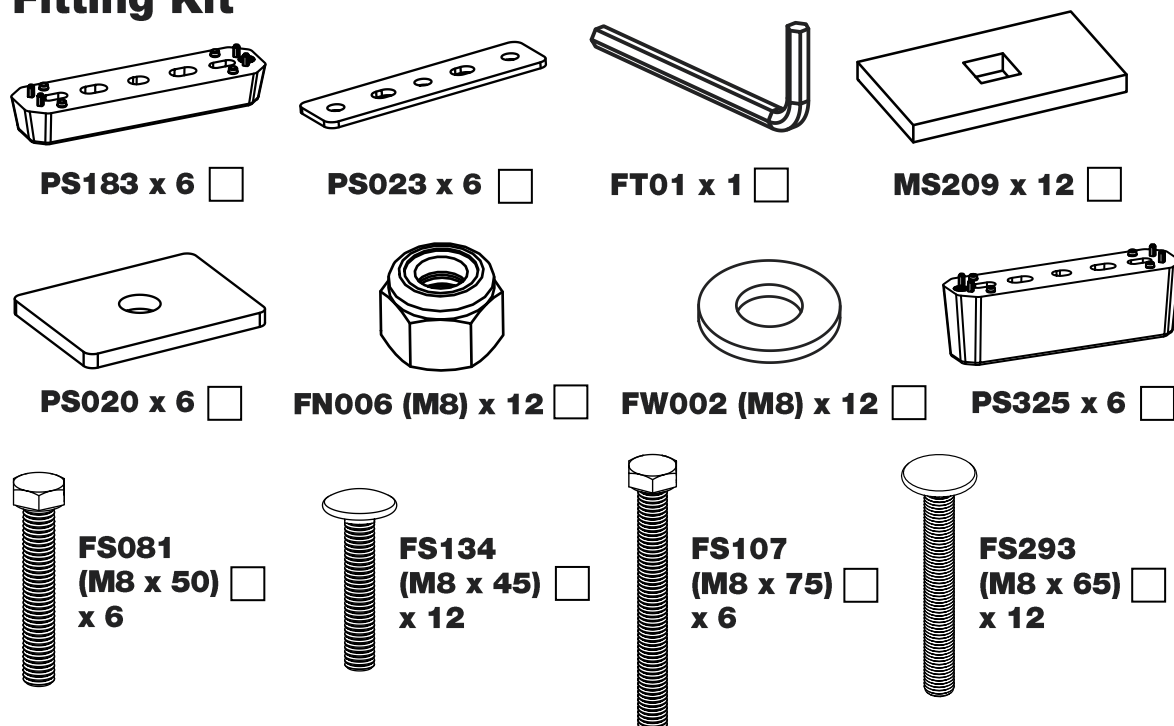


1.

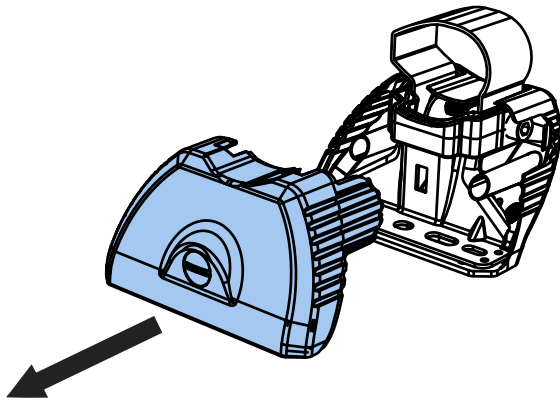

2.

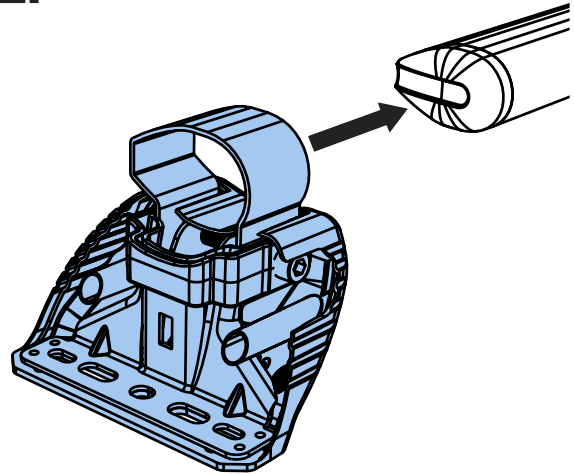


3.

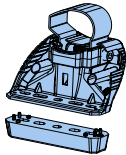


SA397

PS183/PS325

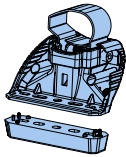


SA397

PS183/PS325

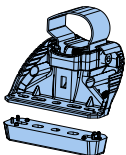


SA397

PS183/PS325

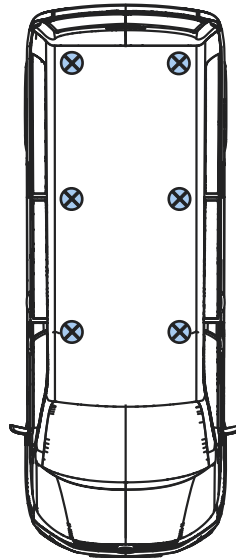


SA398

PS183/PS325

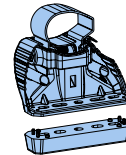


SA398

PS183/PS325

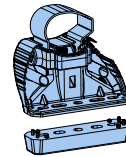


SA398


PS183/PS325

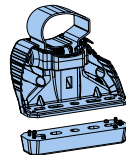


4.




PS325 = KK099






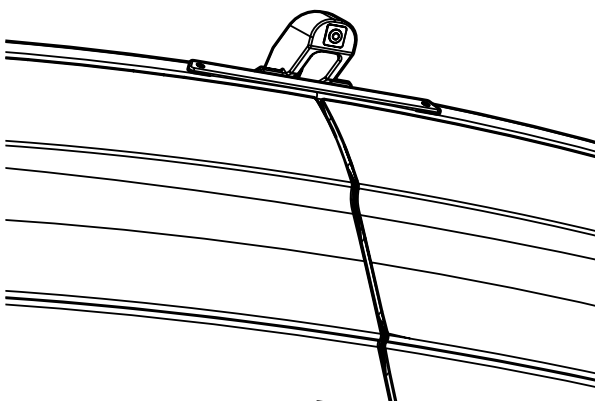


5.





PS183 = KK076

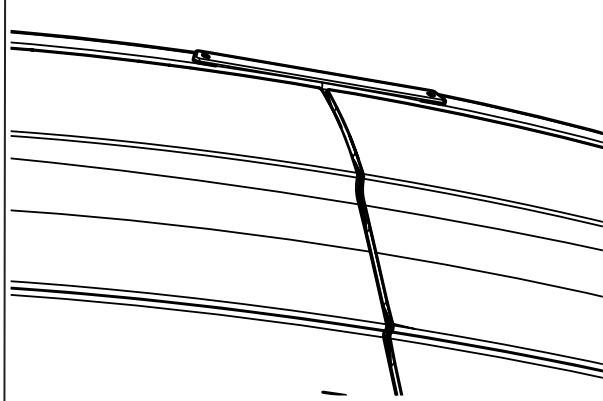


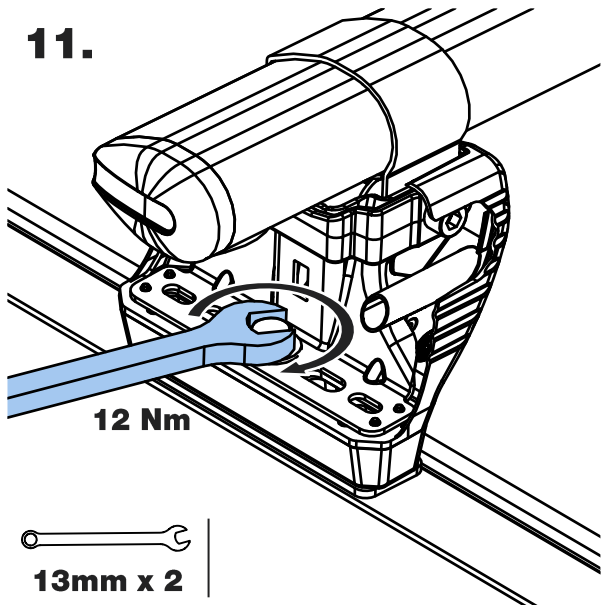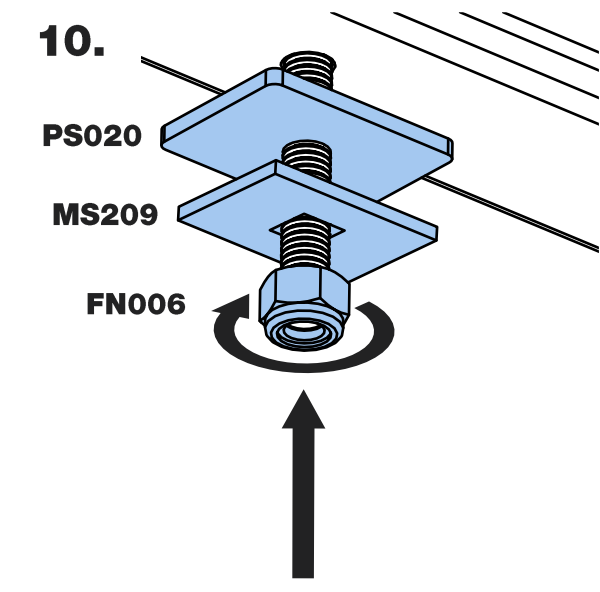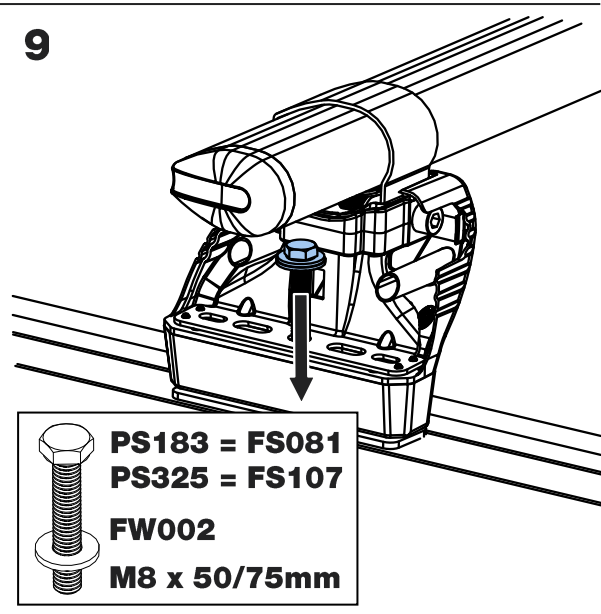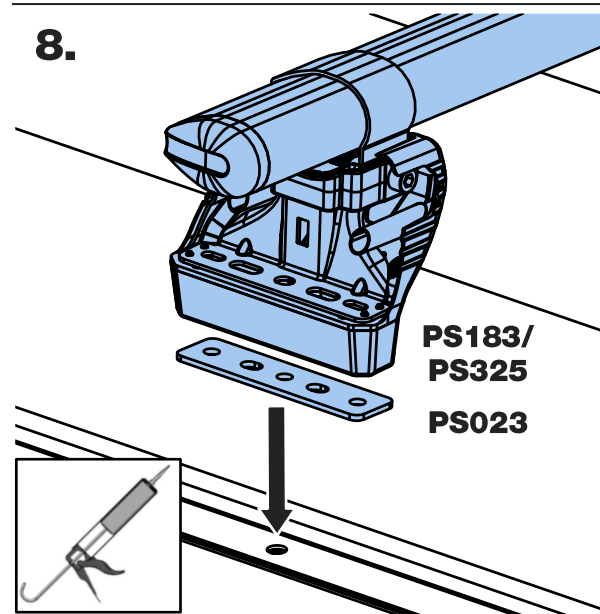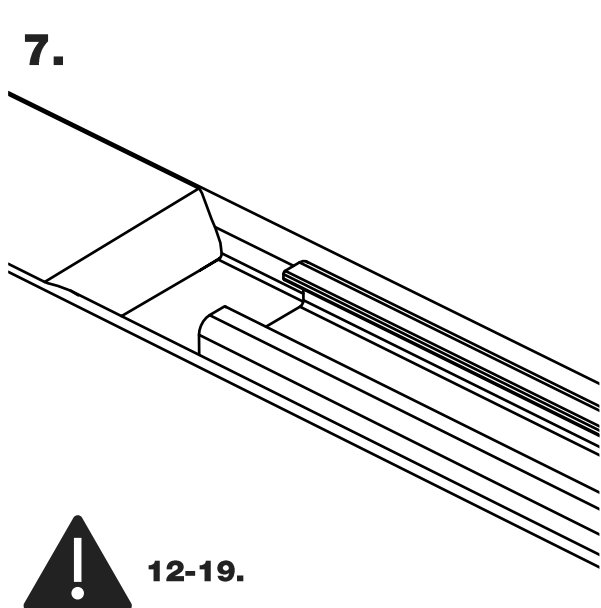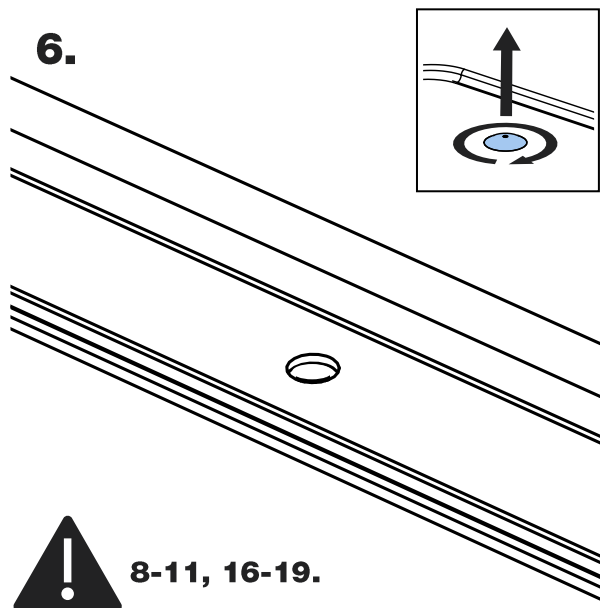


12.

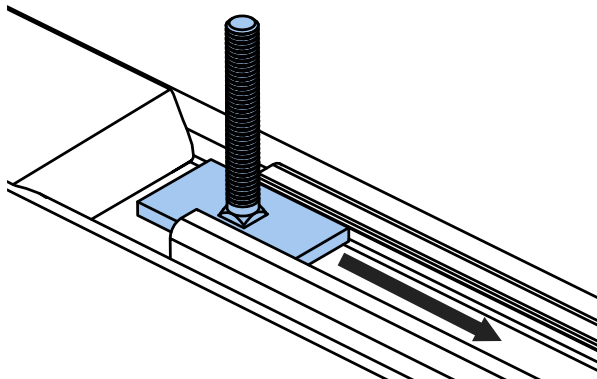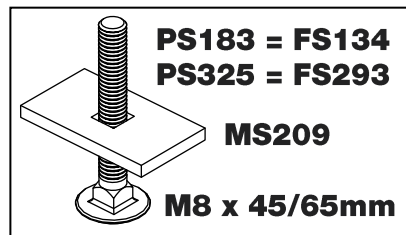


13.

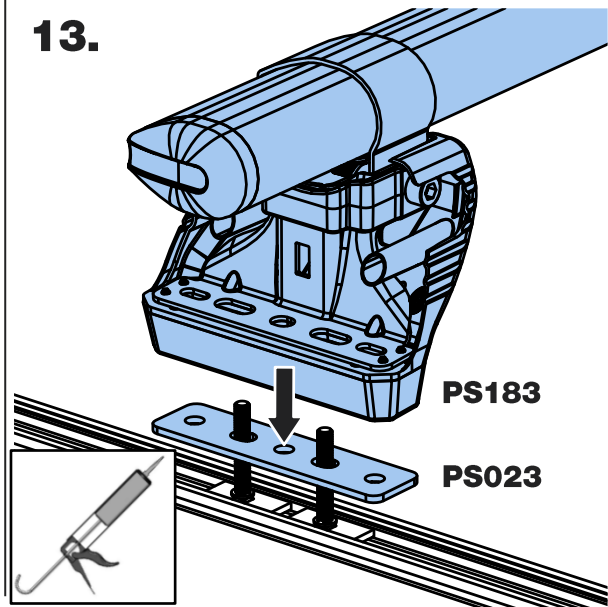


14.

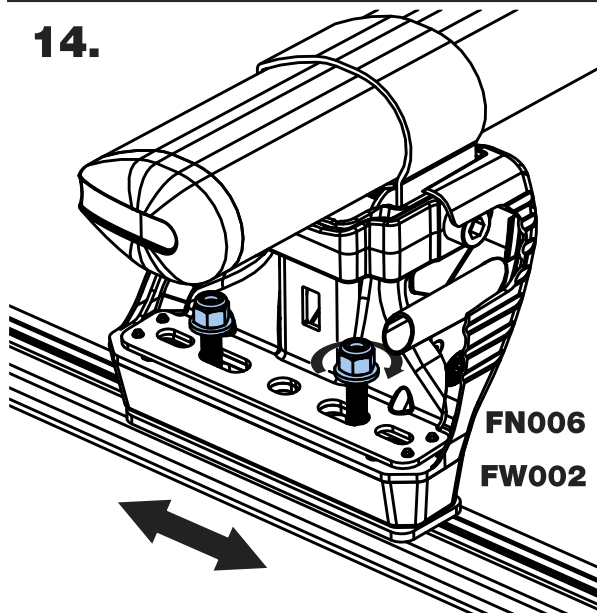


15.

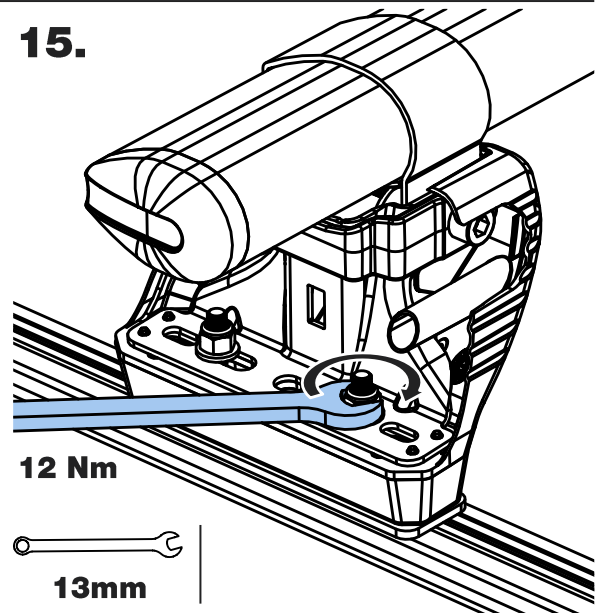


16.

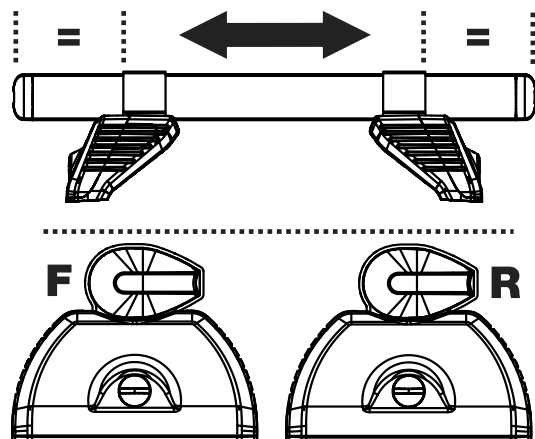

17.

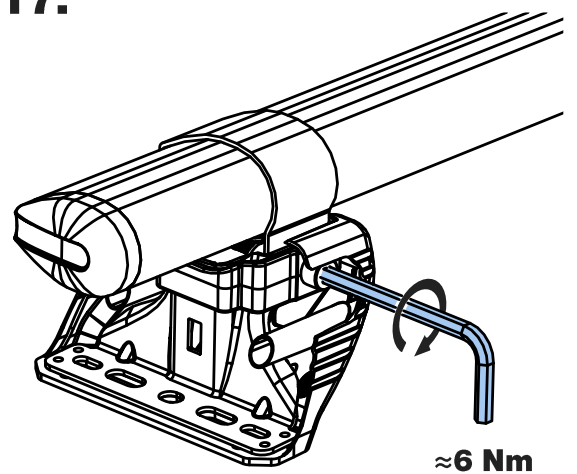

18.

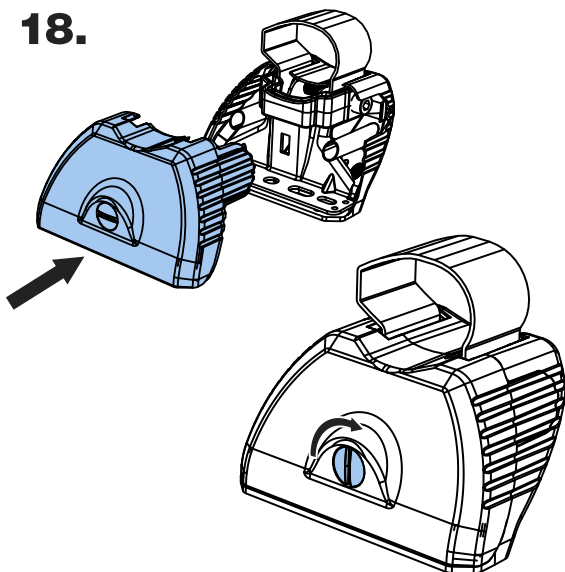

19.

