


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	SJ	KB	2758	02/08/22	First Issue
b	YZL	KB	2958	22/05/23	Replaced SA070 with KLS2
c					
d					
e					
f					
g					
h					
i					
j					
k					
l					
m					






P2PR/FL KammBar

Instructions

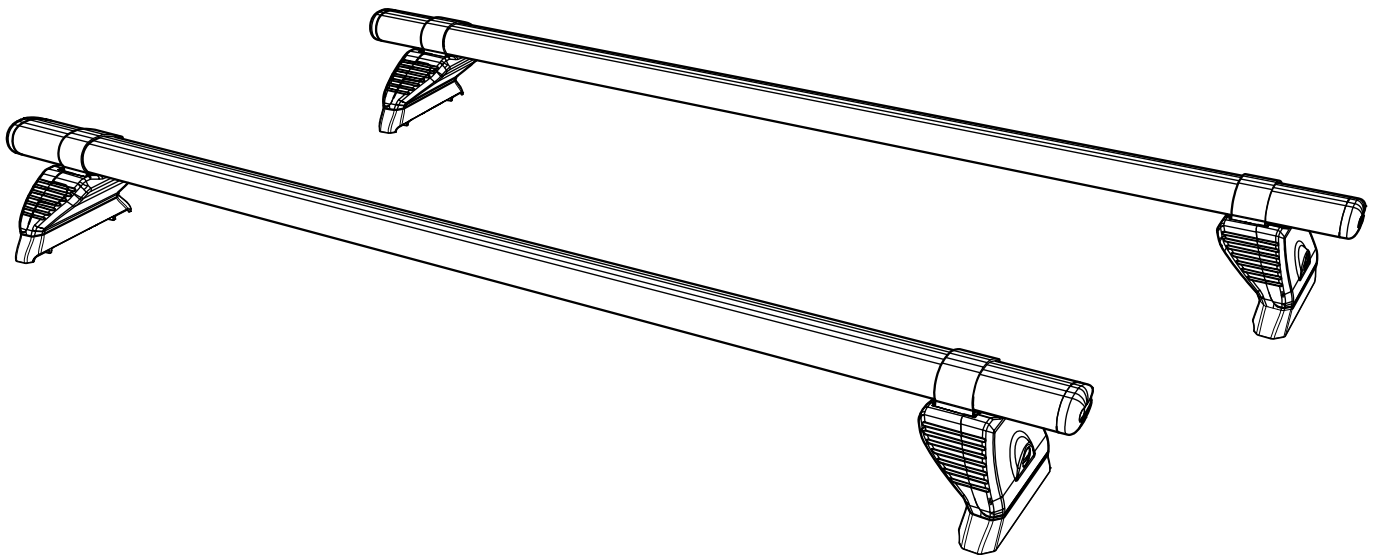


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

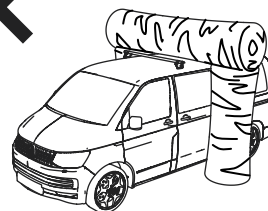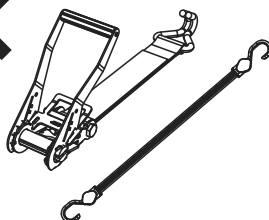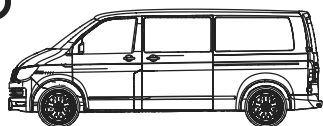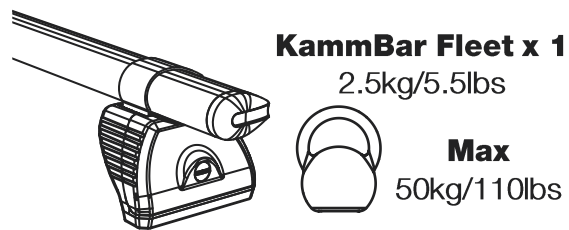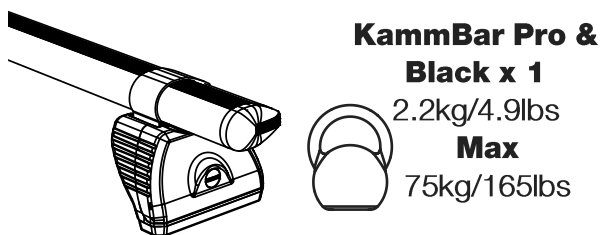


KammBar Pro & Black

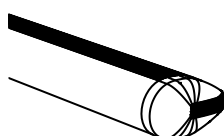


SA419 x 2 ☐

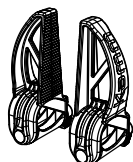

KLS2 x 1 ☐

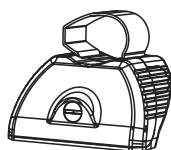


SA397 x 2 ☐

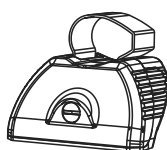


SA398 x 2 ☐


KammBar Fleet

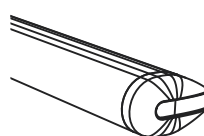


SA393 x 2 ☐



C04 x 2
optional upgrade

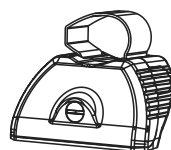


SA397 x 2 ☐

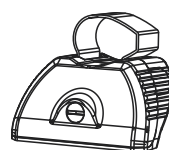


SA398 x 2 ☐


Fitting Kit



PS176 x 2 ☐




PS178 x 2 ☐




PS023 x 4 ☐




FT01 x 1 ☐

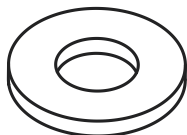


FW002 (M8) x 4

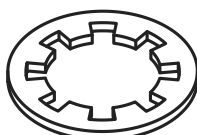


FW009 (M8) x 4

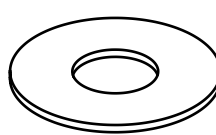

PS153 (M8) x 4




FS081
(M8 x 50)
x 2 ☐




FS061
(M8 x 35)
x 2 ☐


1.

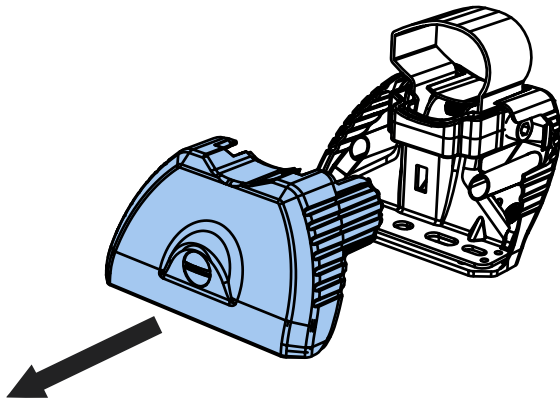

2.

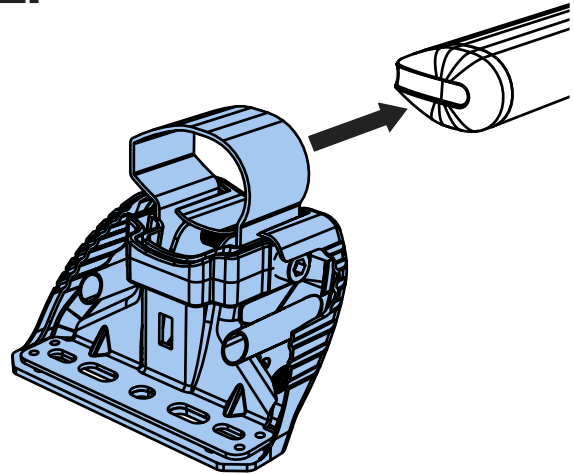


3.




SA397

PS178

SA398




PS178




SA397

PS176


SA398




PS176

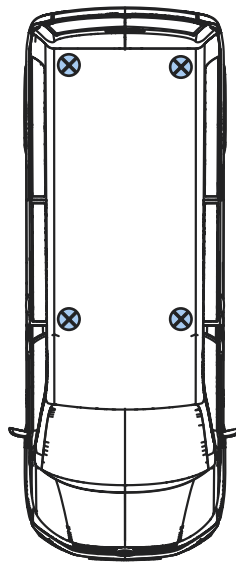


4.

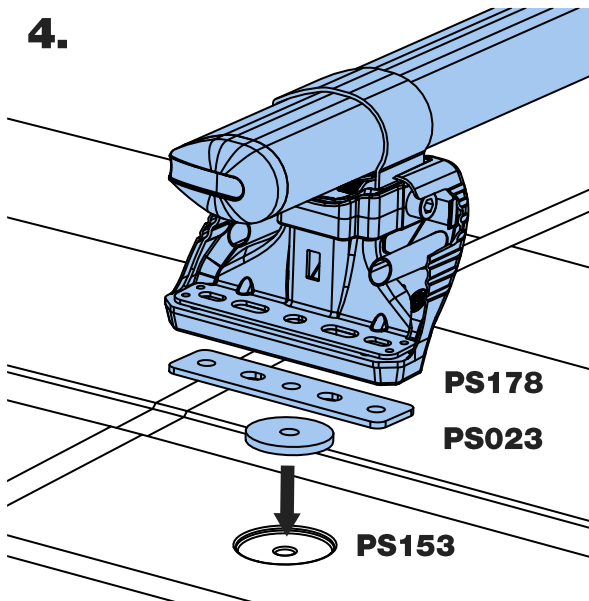


5.

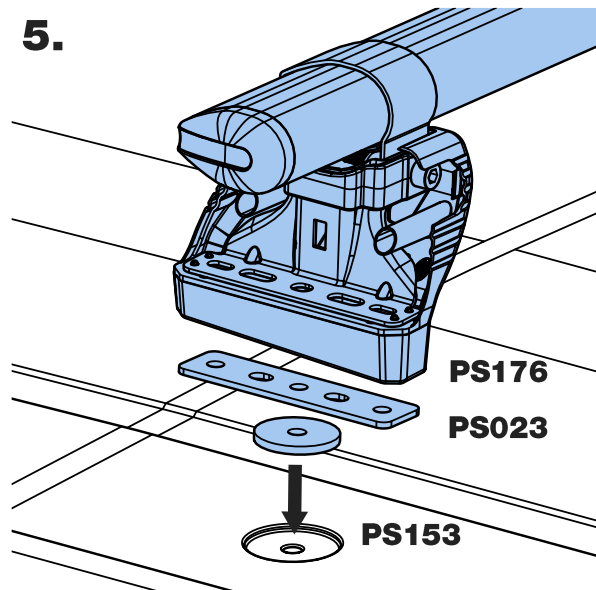

6.

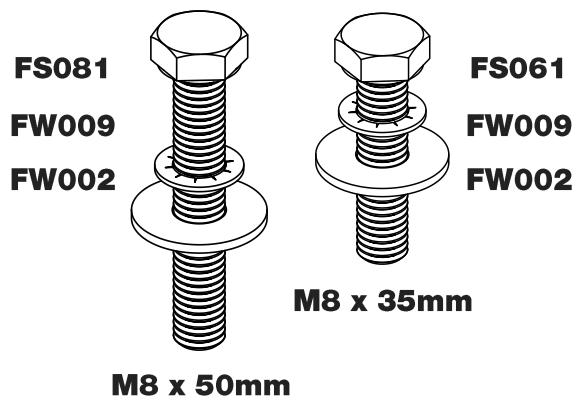


7.

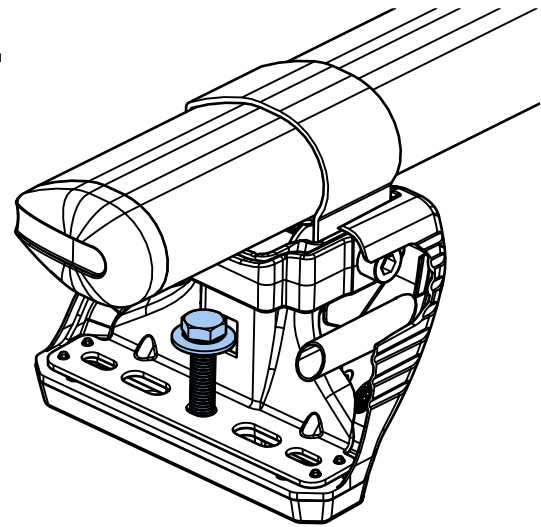


PS178 + M8 x 35mm

8.

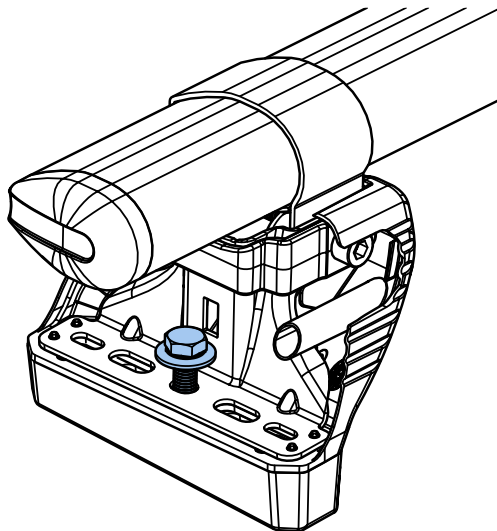


PS176 + M8 x 50mm

9.

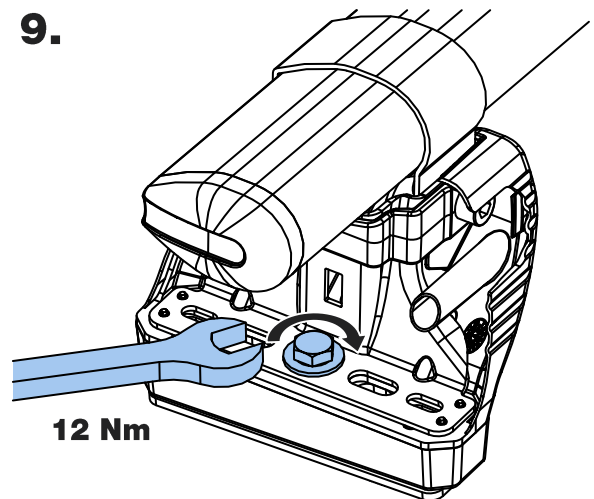


12 Nm




13mm

10.

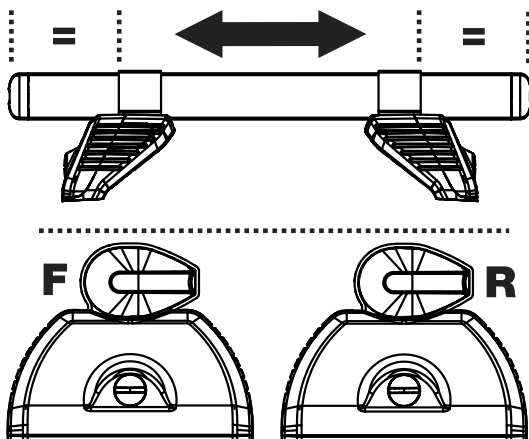


11.

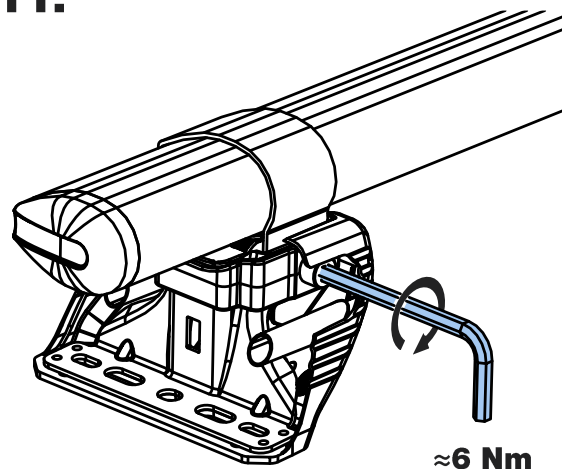

≈6 Nm

12.

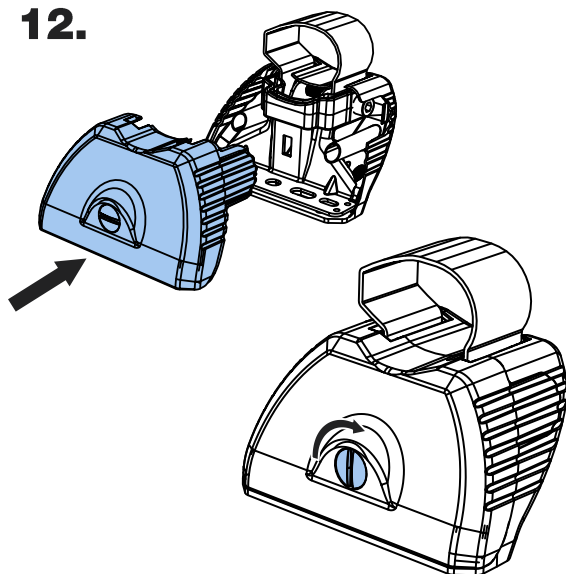

13.

