


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	SJ	KB	2758	02/08/22	First Issue
b	YZL	KB	2958	22/05/23	Replaced SA070 with KLS2
c					
d					
e					
f					
g					
h					
i					
j					
k					
l					
m					






PB3PR/FL KammBar

Instructions

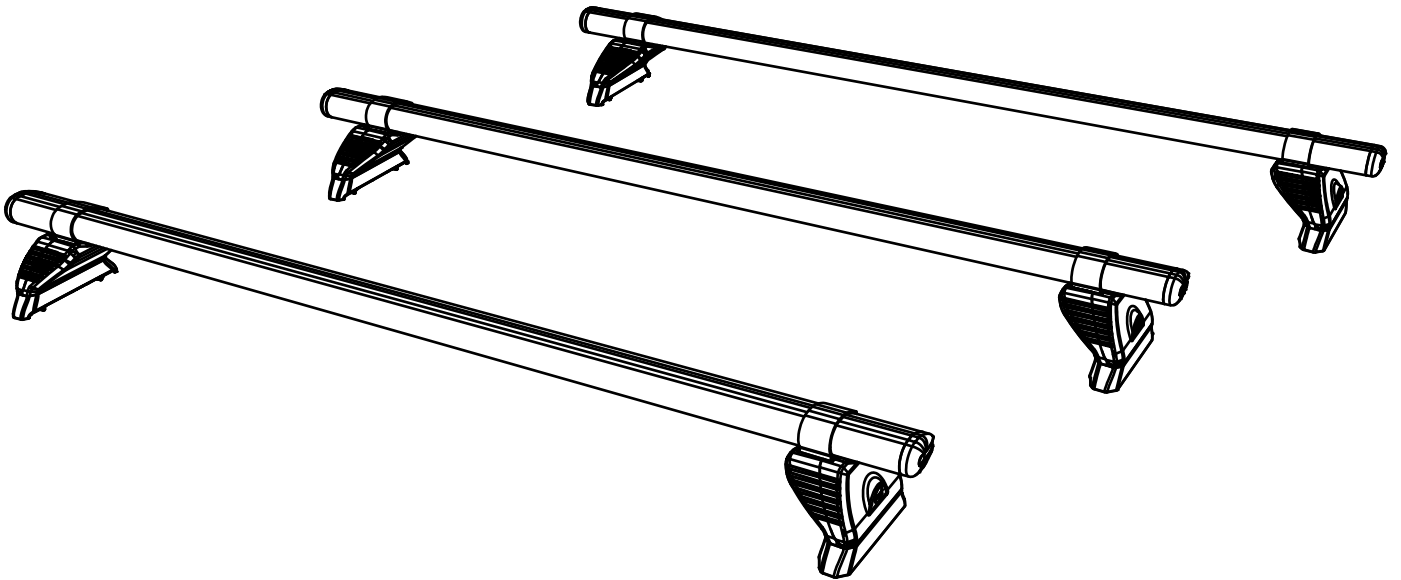


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

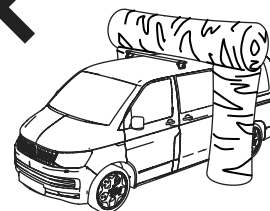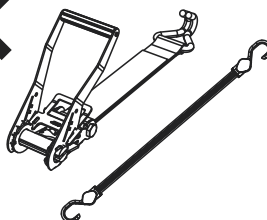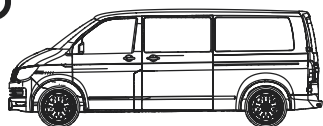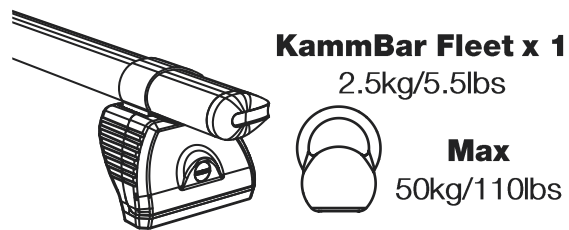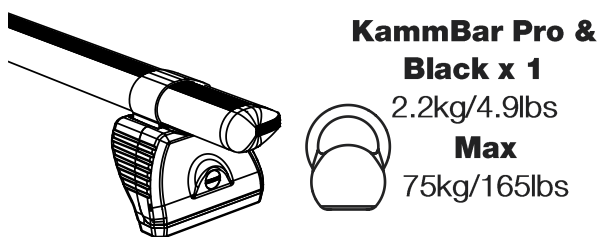


KammBar Pro & Black

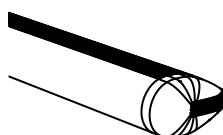


**SA419/
SA536 x 3** ☐

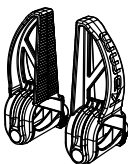

KLS2 x 1 ☐

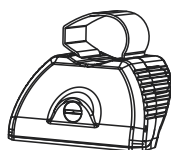


SA397 x 3 ☐

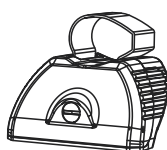


SA398 x 3 ☐


KammBar Fleet

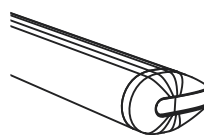


SA393 x 3 ☐



C04 x 3
optional upgrade

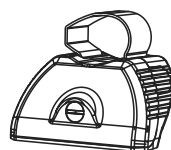


SA397 x 3 ☐

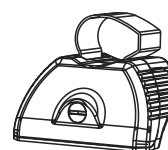


SA398 x 3 ☐


Fitting Kit



PS176 x 4 ☐




PS023 x 6 ☐

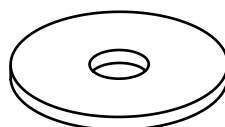


PS208 (M8) x 6



FT01 x 1 ☐

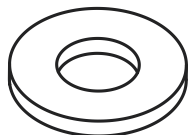


FW002 (M8) x 6

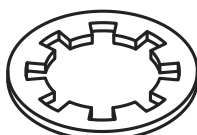

FW009 (M8) x 6




**FS081
(M8 x 50)
x 4** ☐




**FB014
(M8 x 30)
x 2** ☐


1.

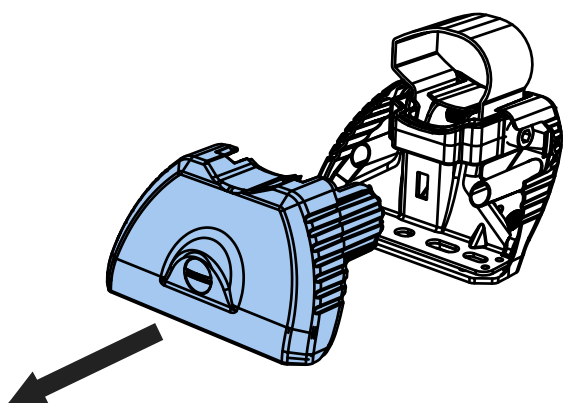

2.

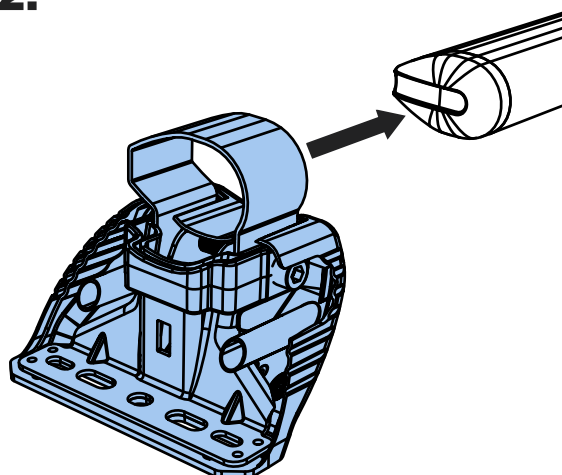


3.




SA397

PS176




SA397




SA397

PS176

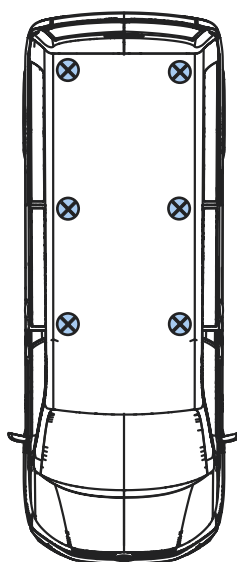


SA398




PS176

SA398




SA398



PS176


4.

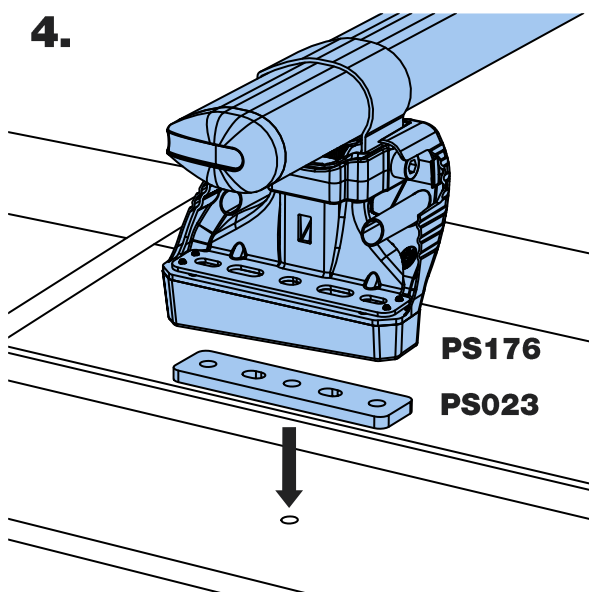

PS176


PS023

5.

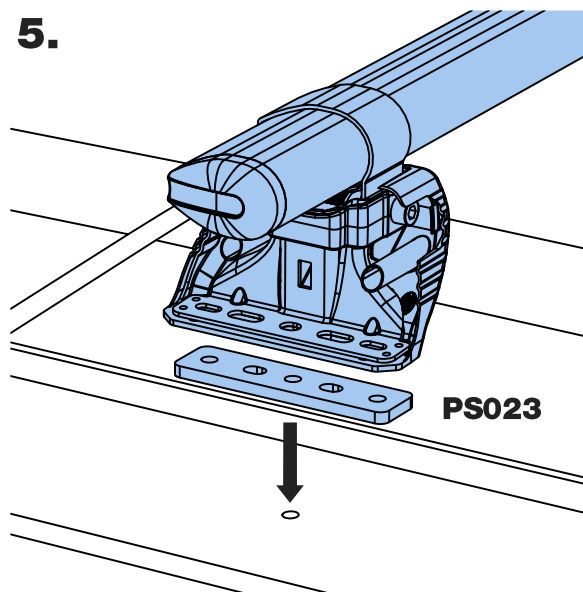


PS023

6.

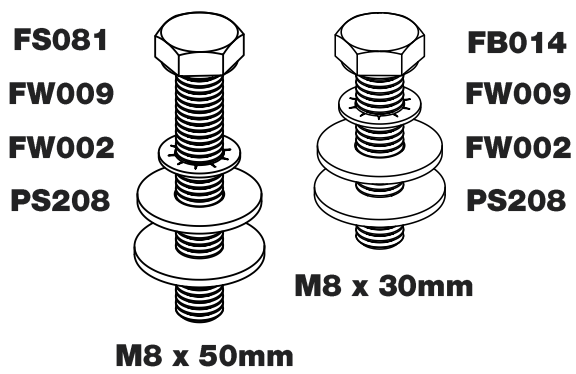


7.

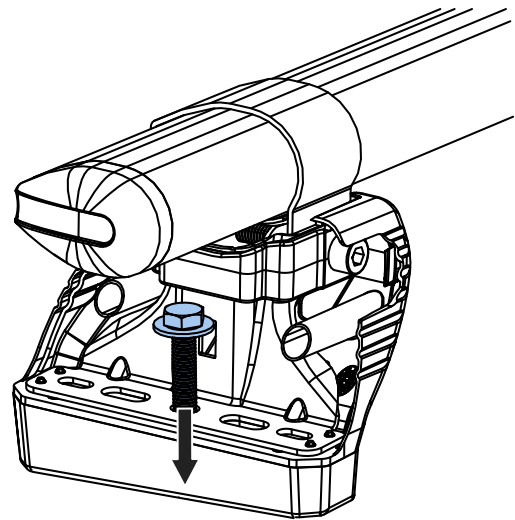


PS176 + M8 x 50mm

8.

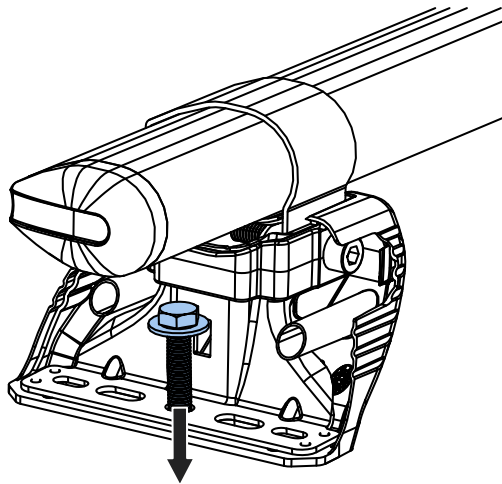


PS023 + M8 x 30mm

9.

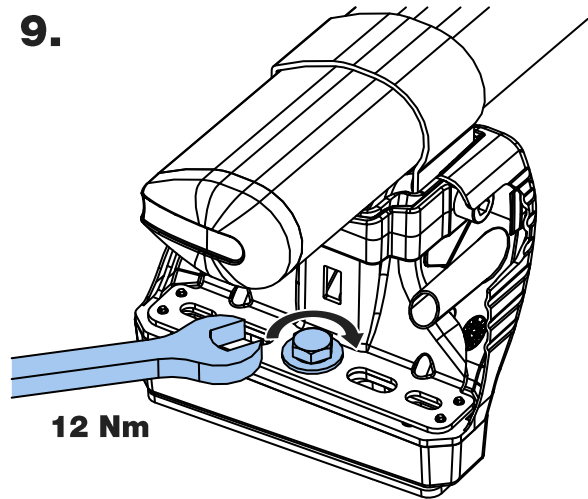


12 Nm




13mm

10.

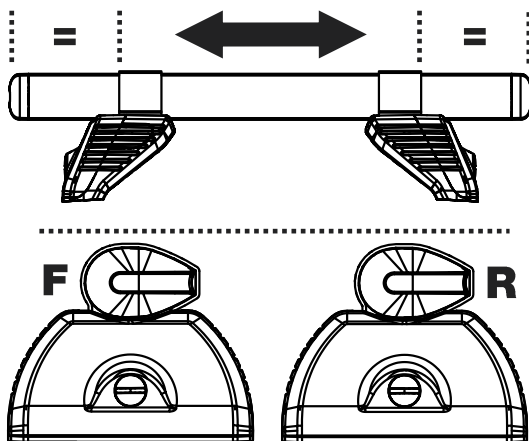


11.

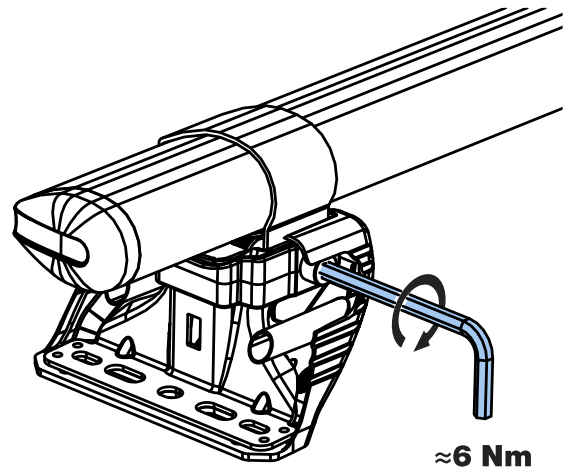

≈ 6 Nm

12.

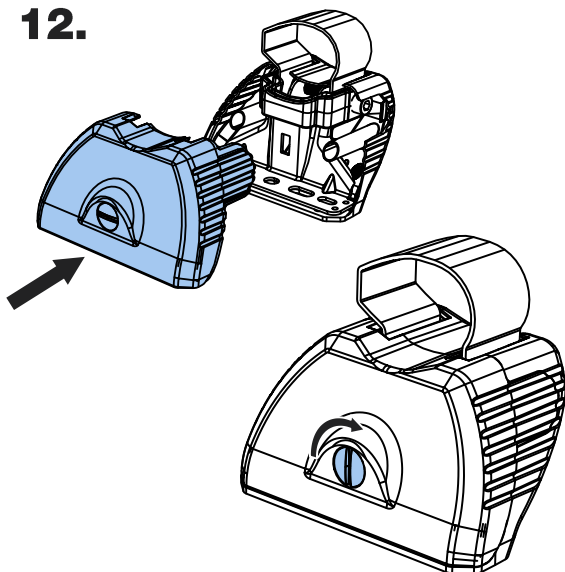

13.

