


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	SJ	KB	2758	02/08/22	First Issue
b	YZL	KB	2958	22/05/23	Replaced SA070 with KLS2
c					
d					
e					
f					
g					
h					
i					
j					
k					
l					
m					






RA2PR/FL KammBar

Instructions

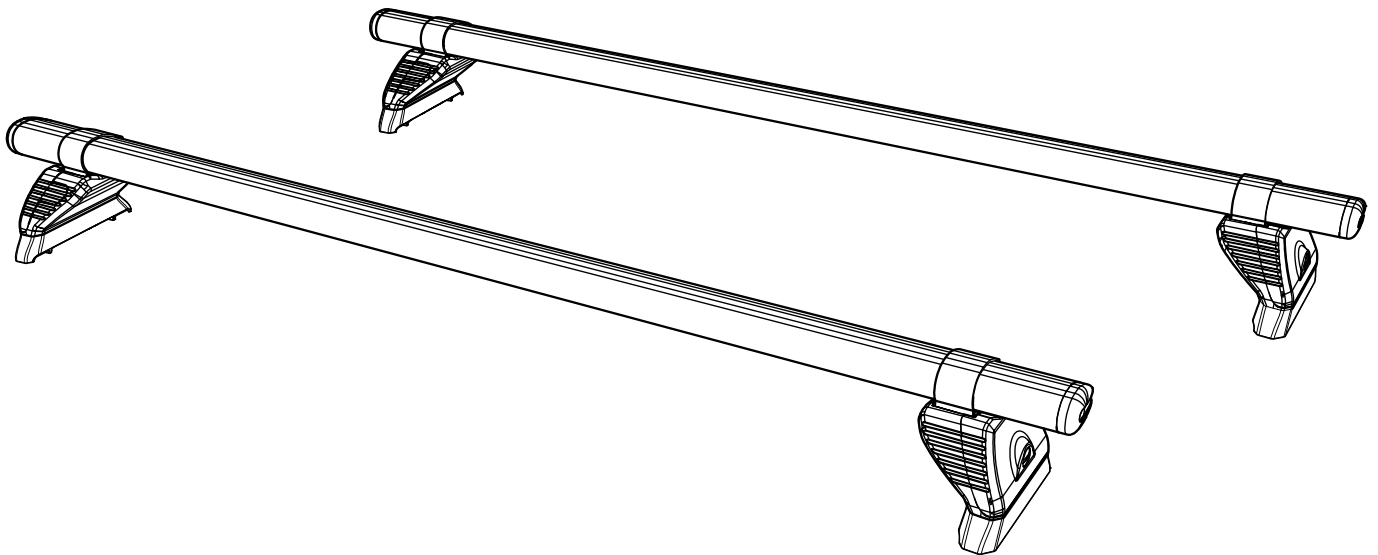


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

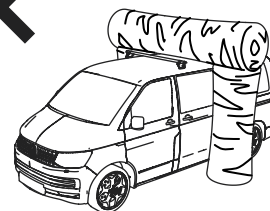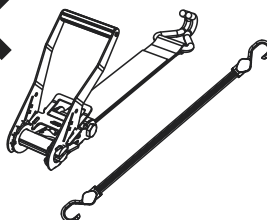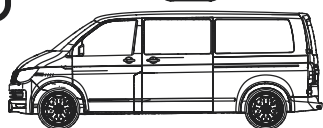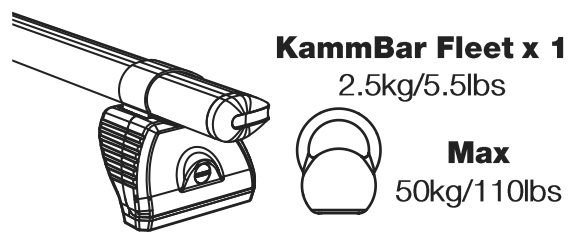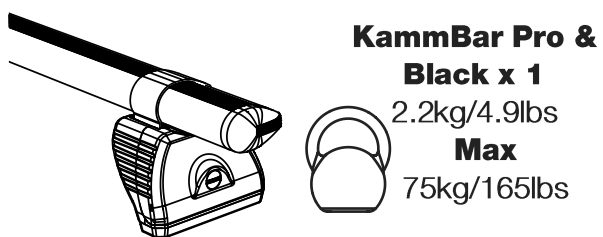


KammBar Pro & Black

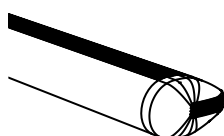


**SA420/
SA537 x 2** ☐

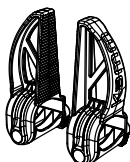

KLS2 x 1 ☐

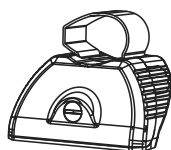


SA397 x 2 ☐

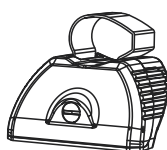


SA398 x 2 ☐


KammBar Fleet

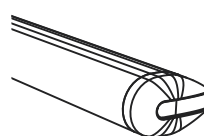


SA394 x 2 ☐



C04 x 2
optional upgrade

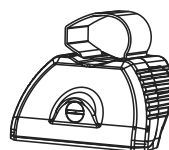


SA397 x 2 ☐

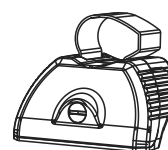


SA398 x 2 ☐

Fitting Kit

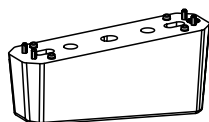

PS181 x 2 ☐

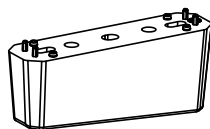


PS182 x 2 ☐



PS046 x 4 ☐



FT01 x 1 ☐



FW001 (M6) x 8




FW008 (M6) x 8



**FS102
(M6 x 75) x 2**




**FS145
(M6 x 70) x 2**




**FB009
(M6 x 65) x 4**


1.

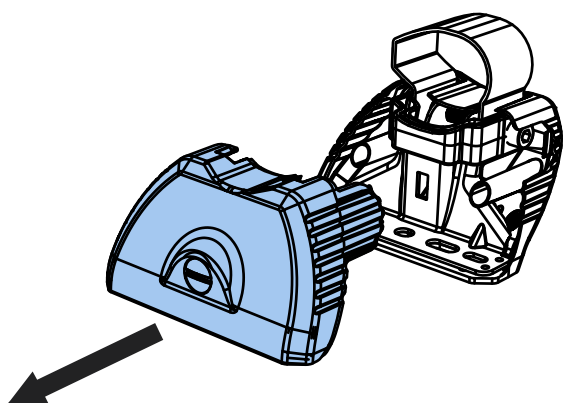

2.

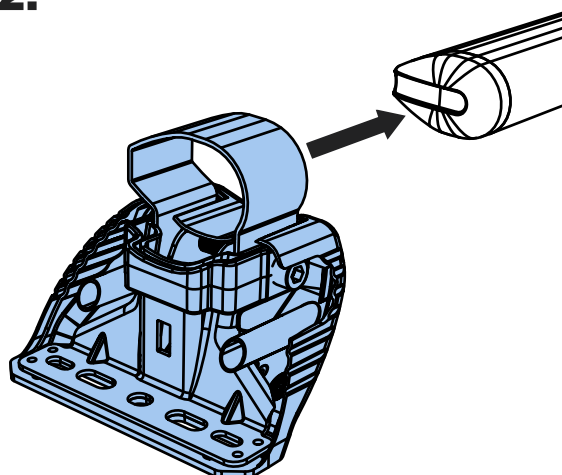

3.





SA397

PS182

SA398

PS182





SA397


PS181

SA398


PS181





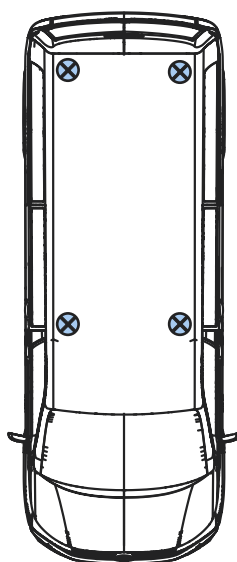



4.

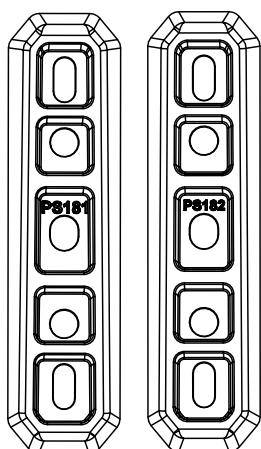


5.

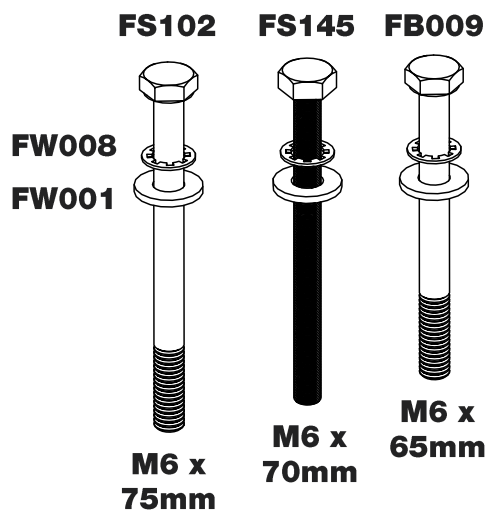

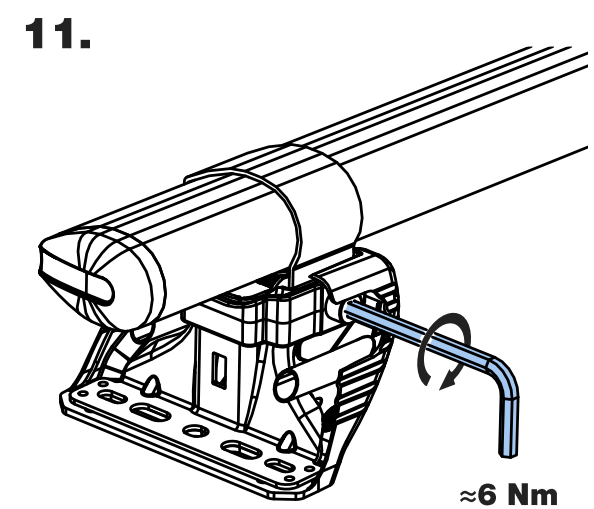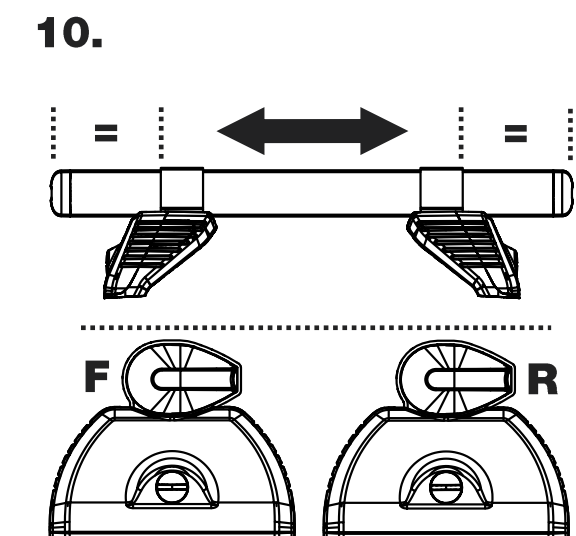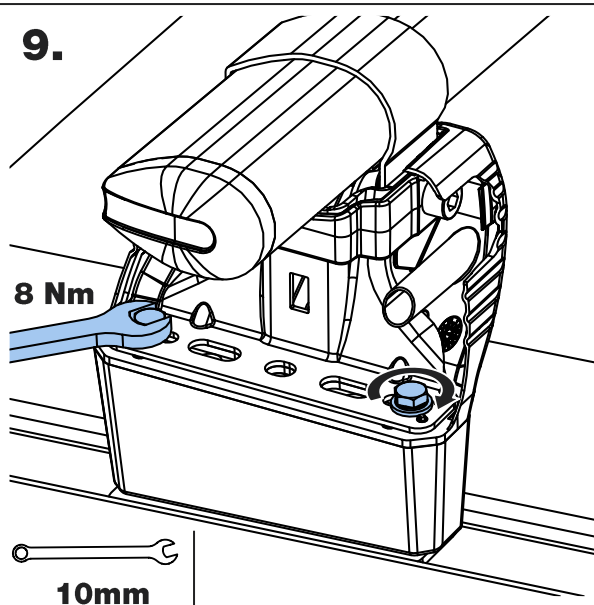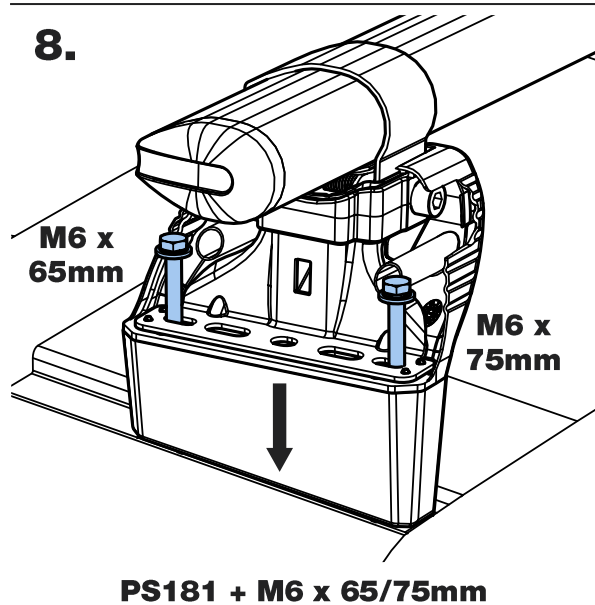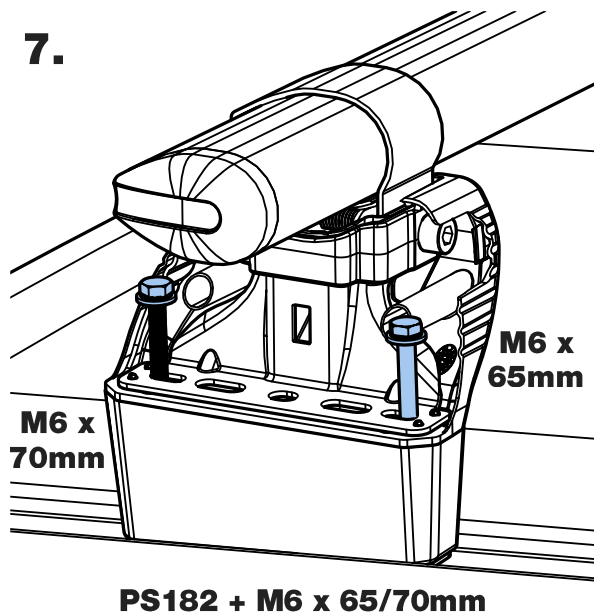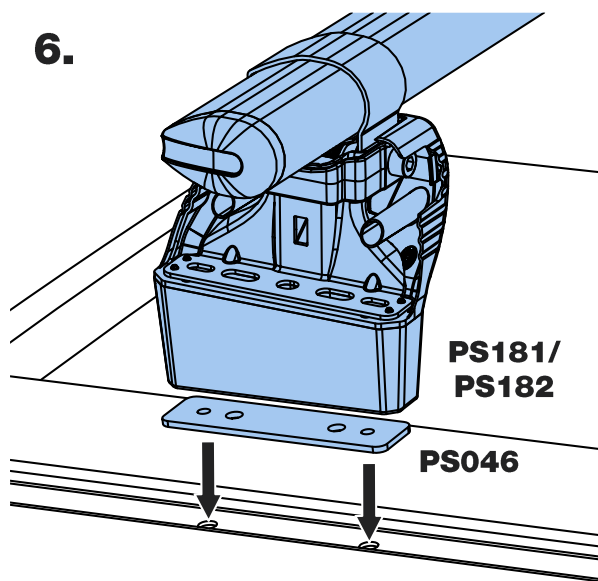

12.

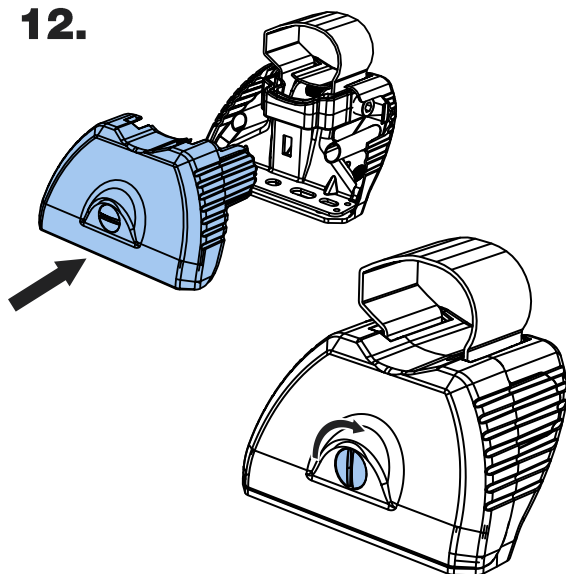

13.

