


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	SJ	KB	2758	02/08/22	First Issue
b	YZL	KB	2958	22/05/23	Replaced SA070 with KLS2
c					
d					
e					
f					
g					
h					
i					
j					
k					
l					
m					






T53PR/FL KammBar

Instructions

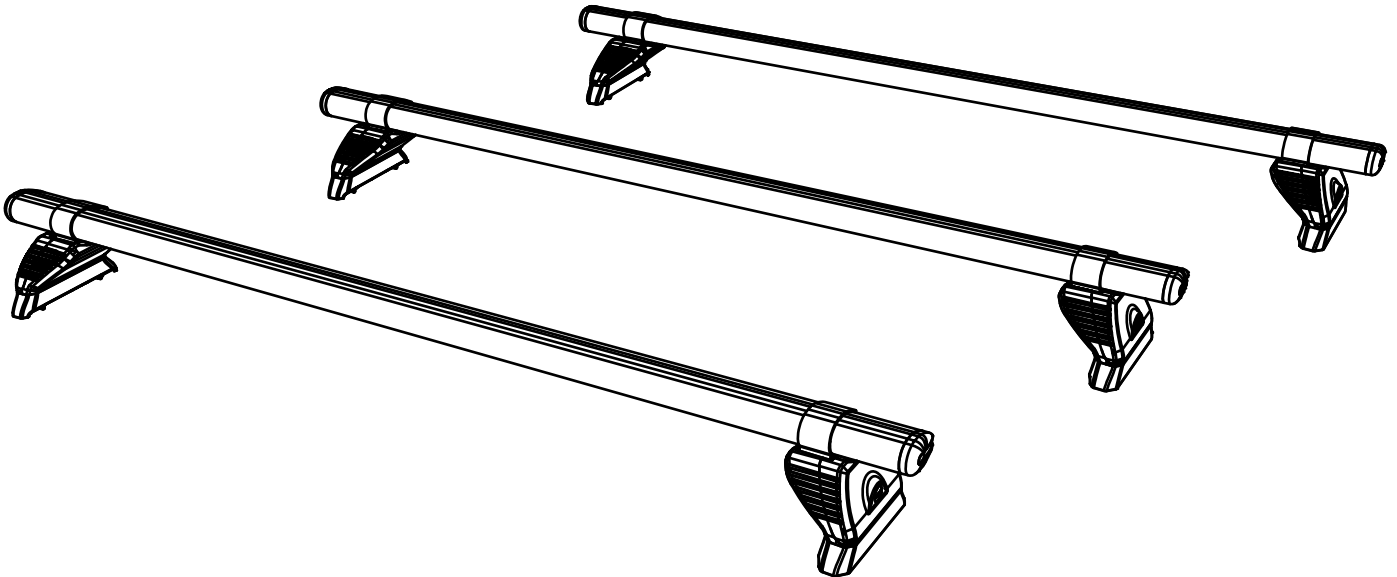


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

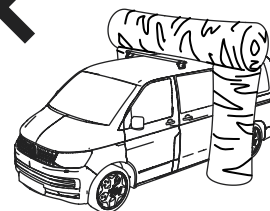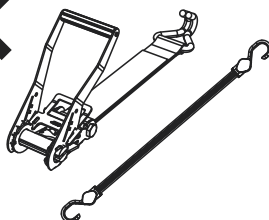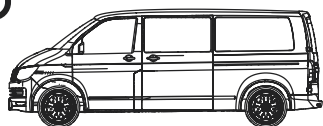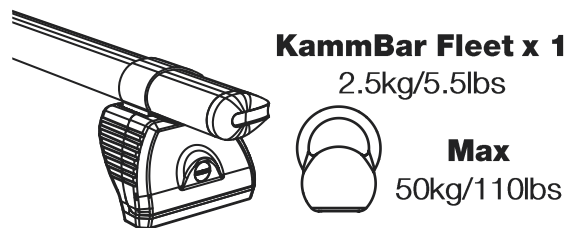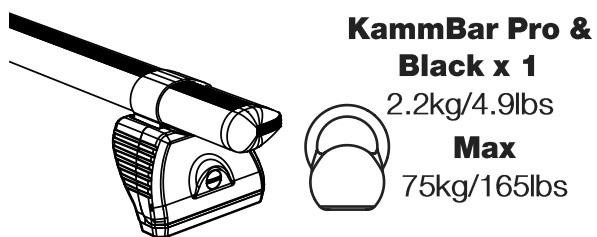


KammBar Pro & Black

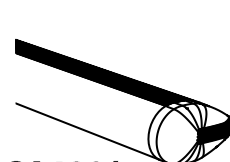


**SA420/
SA537 x 3** ☐

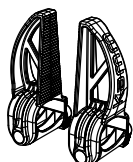

KLS2 x 1 ☐

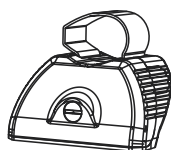


SA397 x 3 ☐

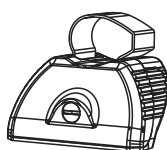


SA398 x 3 ☐


KammBar Fleet

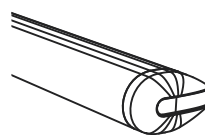


SA394 x 3 ☐



C04 x 3
optional upgrade

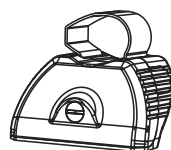


SA397 x 3 ☐

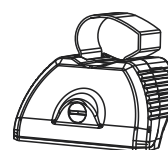


SA398 x 3 ☐


Fitting Kit



PS183 x 4 ☐




PS178 x 2 ☐




PS023 x 6 ☐



FT01 x 1 ☐




PS009 x 12 ☐




**FW001
(M6) x 18** ☐



**FN001
(M6) x 12** ☐




**FW008
(M6) x 6** ☐

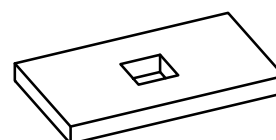


MS098 x 12 ☐



**FS104
(M6 x 45)
x 8** ☐



**FS042
(M6 x 40)
x 4** ☐




**FS048
(M6 x 35)
x 4** ☐




**FS039
(M6 x 30)
x 2** ☐


1.

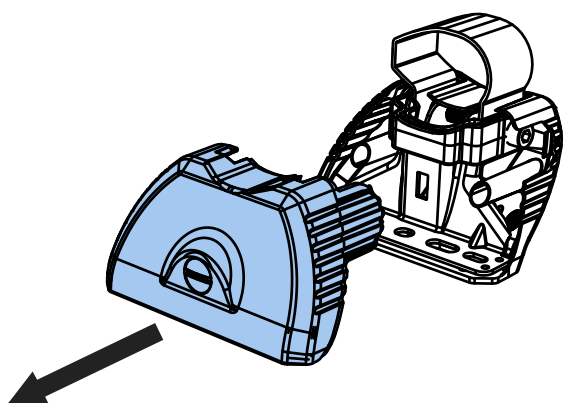

2.

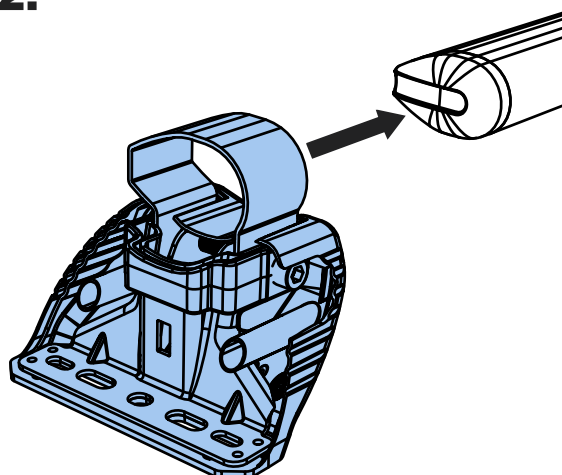


3.




SA397

PS183




SA397

PS178




SA397

PS183

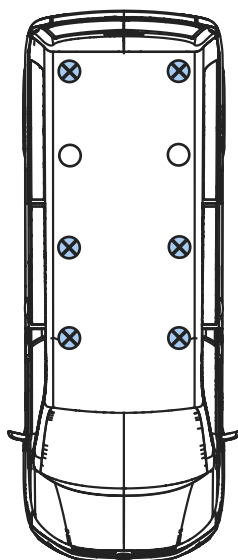


SA398

PS183




SA398

PS178




SA398

PS183




4.






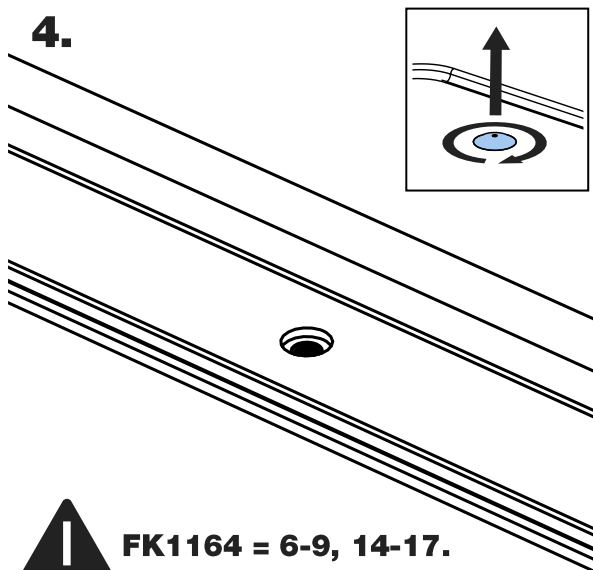


FK1164 = 6-9, 14-17.


5.

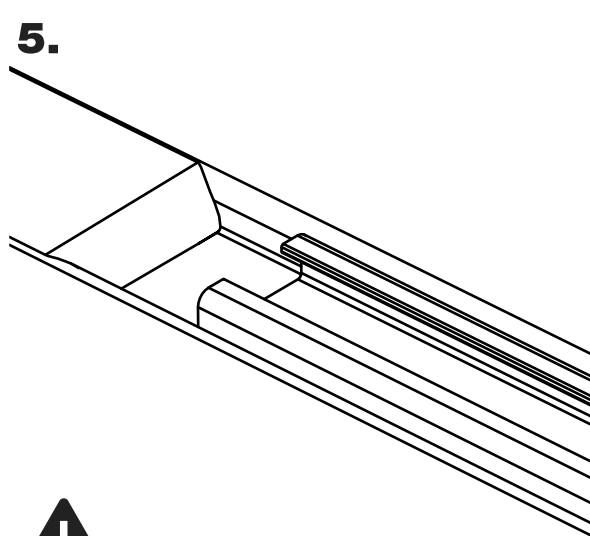

FK1165 = 10-17.

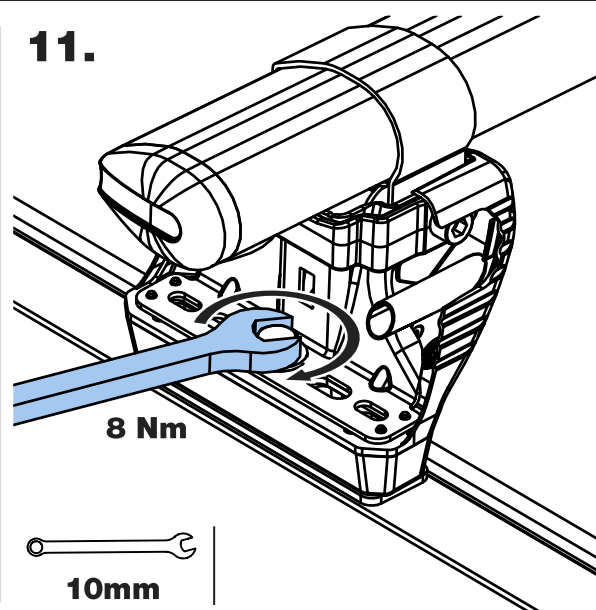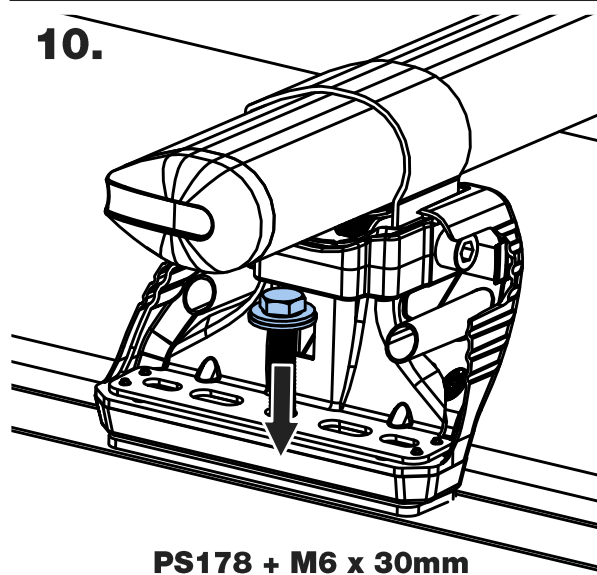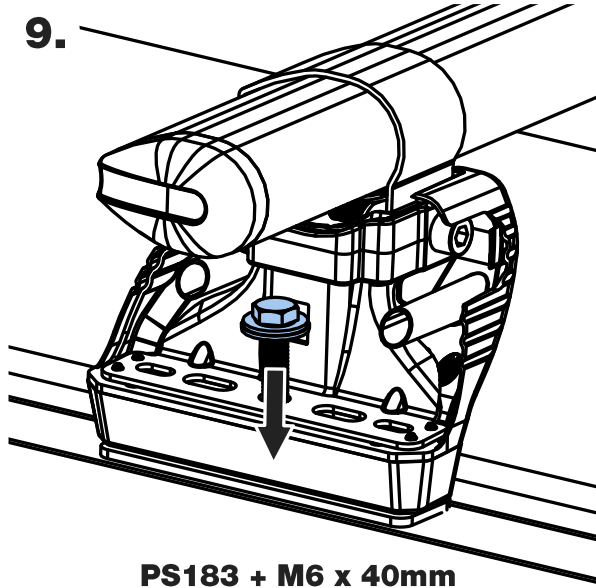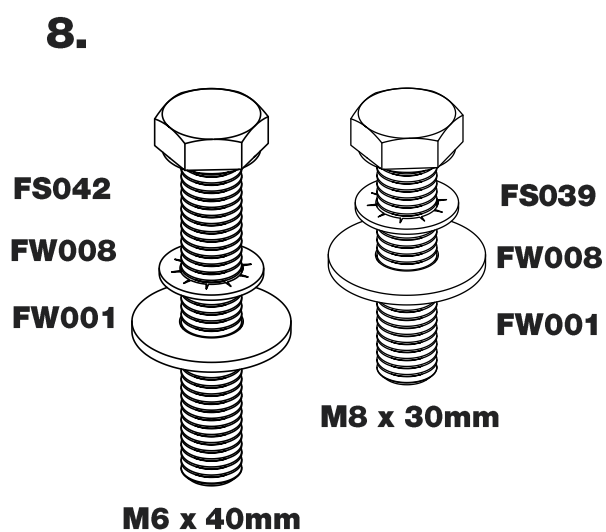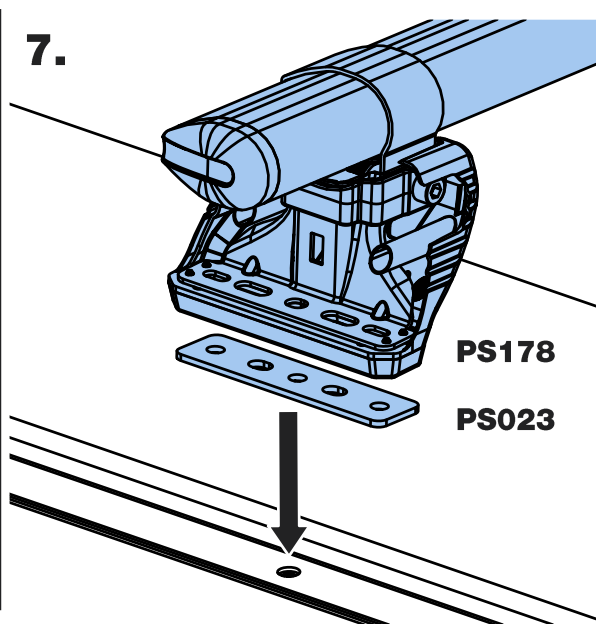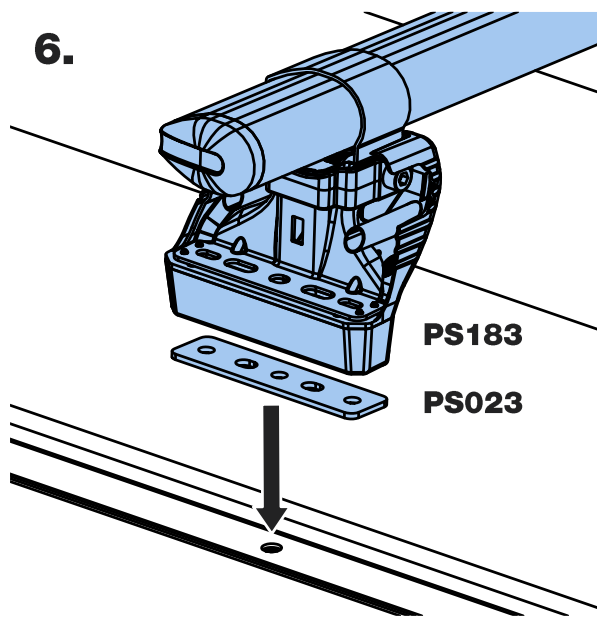


12.

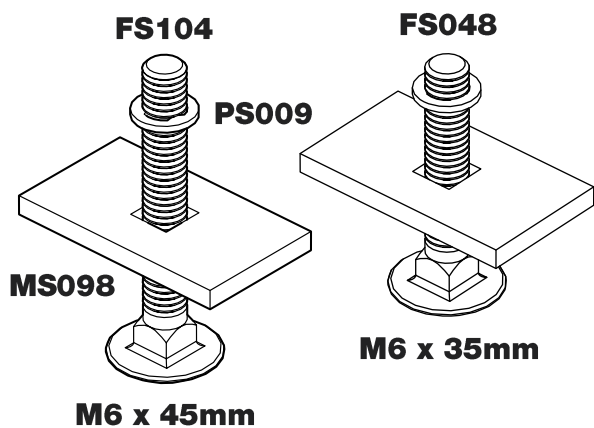


13.


- 1st. M6 x 45mm x 2
- 2nd. M6 x 35mm x 2
- 3rd. M6 x 45mm x 2

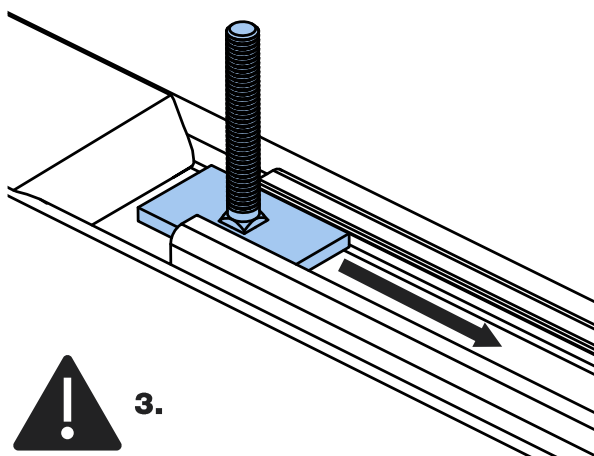


14.

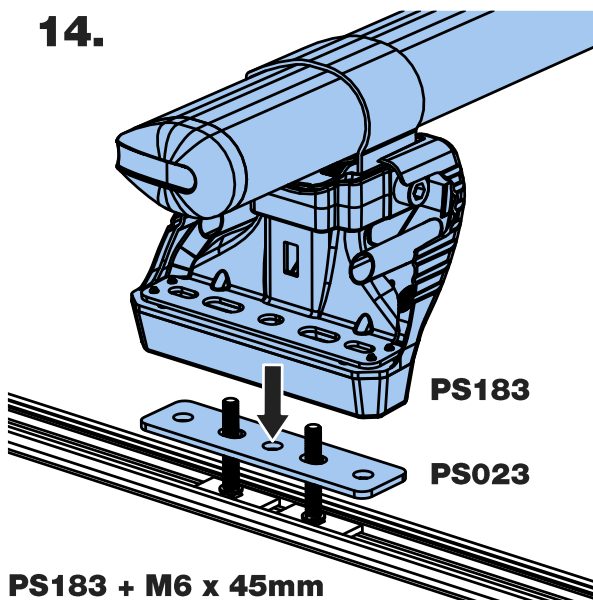


15.

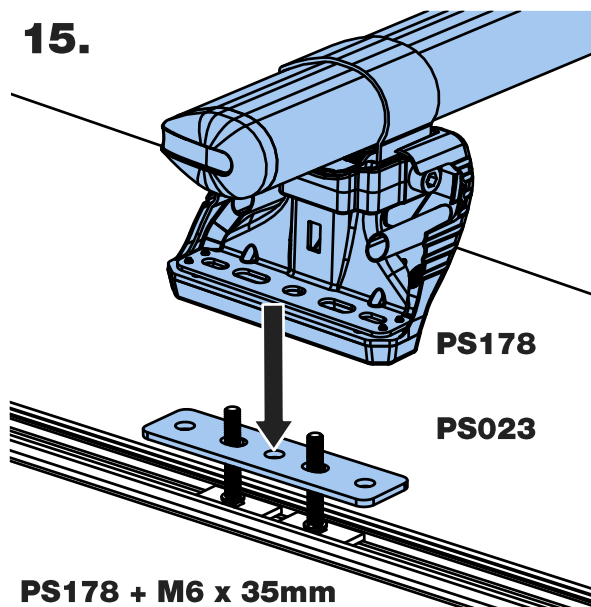


16.

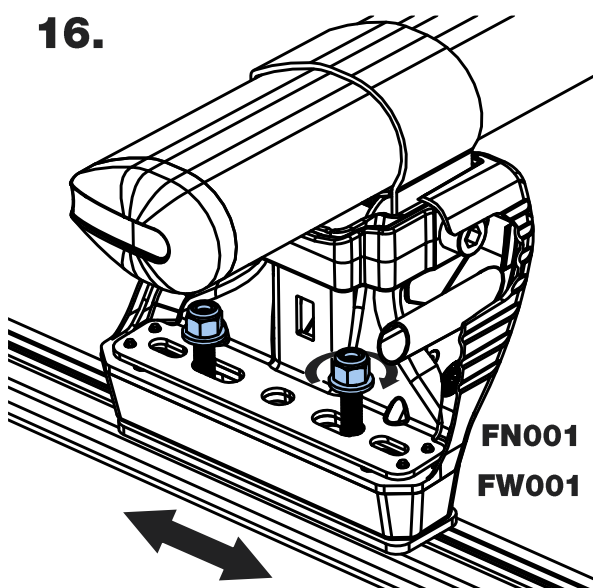


17.

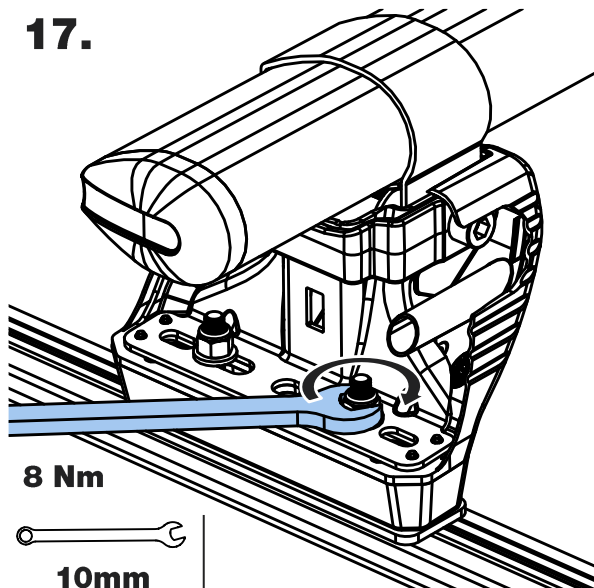


18.

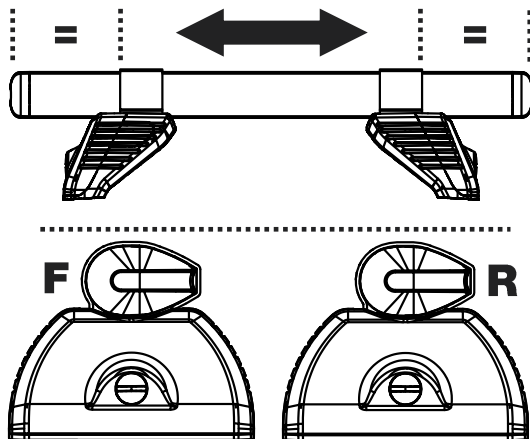

19.

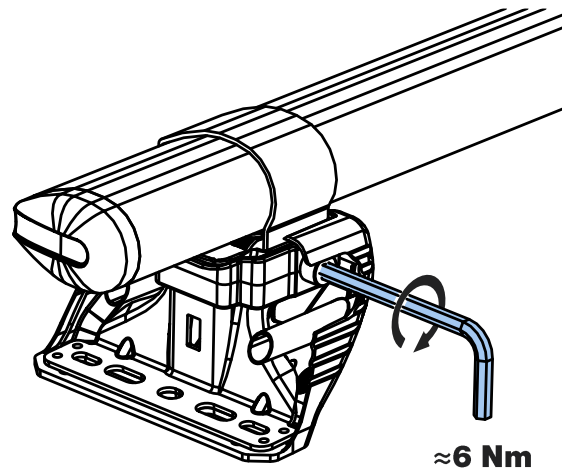

20.

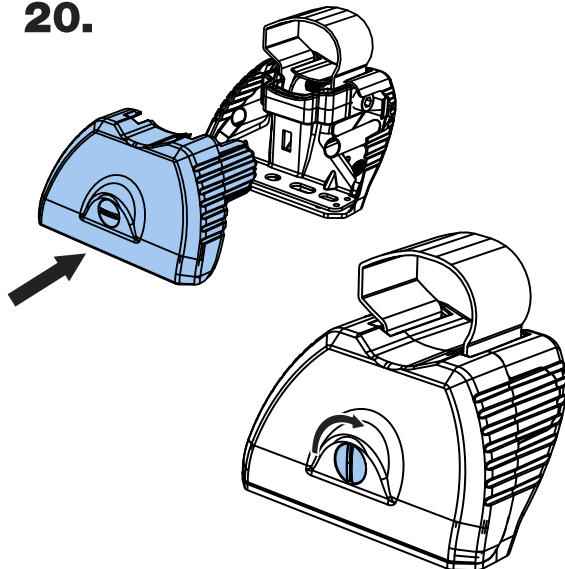

21.

