


TA2PR/FL





KammBar

Instructions


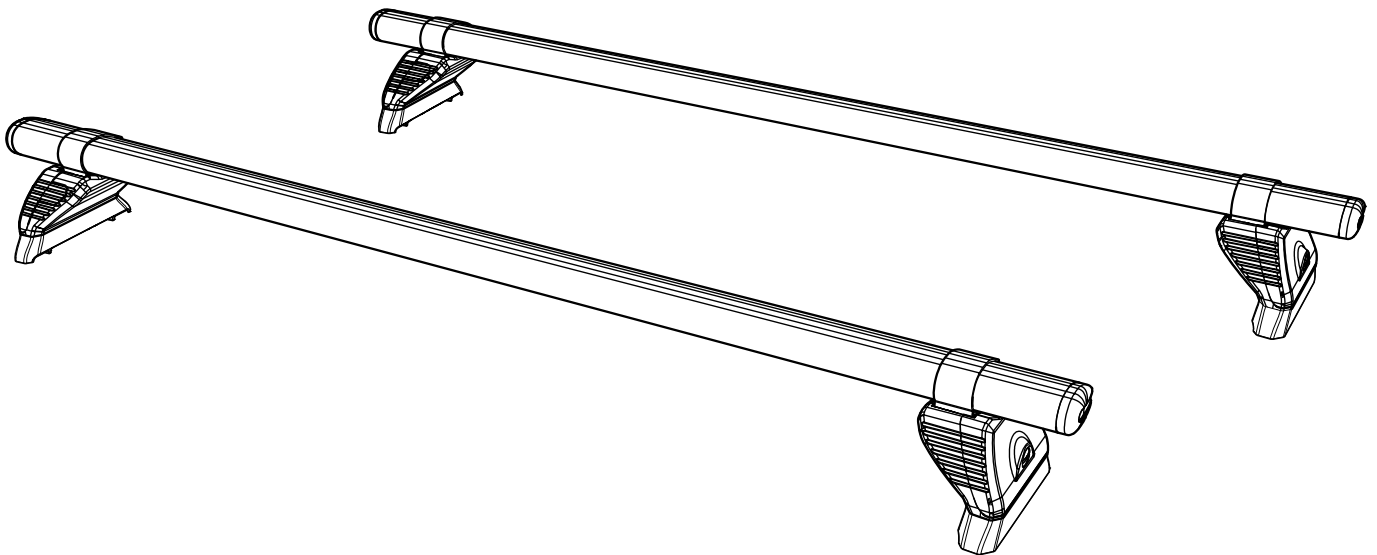


CITY CRASH (✓)



According to ISO/ PAS 11154:2006

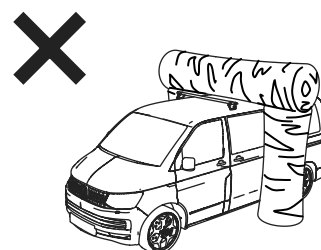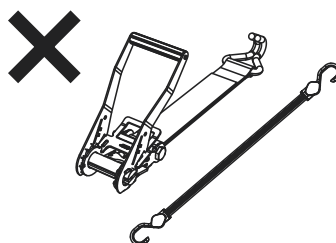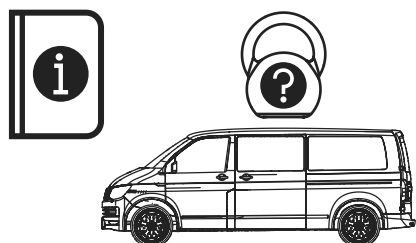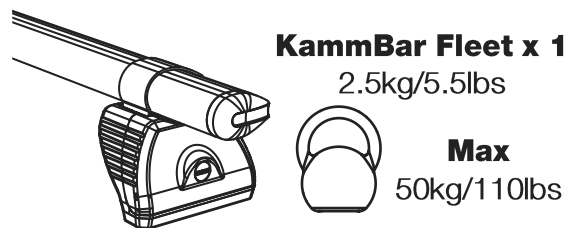


KammBar Pro

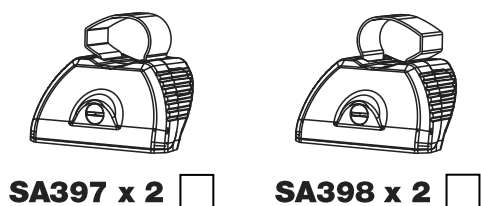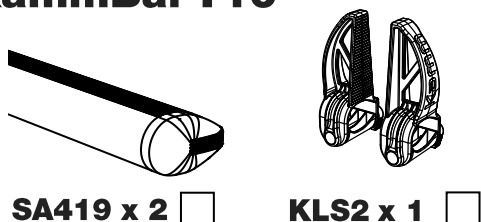


KammBar Fleet

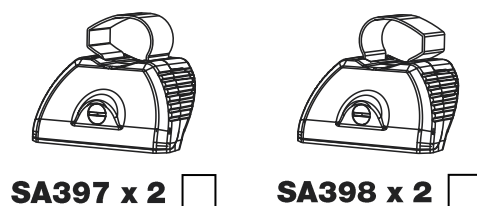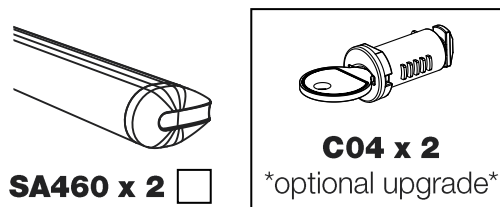


Fitting Kit

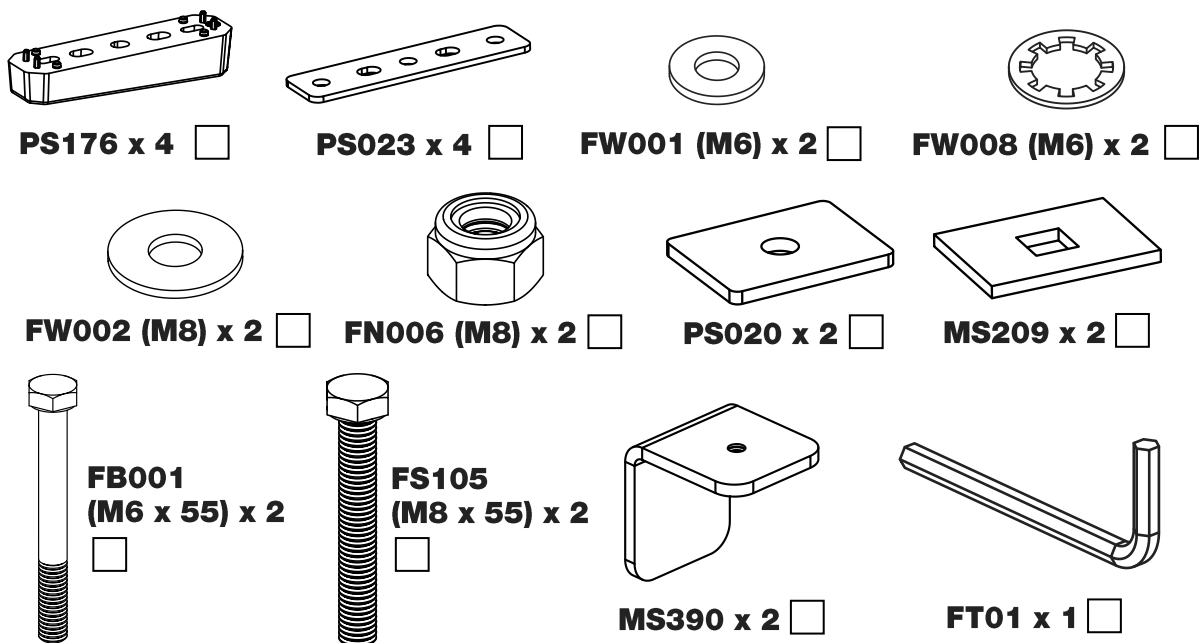


1.

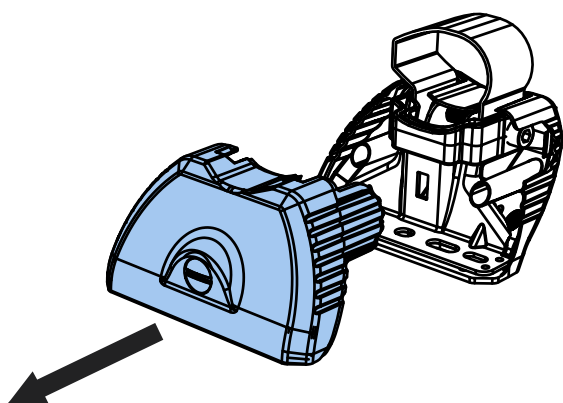

2.

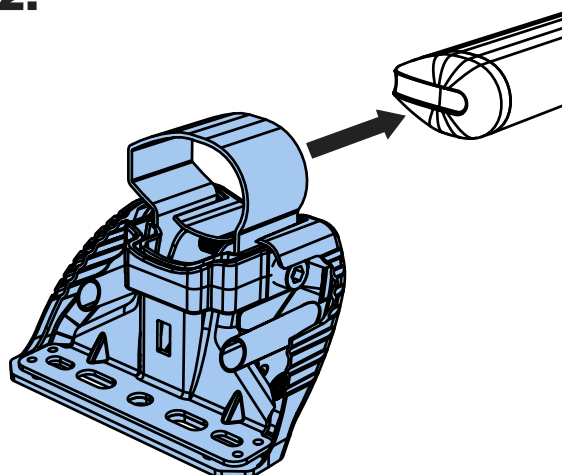


3.




SA397

PS176

SA398




PS176




SA397

PS176


SA398



PS176

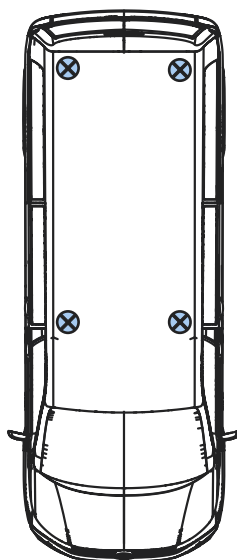


4.

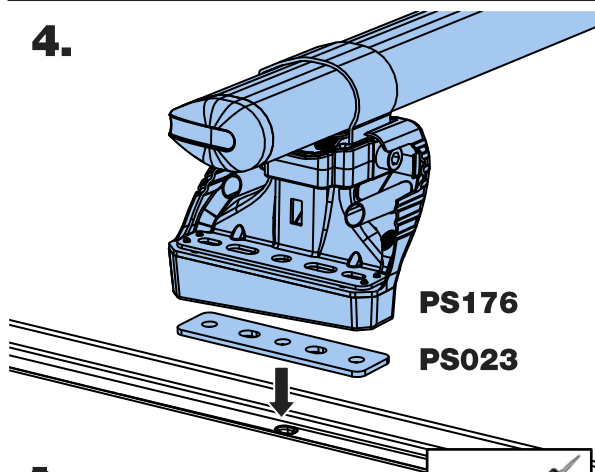


PS176

PS023

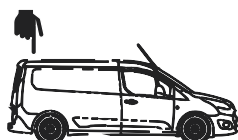


5.

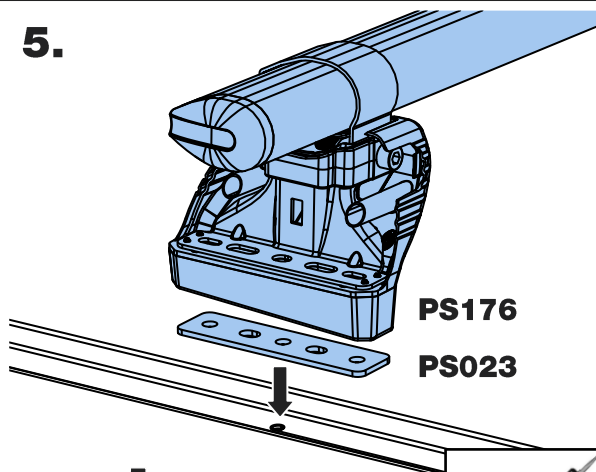


PS176


PS023

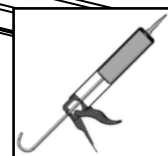


6.

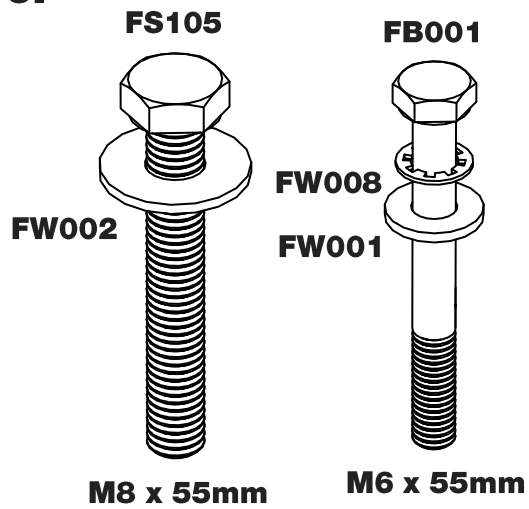


7.

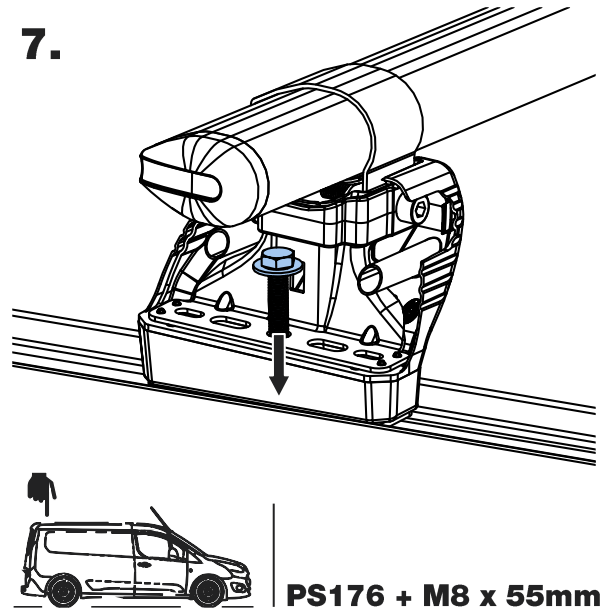


8.

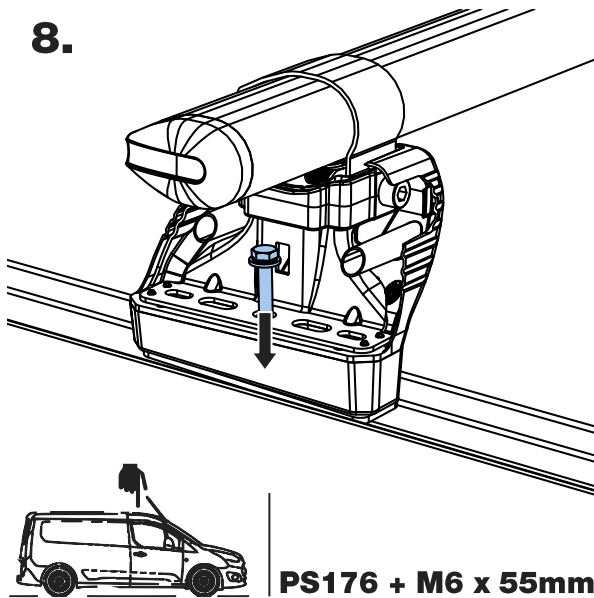


9.

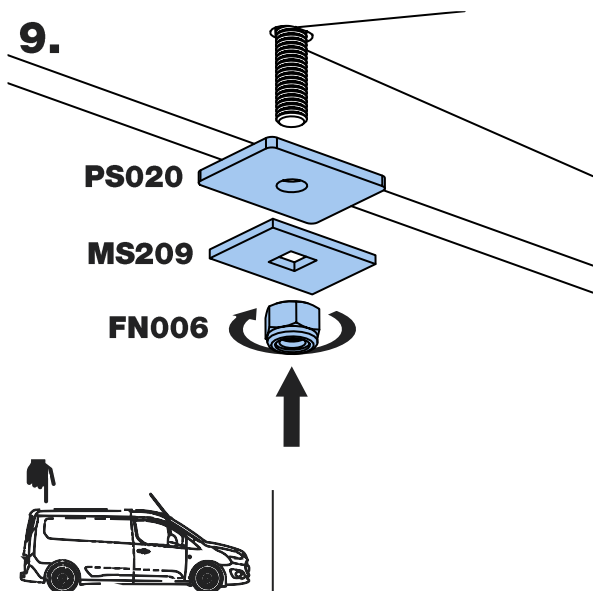

10.

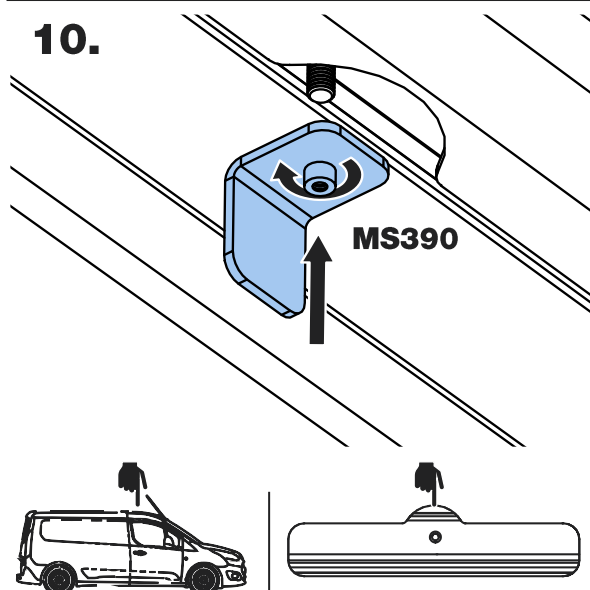


11.

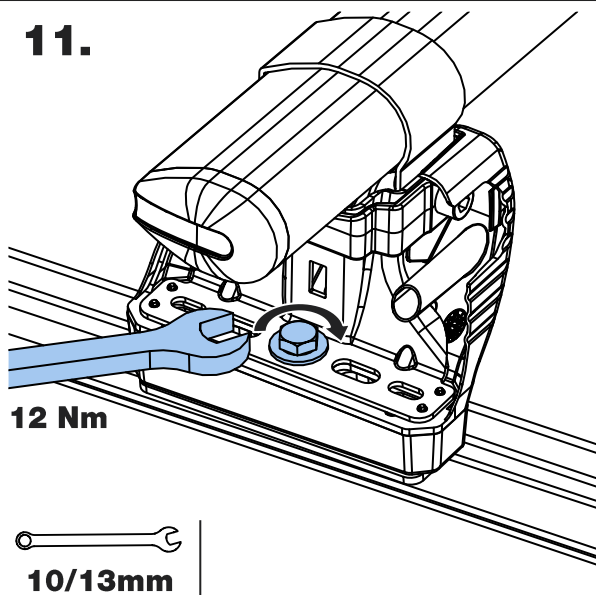





12.

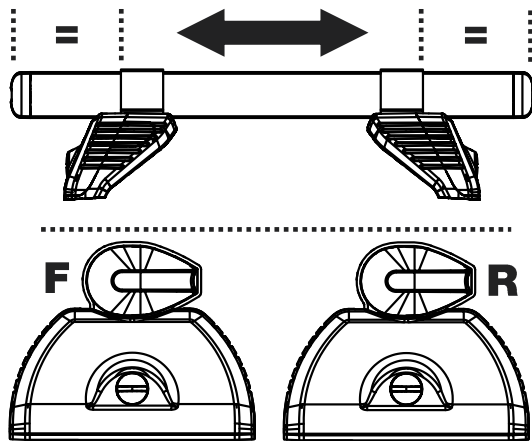

13.

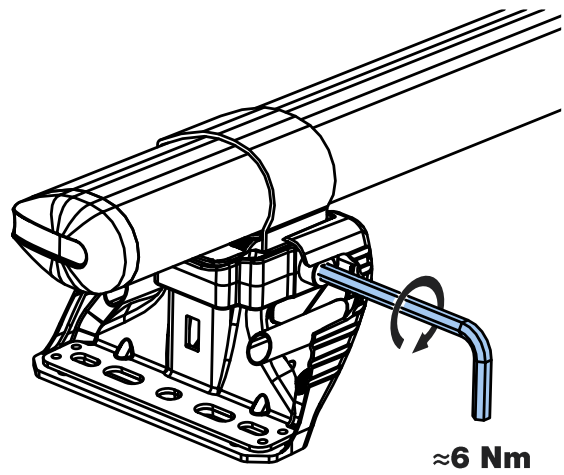

14.

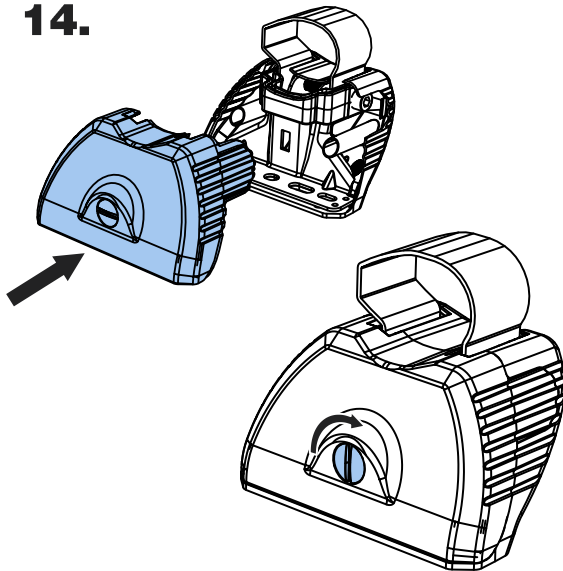

15.

