


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	SJ	KB	2758	02/08/22	First Issue
b	MK	KB	2947	26/04/23	Removed PS404
c	YZL	KB	2958	22/05/23	Replaced SA070 with KLS2
d	FT	KB	3112	12/12/23	Added 4x PS491 and edited steps 4a-5b to include new Transit Custom 2023 fitment.
e	KB	EC	25/06/24	3287	Replaced SA420 with SA513 and SA394 with SA512
f	FT	KB	3370	11/11/24	Removed 4x PS491 and added 8x PS615 to kit
g					
h					
i					
j					
k					
l					
m					






TB2PR/FL KammBar

Instructions

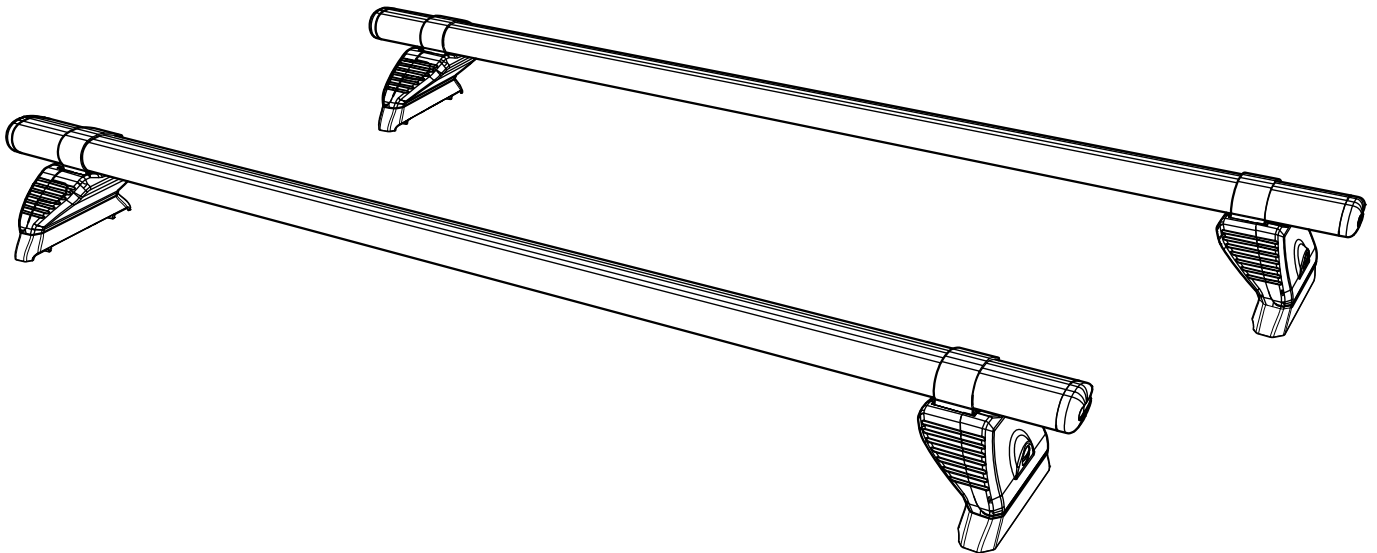


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

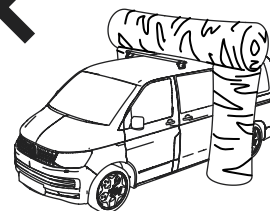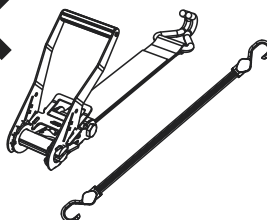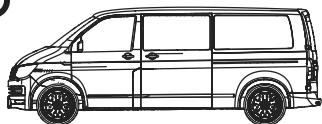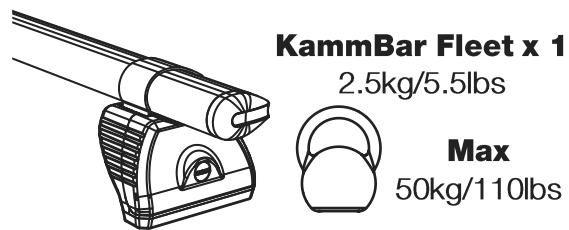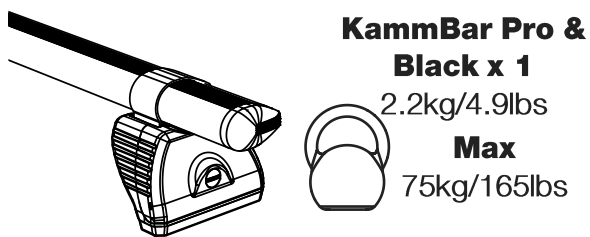


KammBar Pro & Black

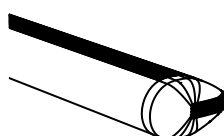


**SA513/
SA538 x 2** ☐

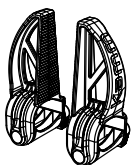

KLS2 x 1 ☐

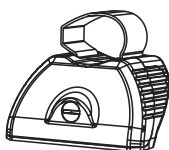


SA397 x 2 ☐

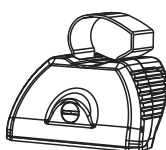


SA398 x 2 ☐


KammBar Fleet

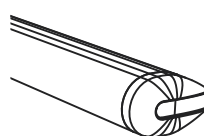


SA512 x 2 ☐



C04 x 2
optional upgrade

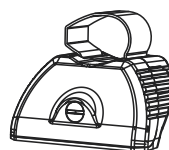


SA397 x 2 ☐

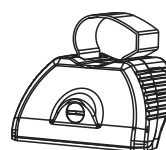


SA398 x 2 ☐

Fitting Kit




PS178 x 4 ☐




**FS061
(M8 x 35) x 8** ☐




PS492 x 4 ☐



**PS491
(3mm)
x 4** ☐

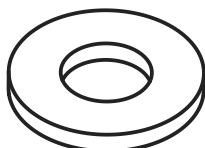


FW002 (M8) x 8 ☐

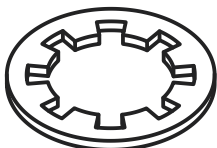

FW009 (M8) x 8 ☐




FT01 x 1 ☐




**PS615
(8mm)
x 8** ☐


1.

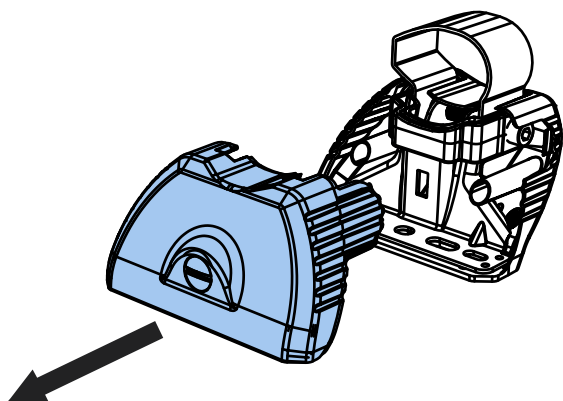


2.

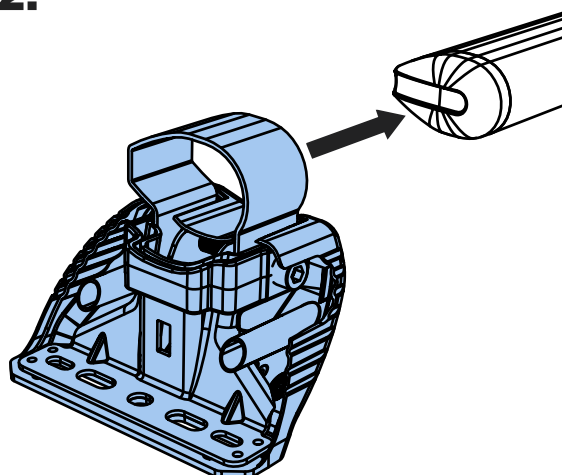



3.

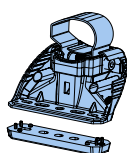

SA397
PS178

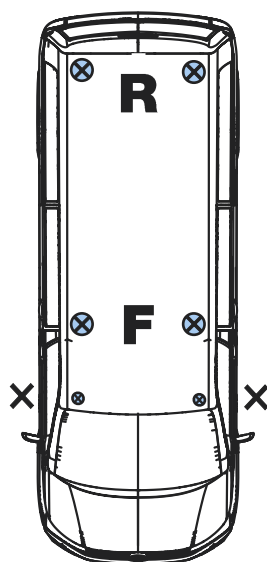


SA398
PS178

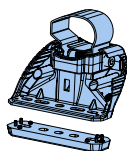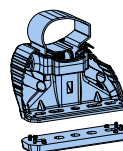


SA397
PS178


SA398
PS178

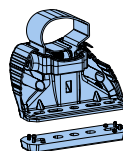

4.

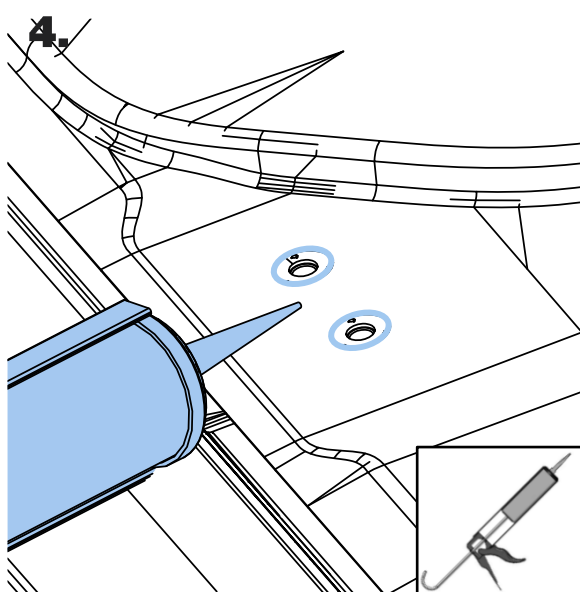


5a.

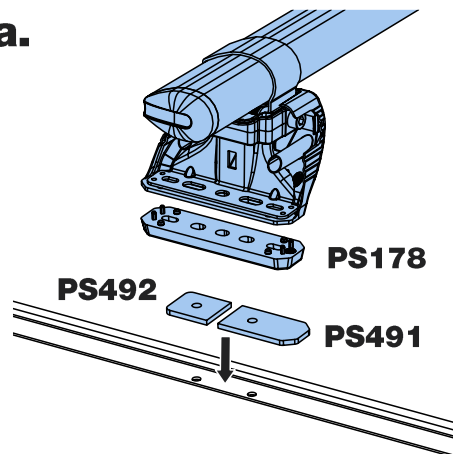


**! FORD TRANSIT
CUSTOM 2012-2023 R**

5b.

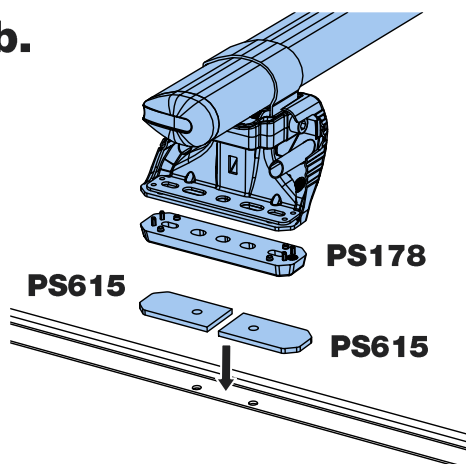


**! FORD TRANSIT
CUSTOM 2023- R**

6a.

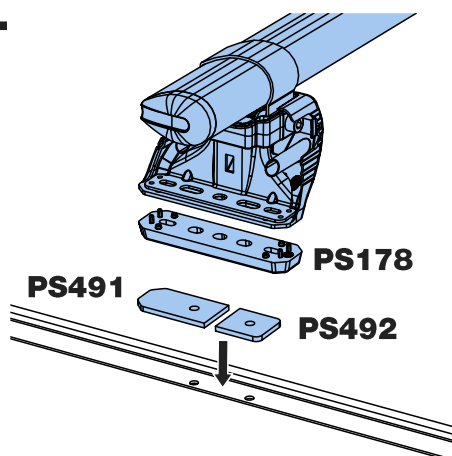


**! FORD TRANSIT
CUSTOM 2012-2023 F**

6b.

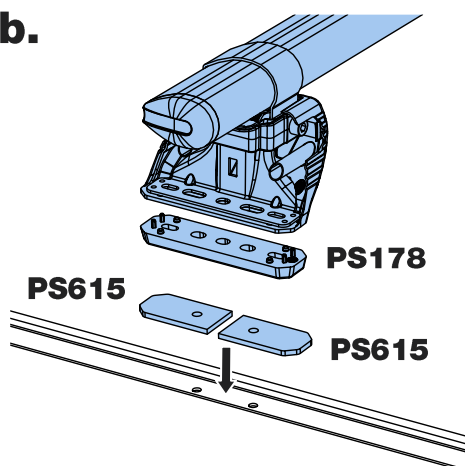


**! FORD TRANSIT
CUSTOM 2023- F**


7.

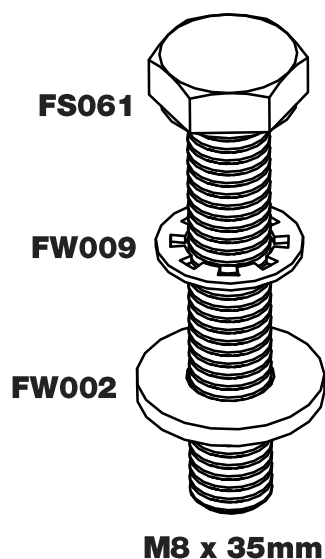


8.

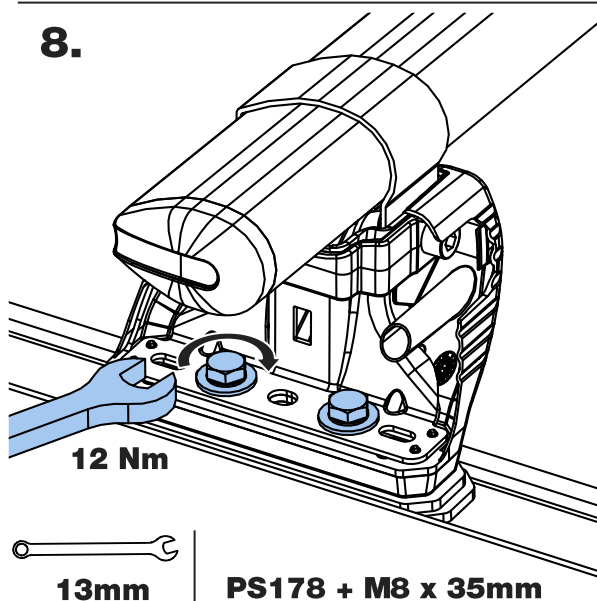

9.

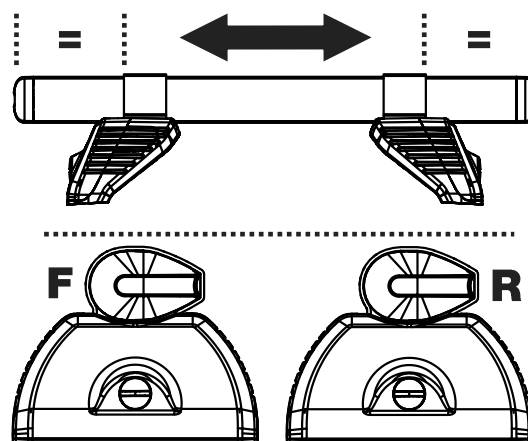

10.

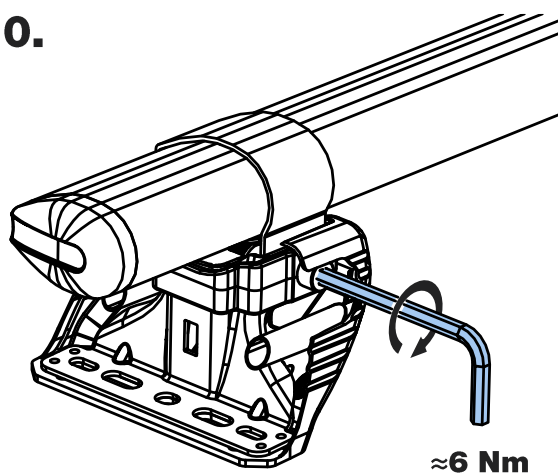

11.

