


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	SJ	KB	2758	02/08/22	First Issue
b	SJ	KB	2859	05/12/22	Updated position of SA069
c	YZL	KB	2958	19/05/23	Replaced SA070 with KLS2
d					
e					
f					
g					
h					
i					
j					
k					
l					
m					





VA2PR KammBar

Instructions

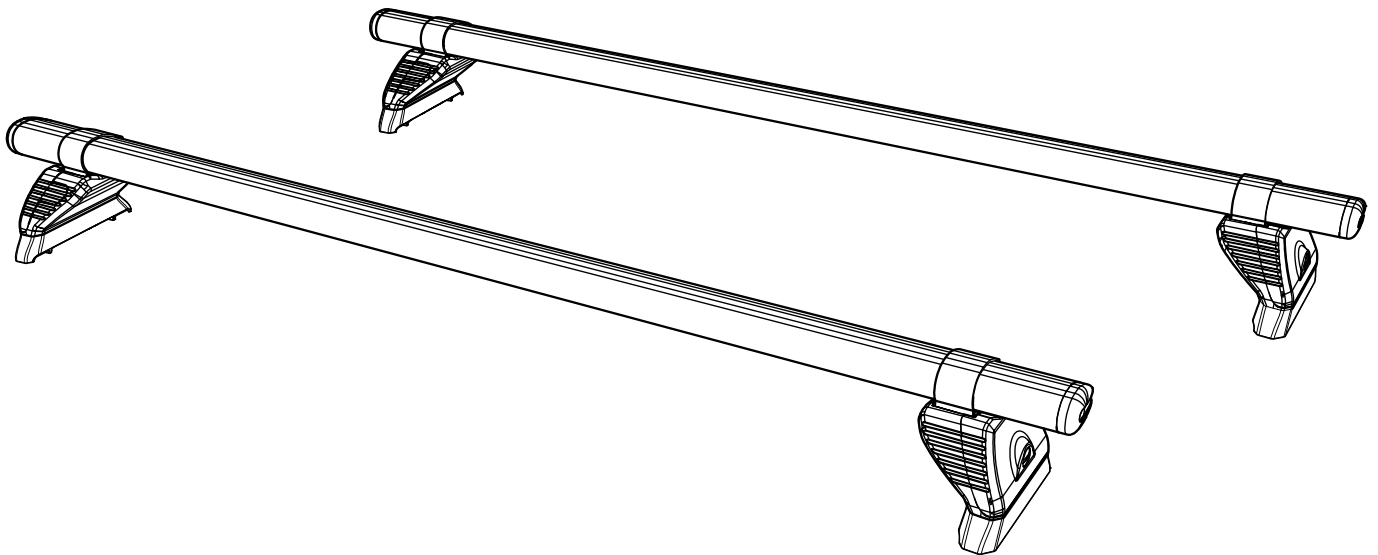


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

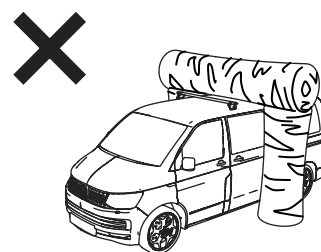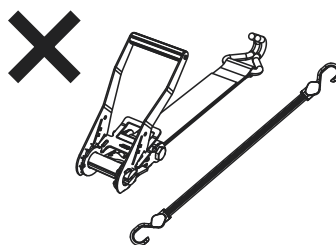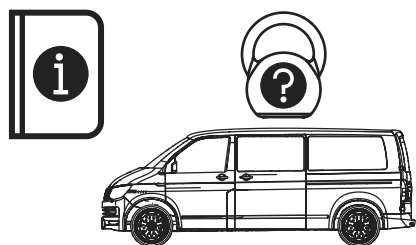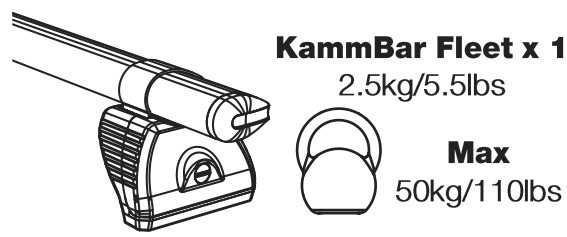


KammBar Pro

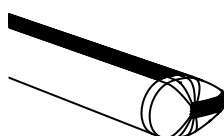


SA421 x 2 ☐

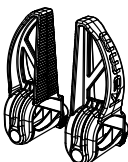

KLS2 x 1 ☐

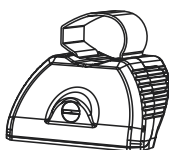


SA397 x 2 ☐

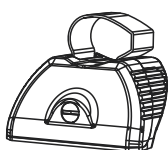


SA398 x 2 ☐


KammBar Fleet

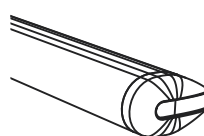


SA395 x 2 ☐



C04 x 2
optional upgrade

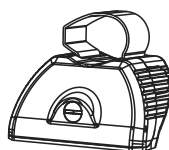


SA397 x 2 ☐

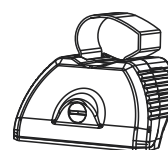


SA398 x 2 ☐

Fitting Kit



PS186 x 4 ☐




PS210 x 4 ☐



FT02 x 1 ☐



FT01 x 1 ☐



PS208 (M6) x 2 ☐




FW036 (M6) x 2 ☐



PS209 (M6) x 4 ☐




FW001 (M6) x 4 ☐



SA069 x 2 ☐




FW002 (M8) x 2 ☐




TP030 (M6) x 2



**FS103
(M6 x 25) x 4**




**FS062
(M8 x 25) x 2**




**FB001
(M6 x 55) x 2**




1.

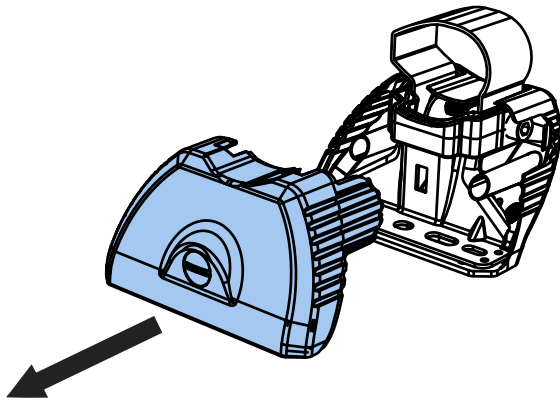


2.

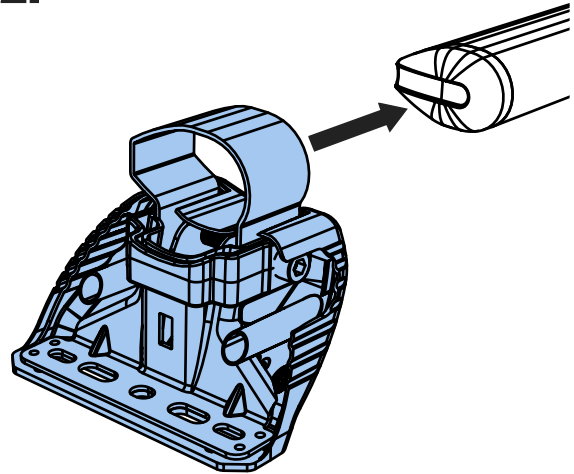



3.



SA397
PS186
SA069

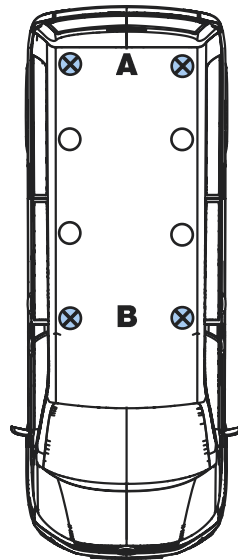


SA398
PS186
SA069






SA397
PS186


SA398
PS186



4.

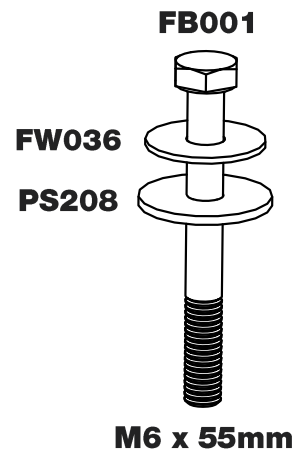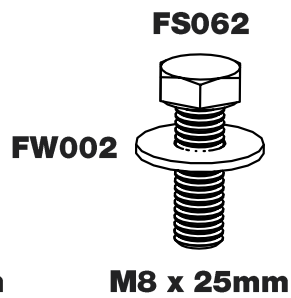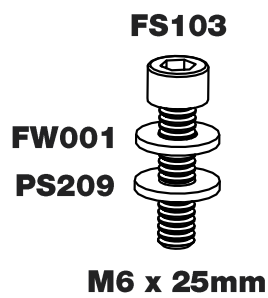


5.

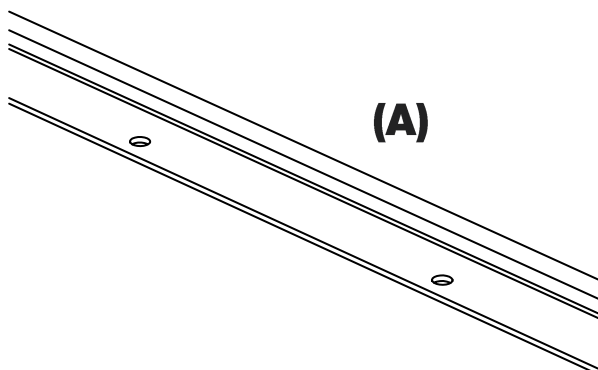


7-13, 17-20.

6.

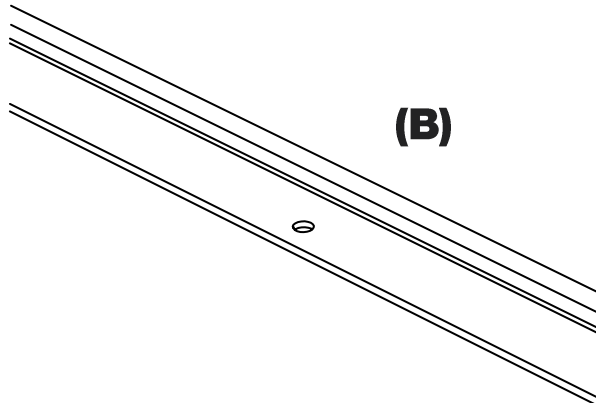


14-20.


7.

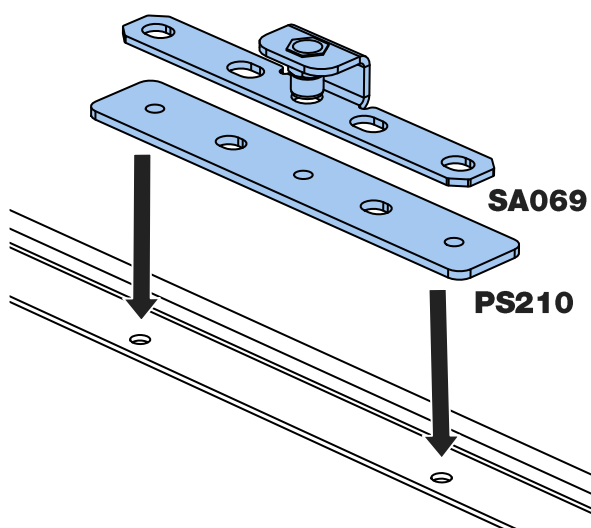


8.

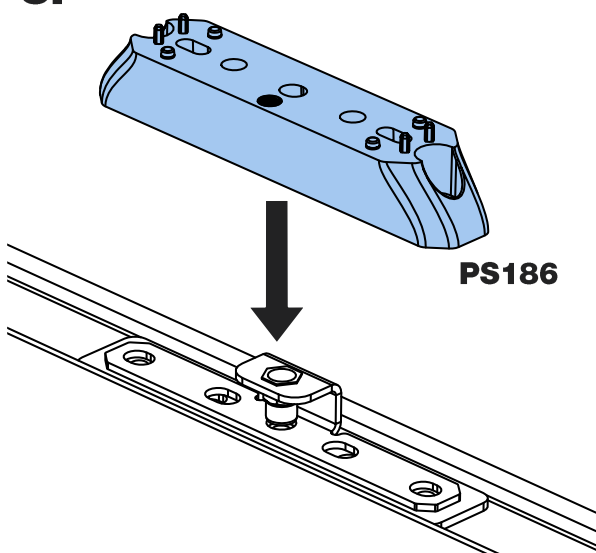


9.

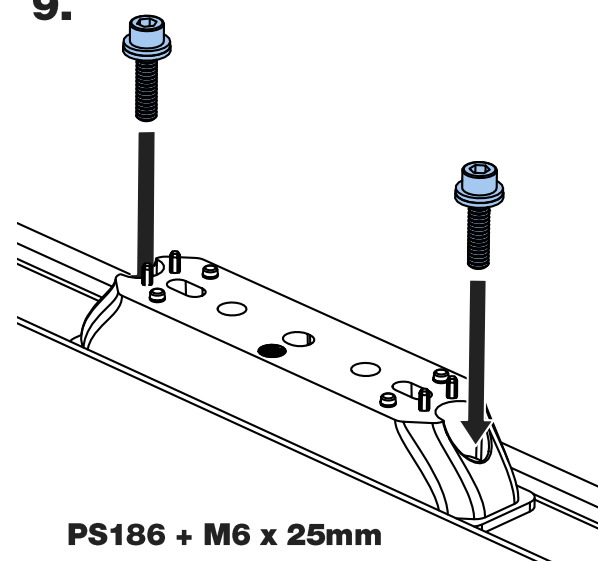


10.

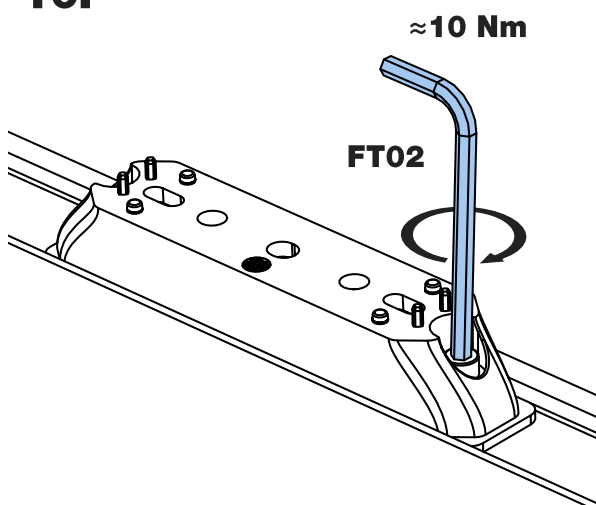

11.

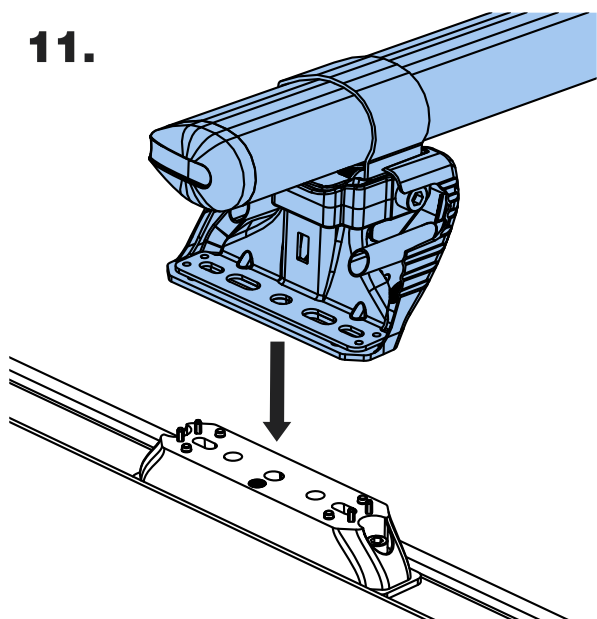


12.

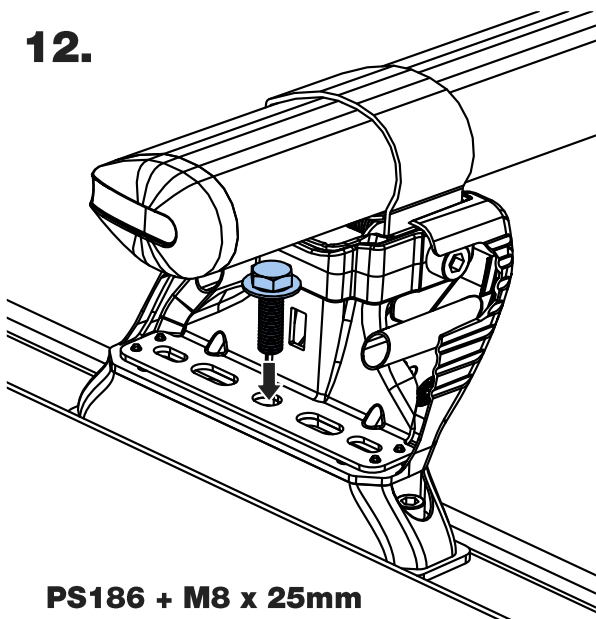

PS186 + M8 x 25mm


13.

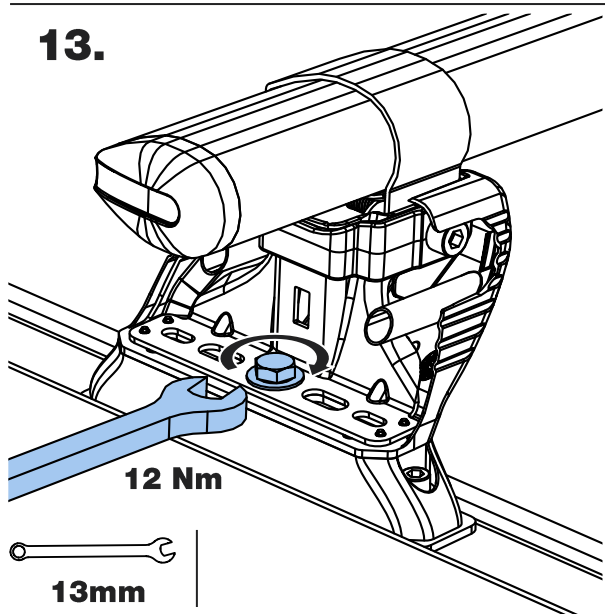

12 Nm

13mm


14.

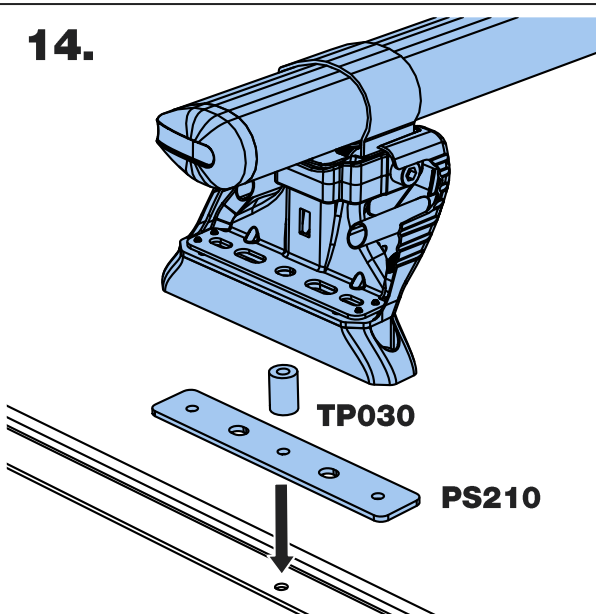

TP030


PS210

15.

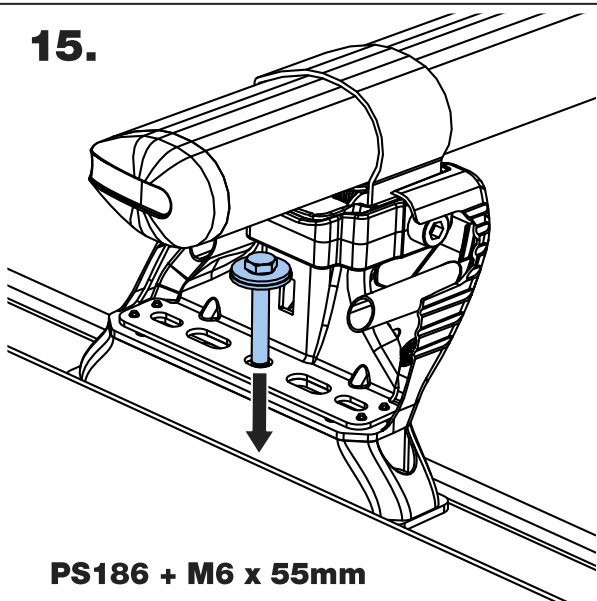

PS186 + M6 x 55mm


16.

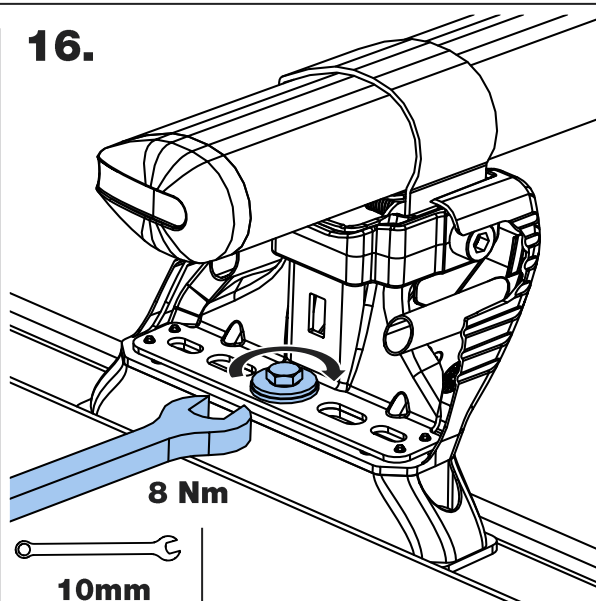


8 Nm

10mm


17.

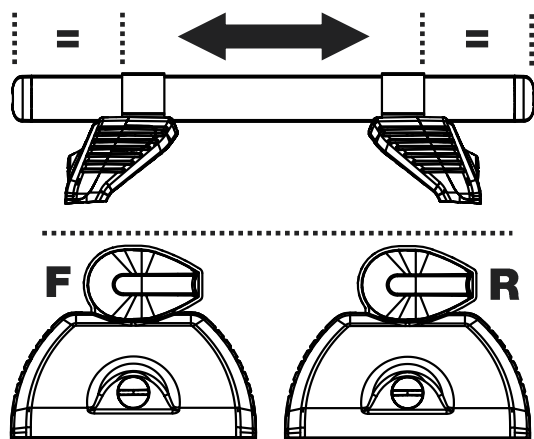

18.

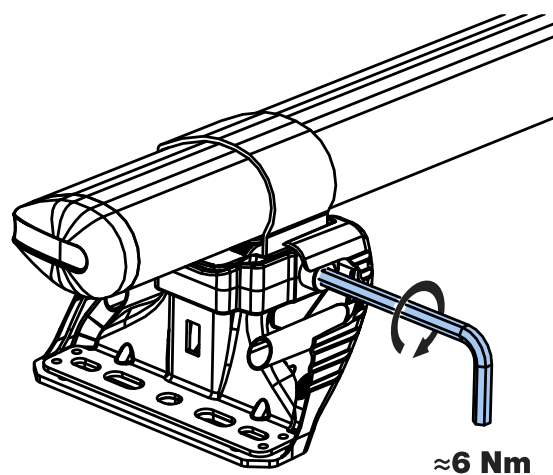

19.

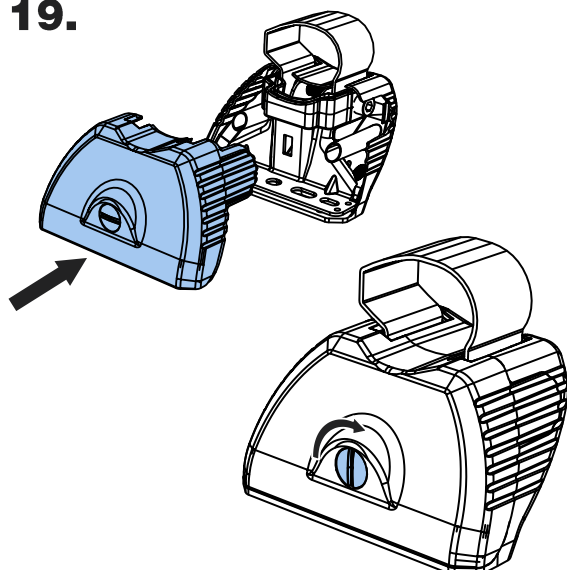

20.

