






ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	SJ	KB	2758	02/08/22	First Issue
b	MK	KB	2950	09/05/23	Replaced SA393 with SA460 and replaced SA070 with KLS2
c					
d					
e					
f					
g					
h					
i					
j					
k					
l					
m					

WD2PR/FL KammBar Instructions


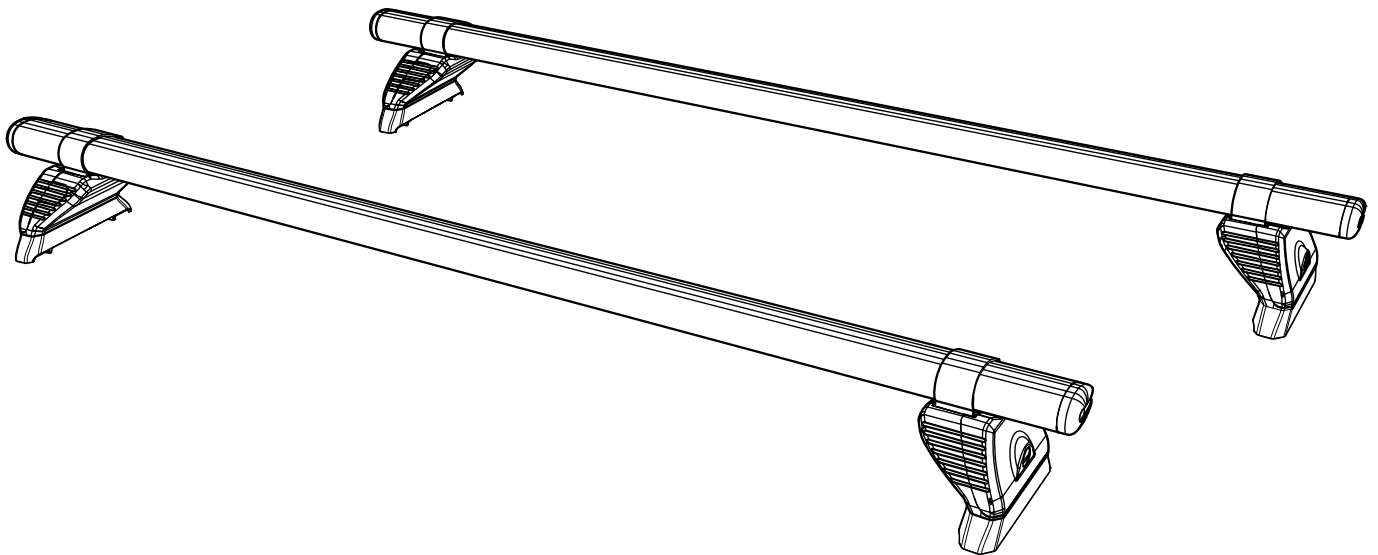


CITY CRASH (✓)



According to ISO/ PAS 11154:2006

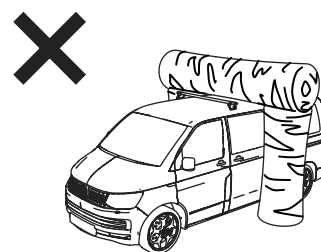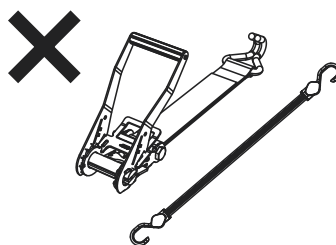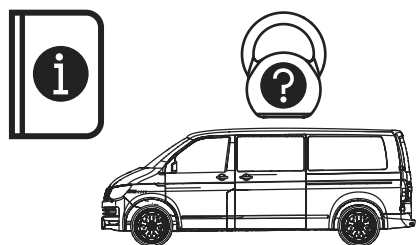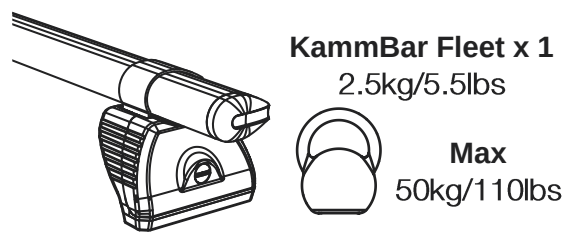








KammBar Pro

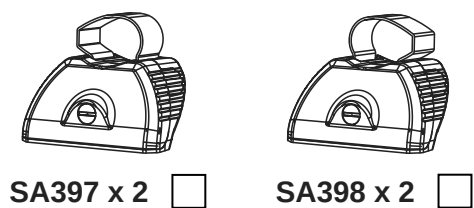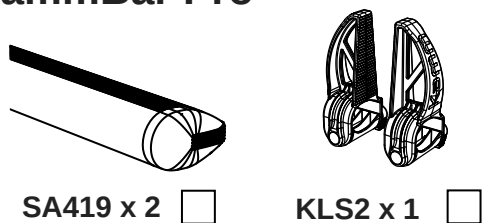


KammBar Fleet

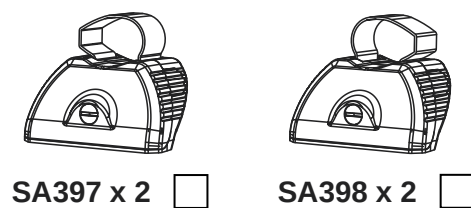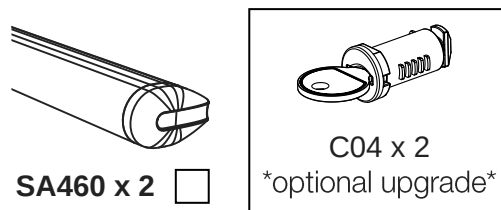


Fitting Kit

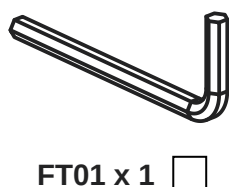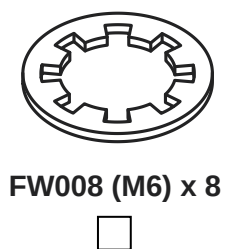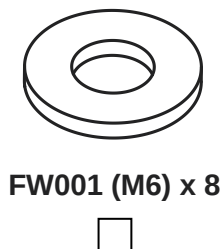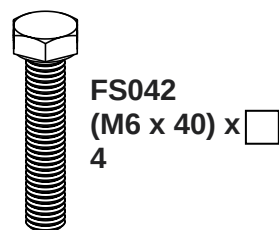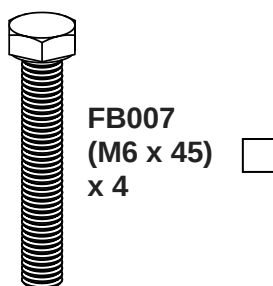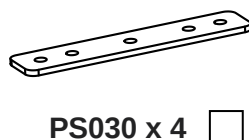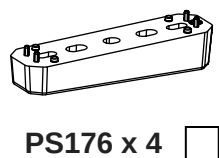

1.

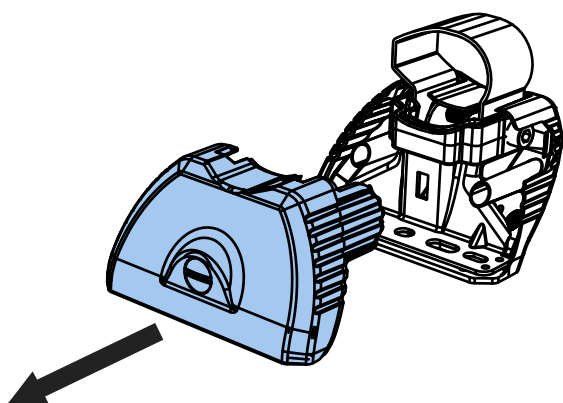

2.

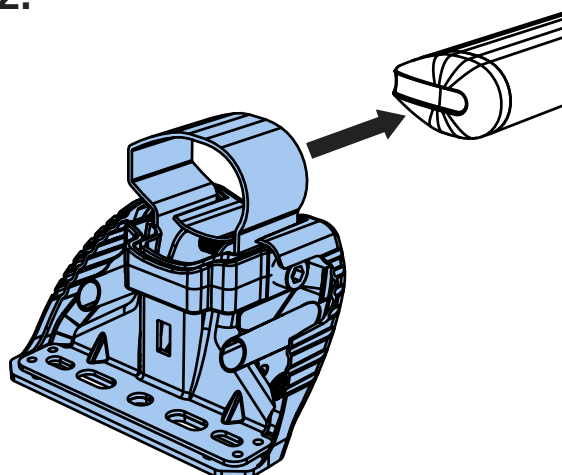


3.





SA397

PS176

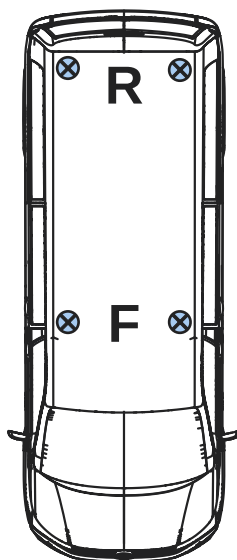

SA398

PS176




SA397


PS176

SA398

PS176



4.

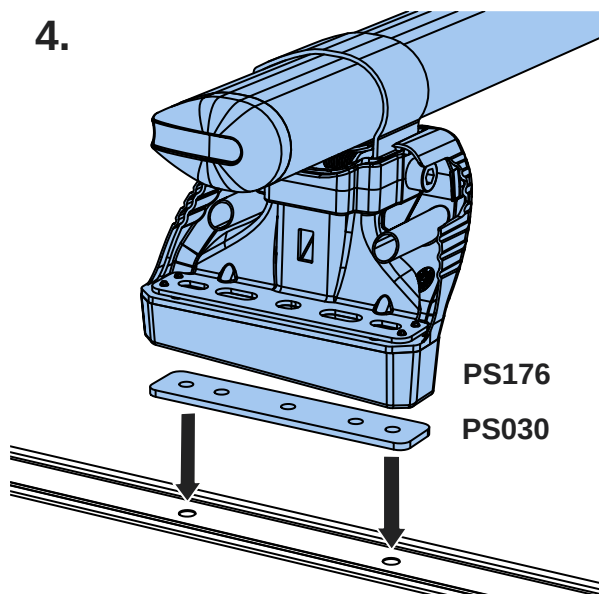


5.

FB007

FW008

FW001

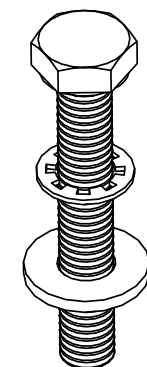


M6 x 45mm







FS042

FW008


FW001

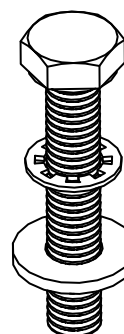

M6 x 40mm

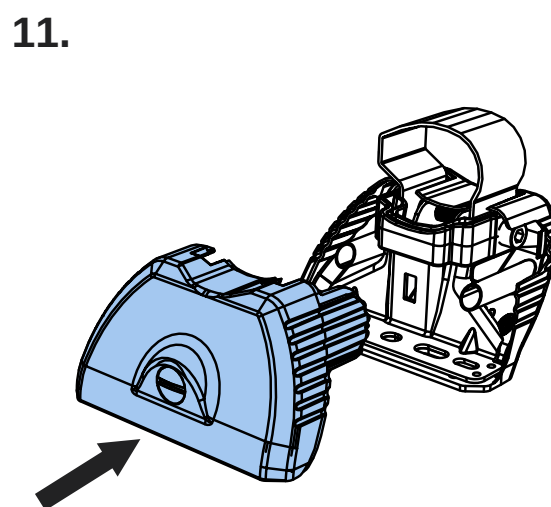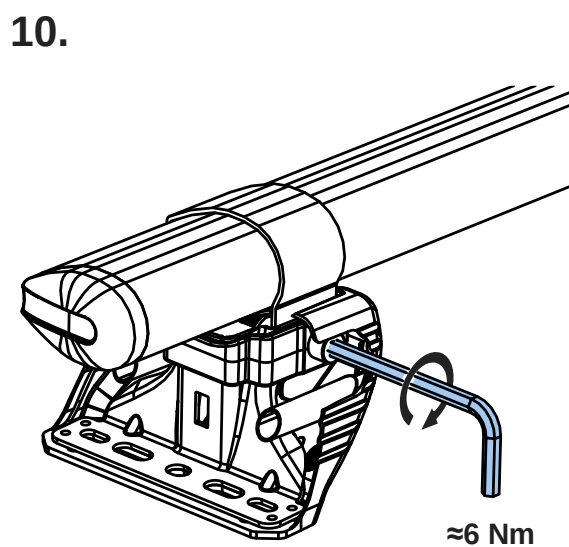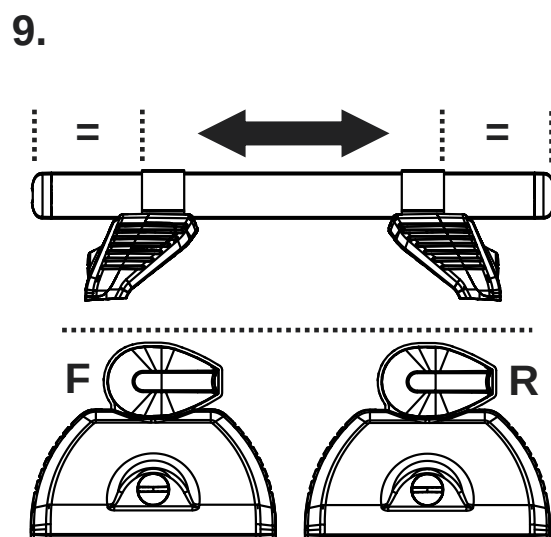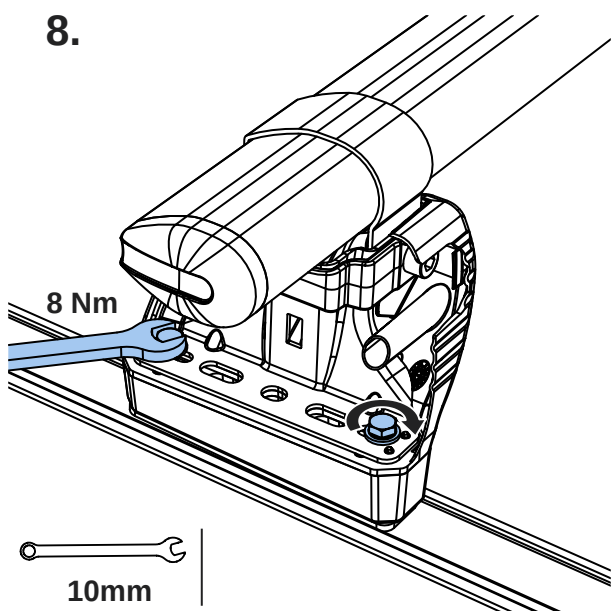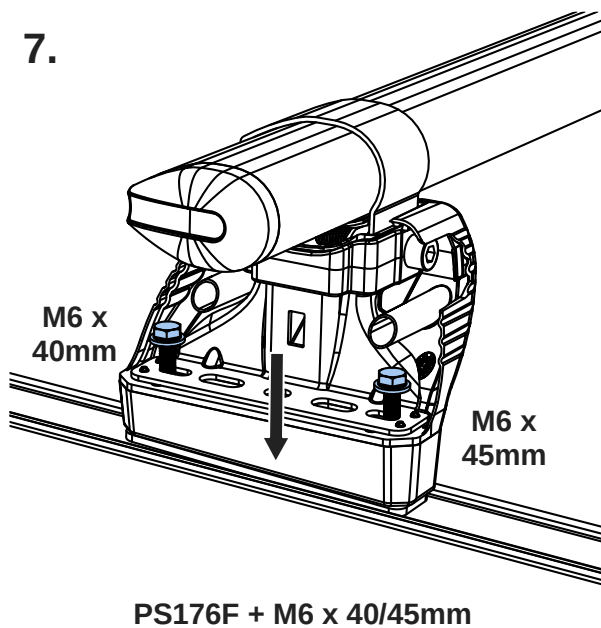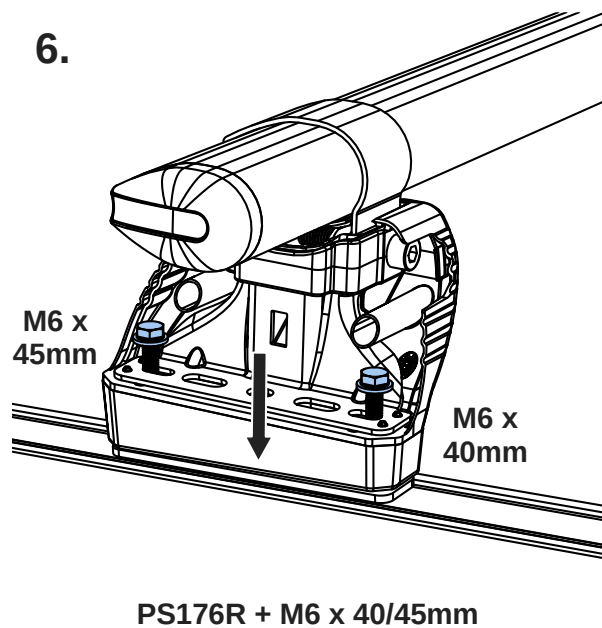

12.

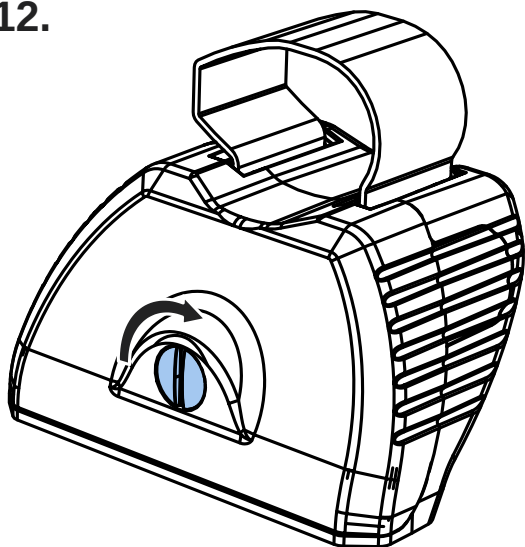

13.

