






| ISSUE: | DRAWN BY: | CHECKED BY: | CRF No: | DATE:    | DESCRIPTION:                                           |
|--------|-----------|-------------|---------|----------|--------------------------------------------------------|
| a      | SJ        | KB          | 2758    | 02/08/22 | First Issue                                            |
| b      | MK        | KB          | 2950    | 09/05/22 | Replaced SA393 with SA460 and replaced SA070 with KLS2 |
| c      |           |             |         |          |                                                        |
| d      |           |             |         |          |                                                        |
| e      |           |             |         |          |                                                        |
| f      |           |             |         |          |                                                        |
| g      |           |             |         |          |                                                        |
| h      |           |             |         |          |                                                        |
| i      |           |             |         |          |                                                        |
| j      |           |             |         |          |                                                        |
| k      |           |             |         |          |                                                        |
| l      |           |             |         |          |                                                        |
| m      |           |             |         |          |                                                        |

# WD3PR/FL KammBar Instructions

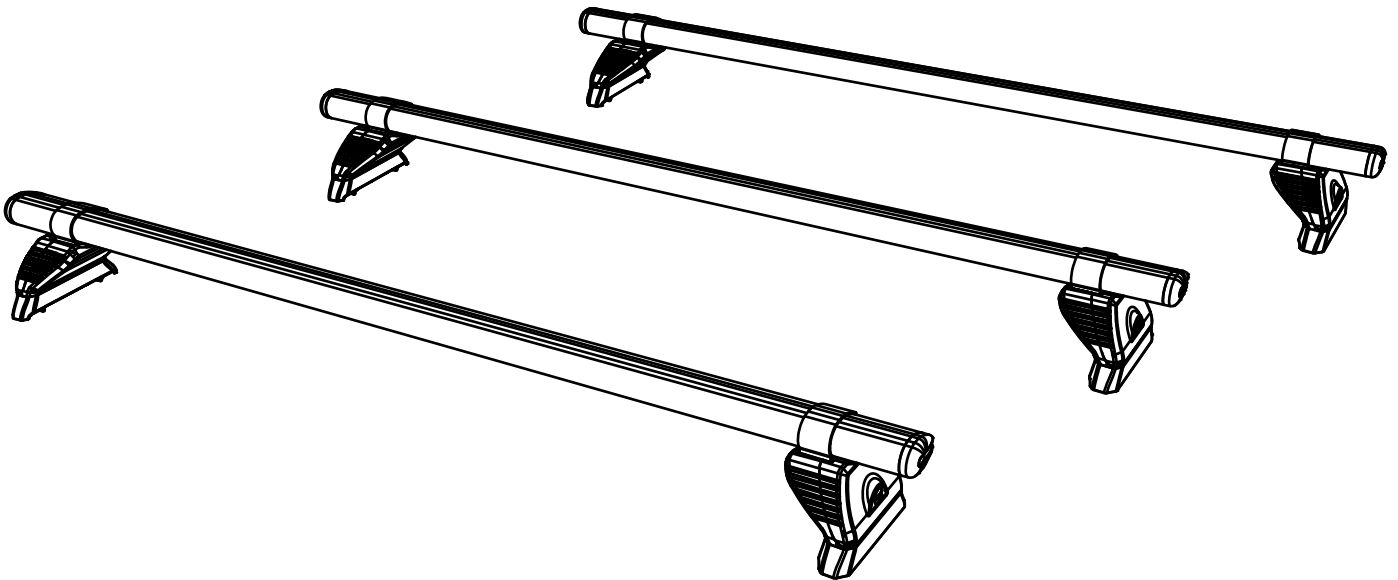


**CITY CRASH (✓)**


According to ISO/ PAS 11154:2006

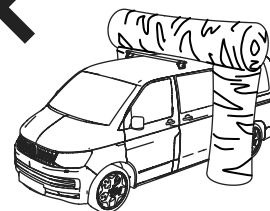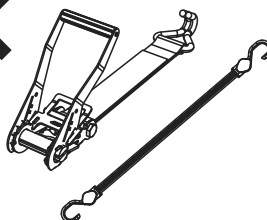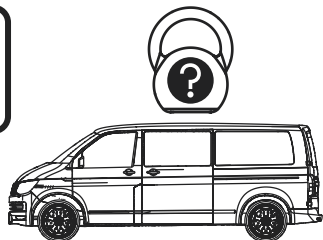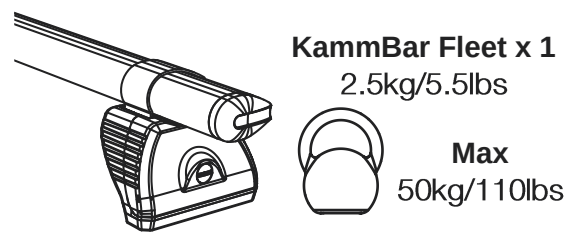


## KammBar Pro

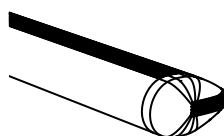


SA419 x 3 ☐

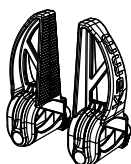

KLS2 x 1 ☐

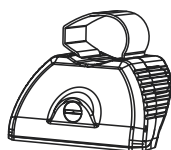


SA397 x 3 ☐

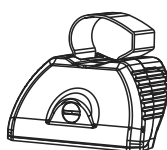


SA398 x 3 ☐


## KammBar Fleet

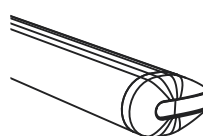


SA460 x 3 ☐



C04 x 3  
\*optional upgrade\*

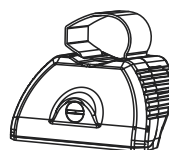


SA397 x 3 ☐

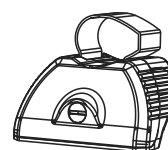


SA398 x 3 ☐


## Fitting Kit




PS176 x 4 ☐




PS178 x 2 ☐




PS030 x 4 ☐



PS031 x 4 ☐

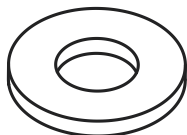


FW001 (M6) x 10

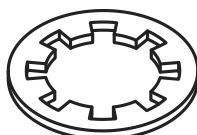


FW008 (M6) x 10




FT01 x 1 ☐




FB007 (M6 x 45) x 4



FS042 (M6 x 40) x 4




FS039 (M6 x 30) x 2




FS038 (M6 x 25) x 2




1.

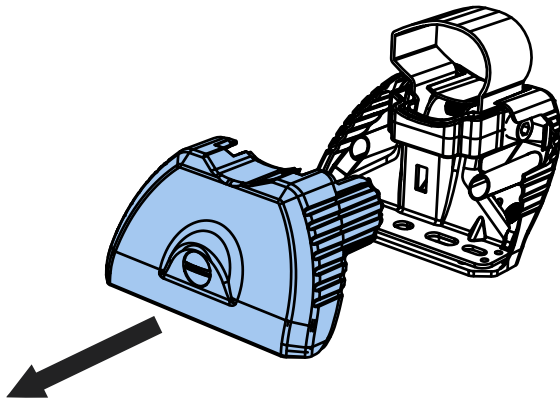


2.

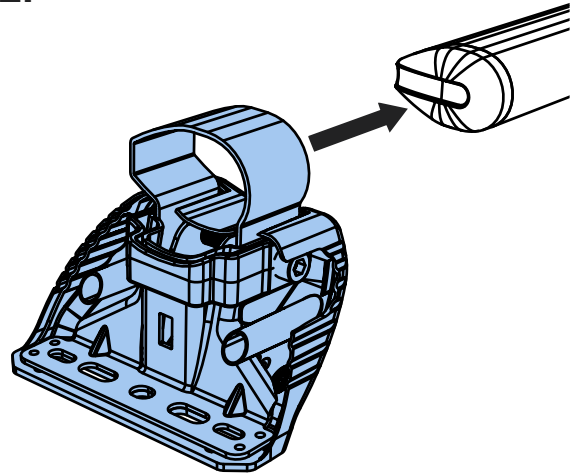


3.






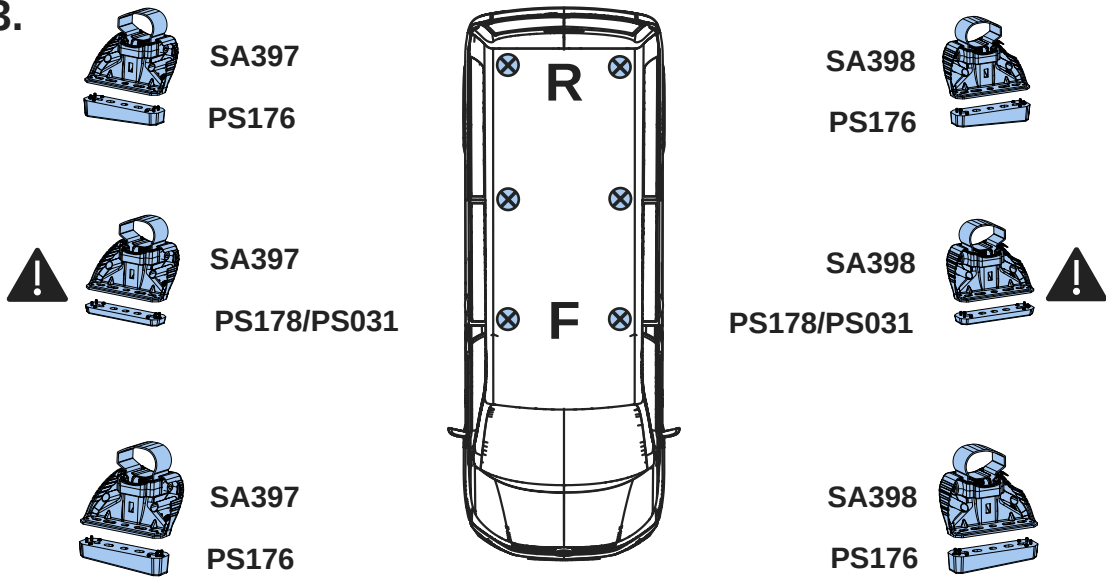


4.

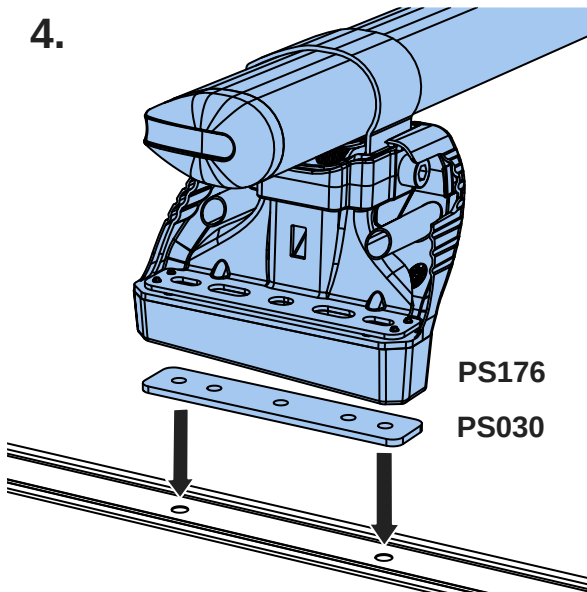


5.

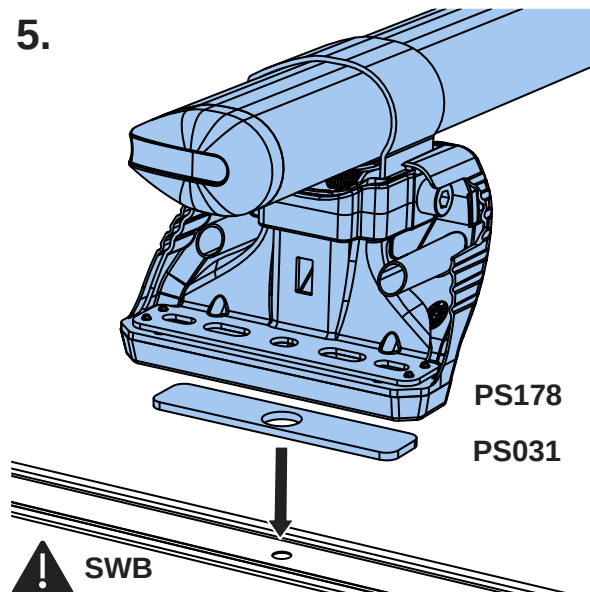

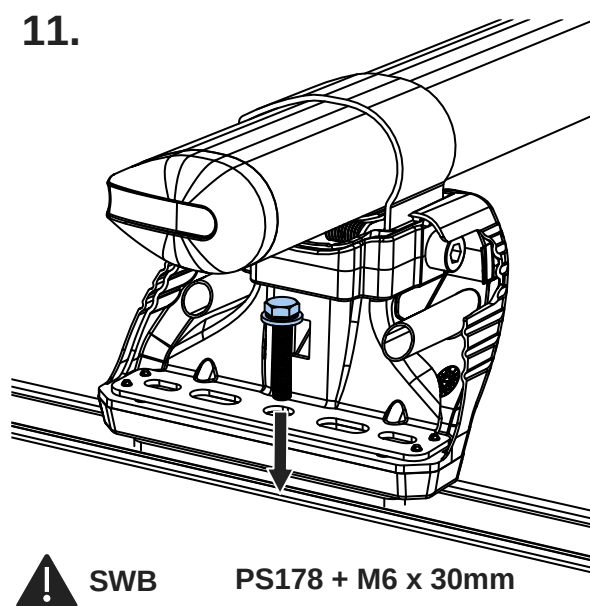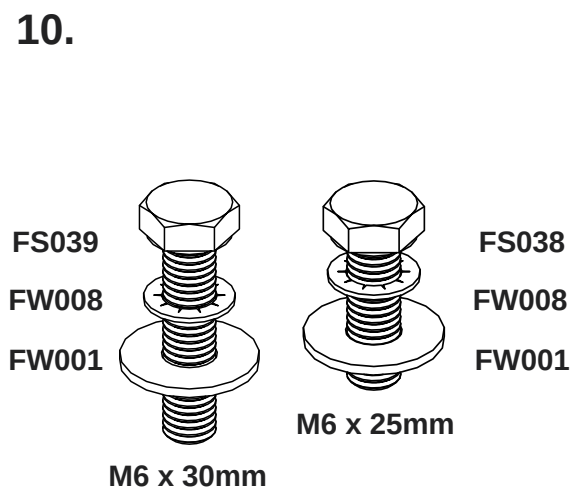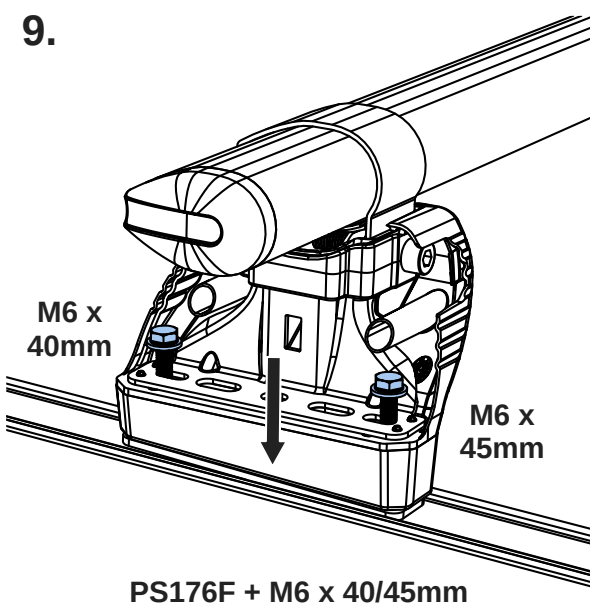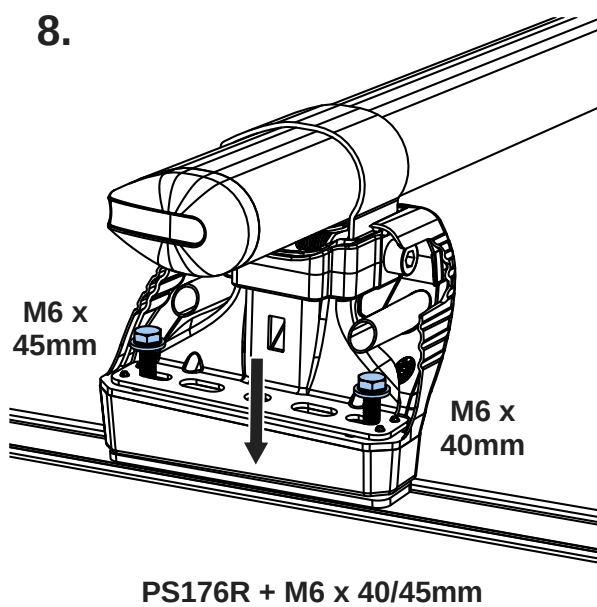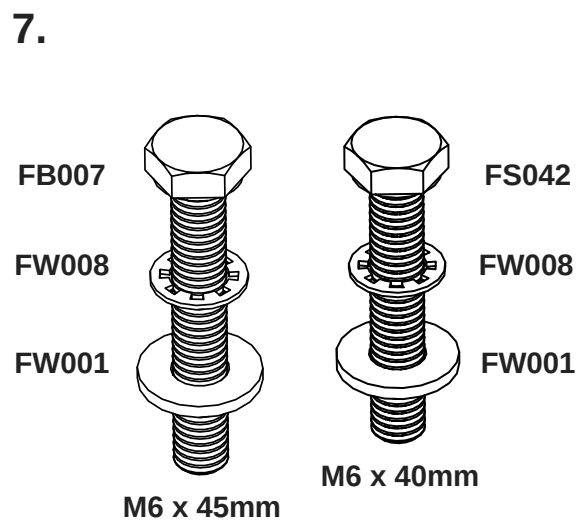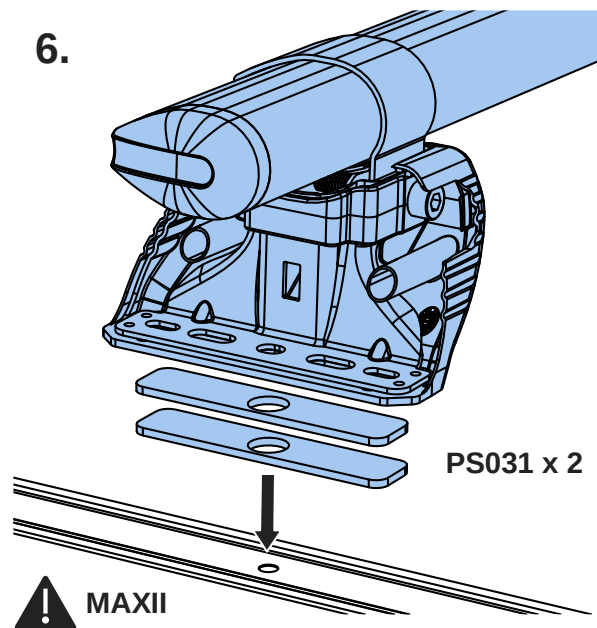


12.

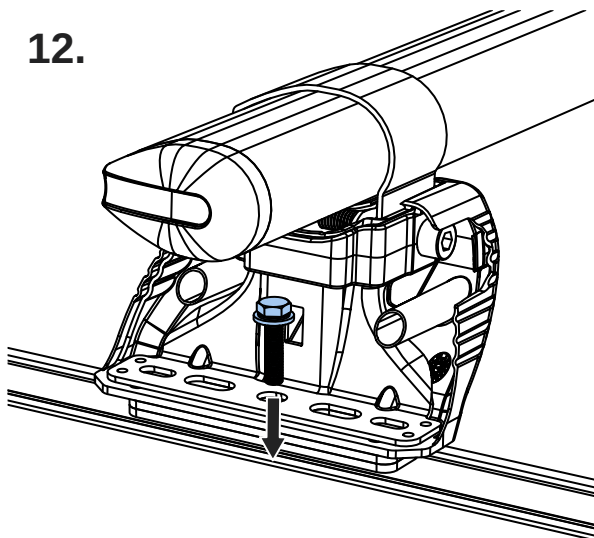


 **MAXII** PS031 x 2 + M6 x 25mm


13.

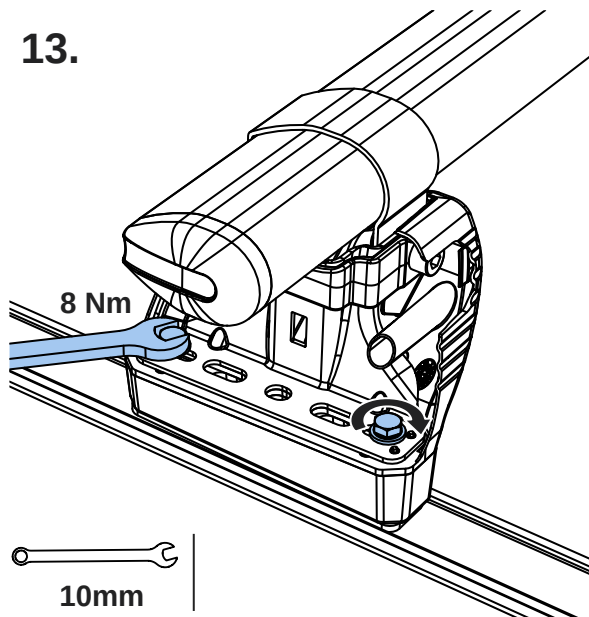


14.

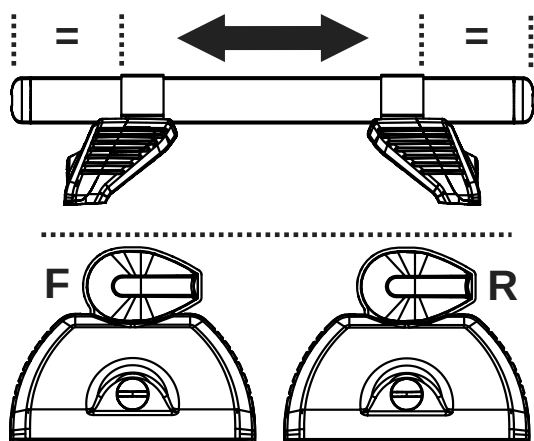

15.

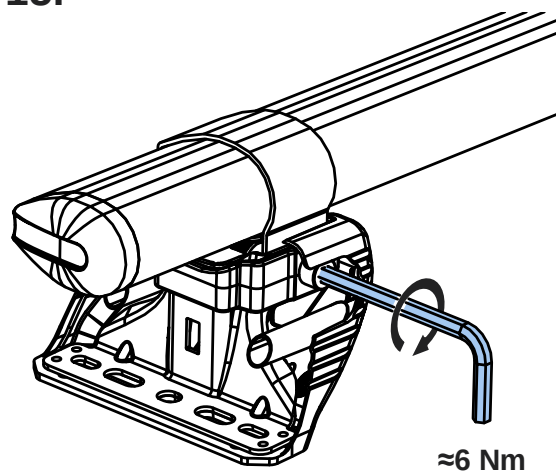

16.

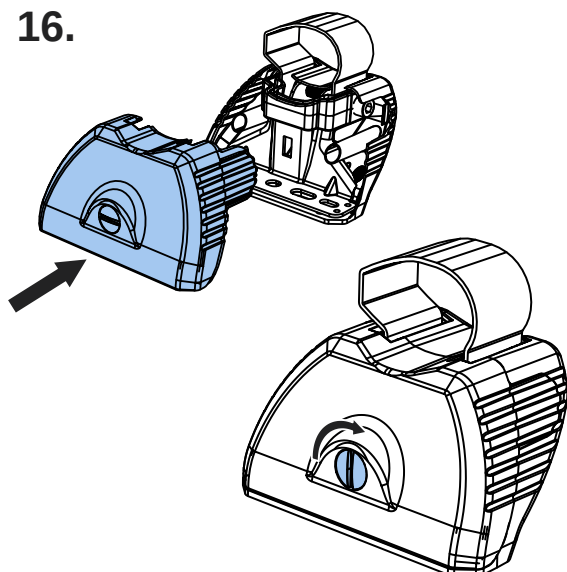

17.

