


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	SJ	KB	2758	02/08/22	First Issue
b	YZL	KB	2958	22/05/23	Replaced SA070 with KLS2
c					
d					
e					
f					
g					
h					
i					
j					
k					
l					
m					

XD2PR/FL





KammBar

Instructions

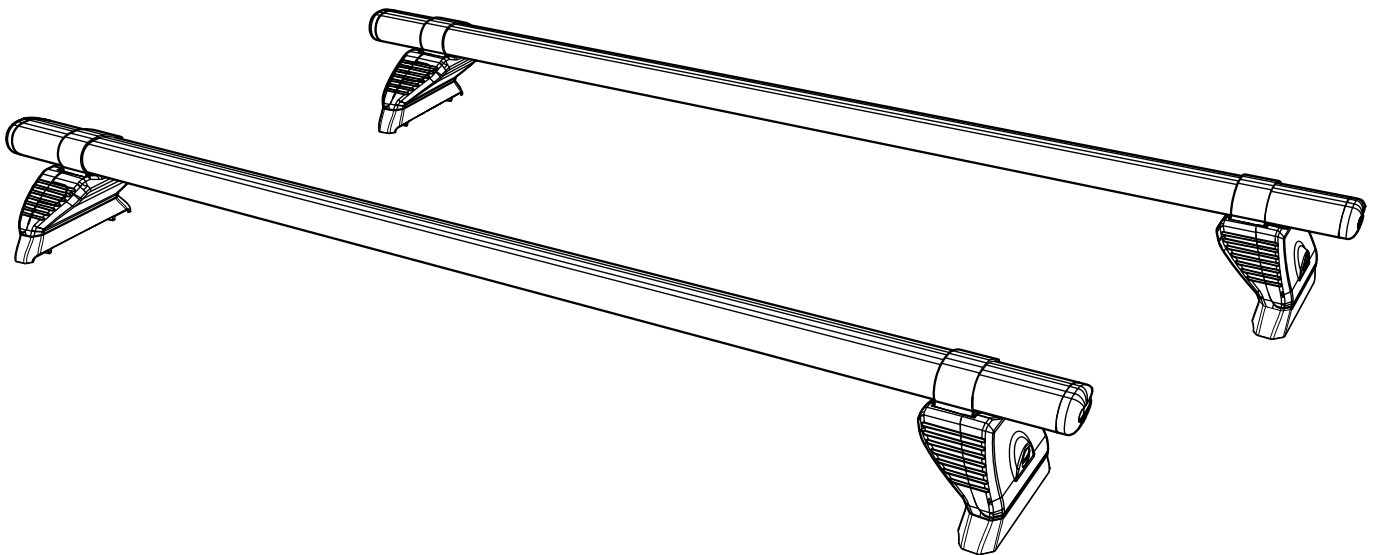


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

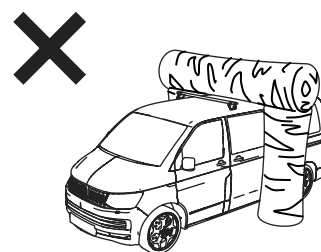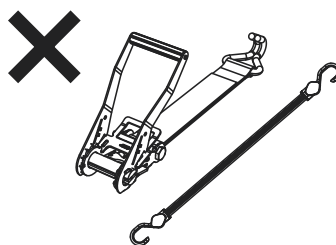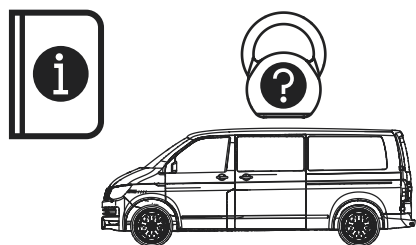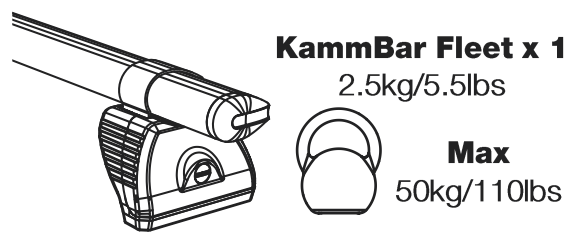


KammBar Pro

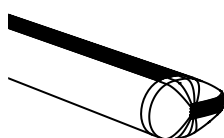


SA420 x 2 ☐

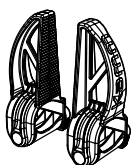

KLS2 x 1 ☐

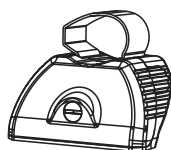


SA397 x 2 ☐

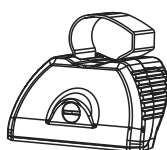


SA398 x 2 ☐


KammBar Fleet

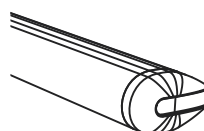


SA394 x 2 ☐



C04 x 2
optional upgrade

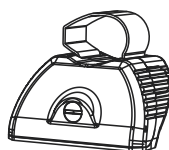


SA397 x 2 ☐

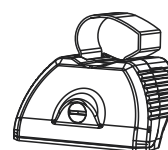


SA398 x 2 ☐


Fitting Kit



PS183 x 4 ☐



PS023 x 4 ☐



MS1132 x 4 ☐




FT01 x 1 ☐




FW001 (M6) x 16




FN001 (M6) x 8

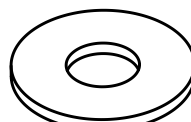

FW021 (M8) x 12









**FS062
(M8 x 25)
x 12**




**FS187
(M6 x 50)
x 8**




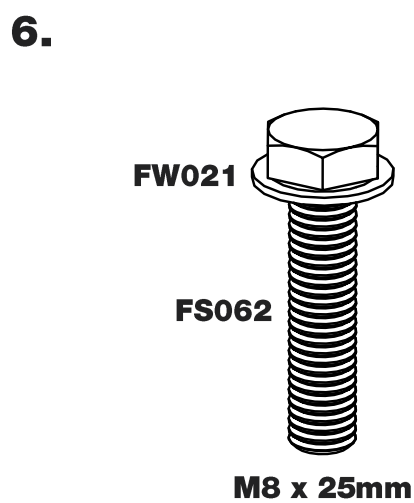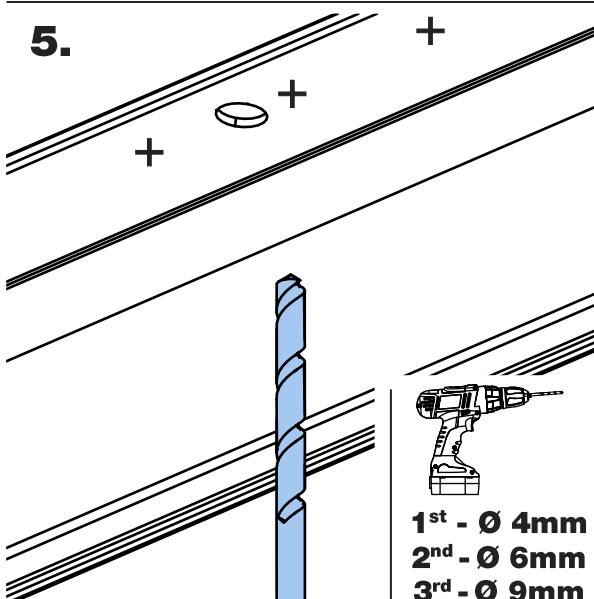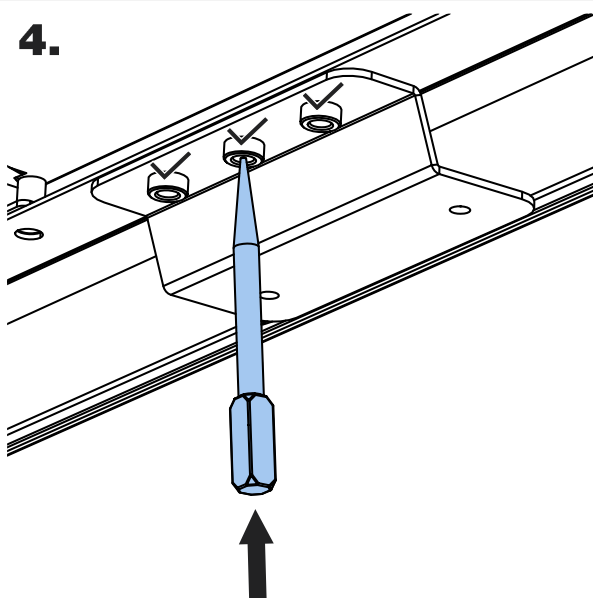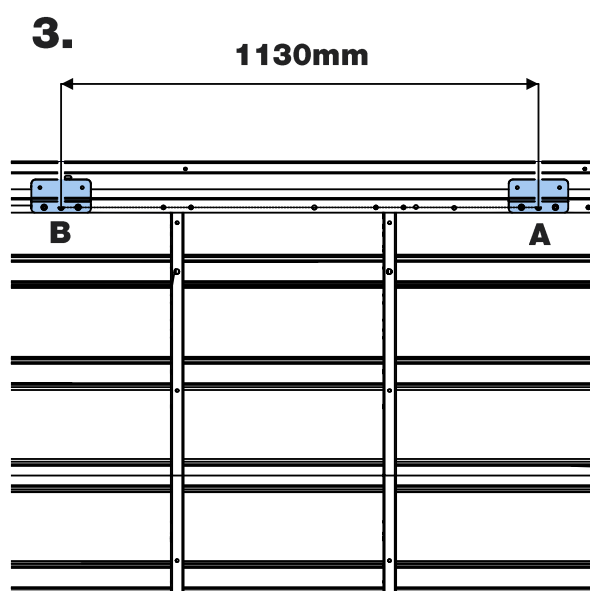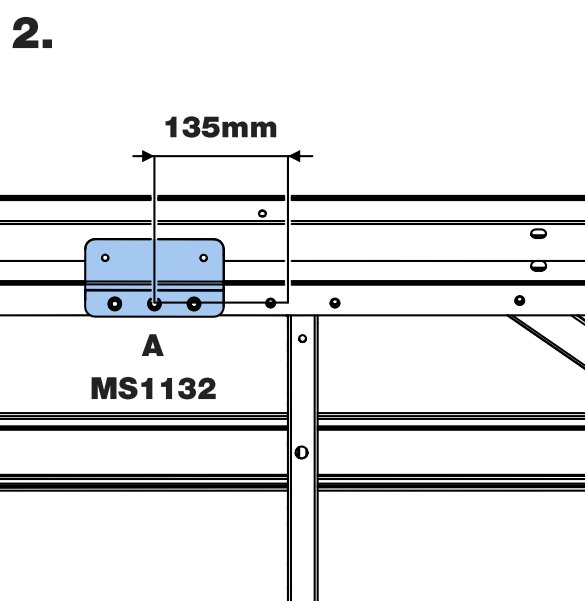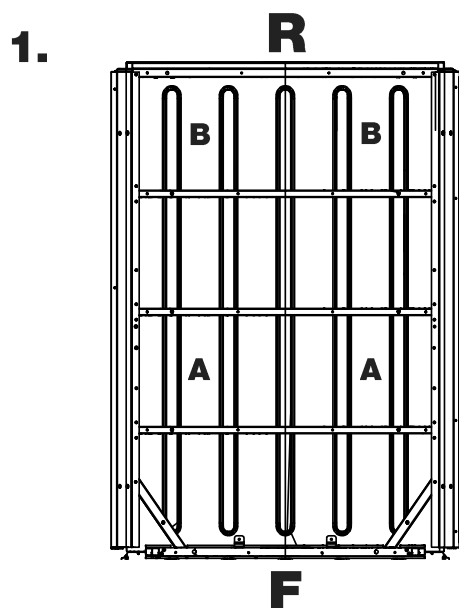


7.

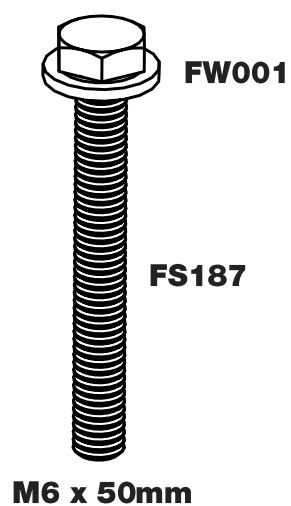


8.

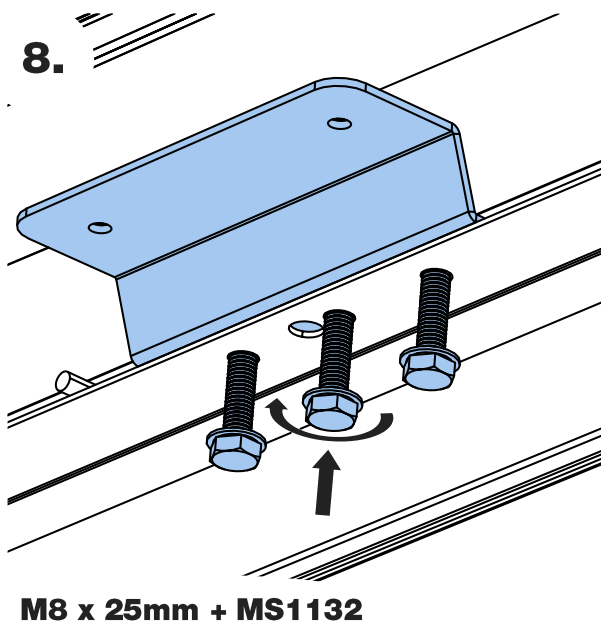


9.

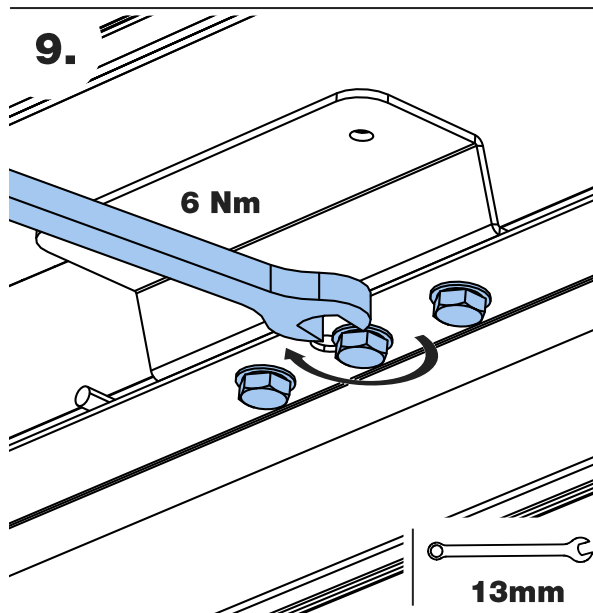


10.

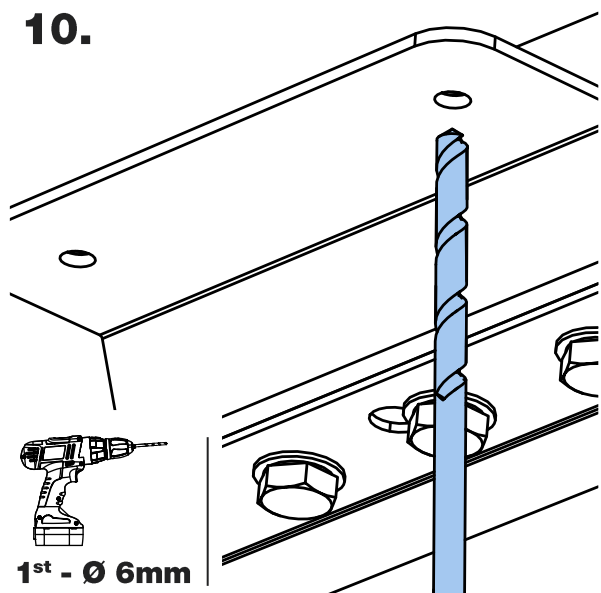


11.

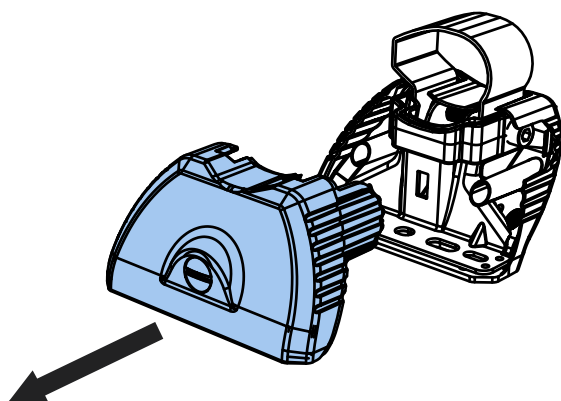

12.


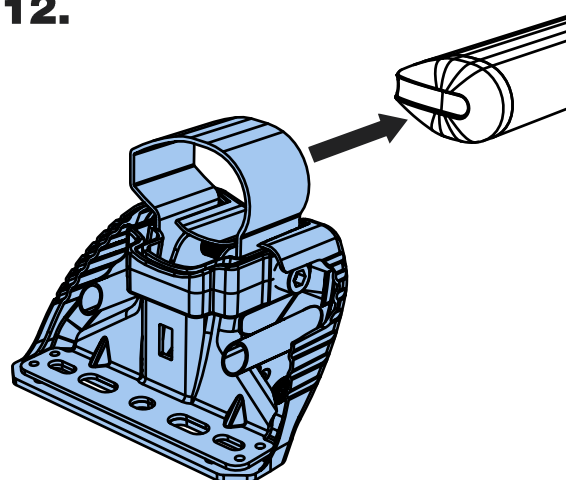


13.





SA397
PS183

SA398
PS183




SA397
PS183


SA398
PS183

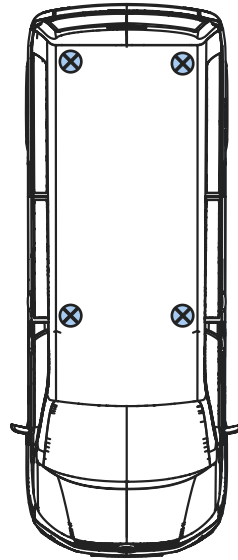

14.

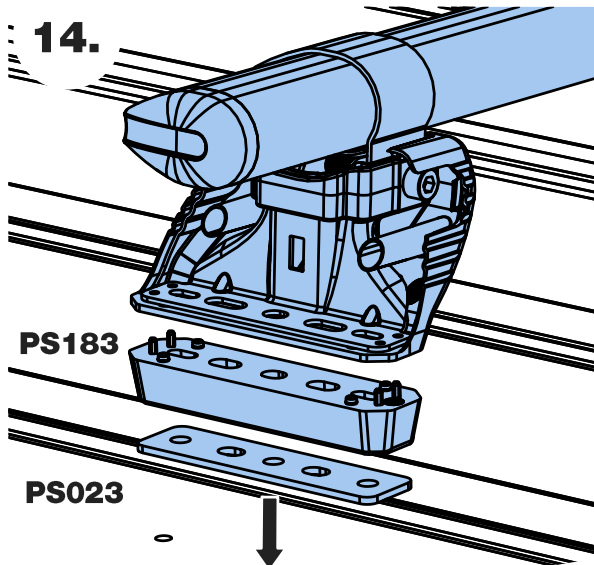


15.

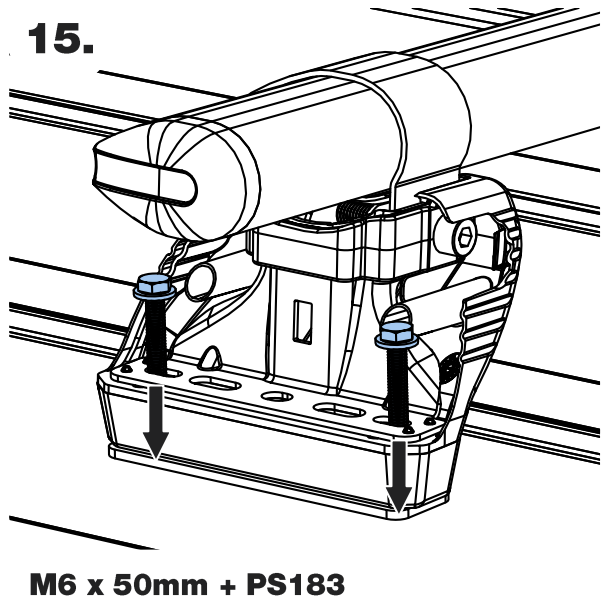


M6 x 50mm + PS183

16.

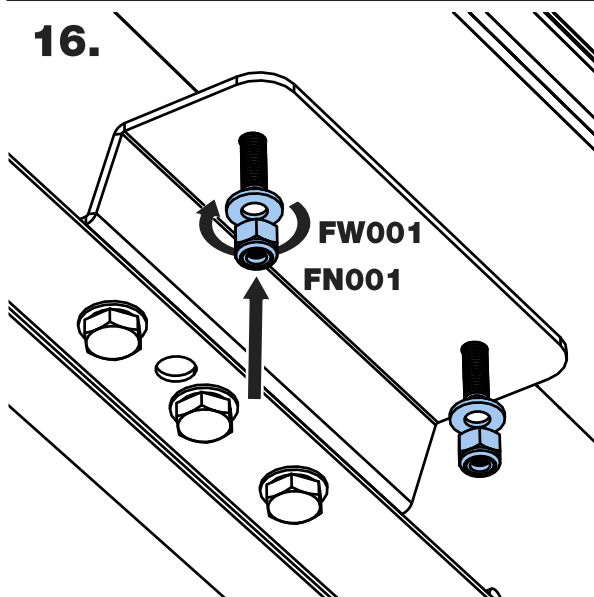


17.

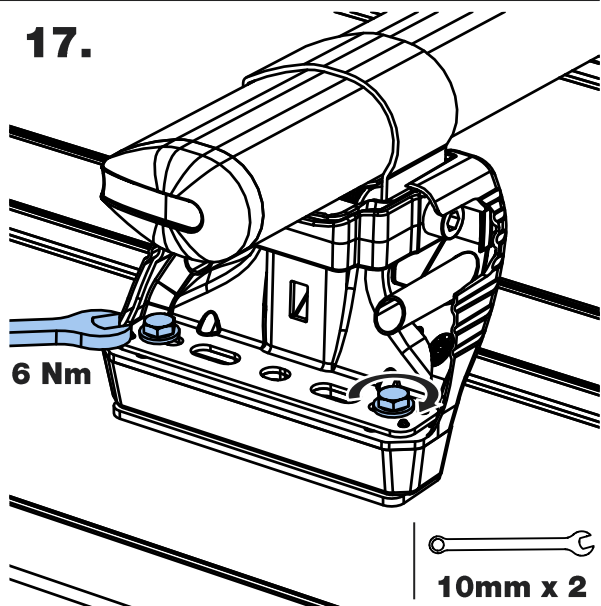


10mm x 2


18.

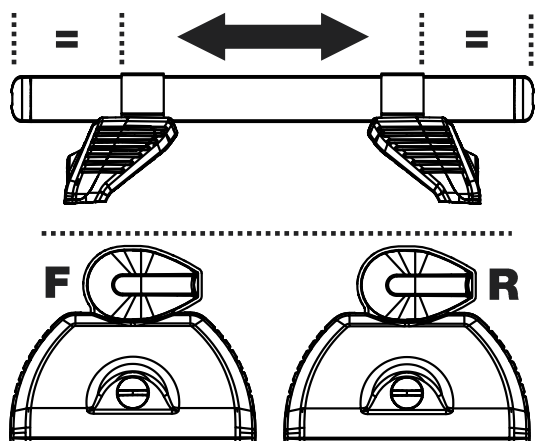

19.

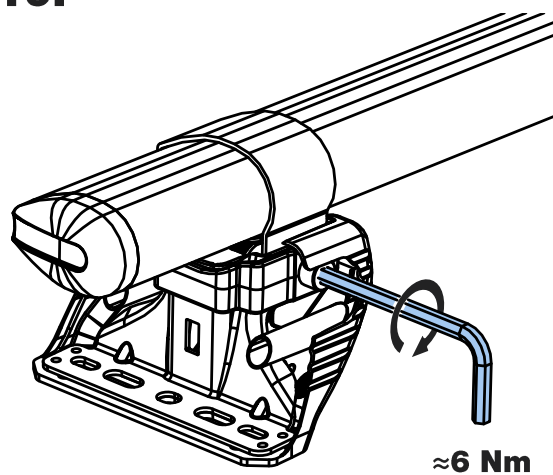

20.

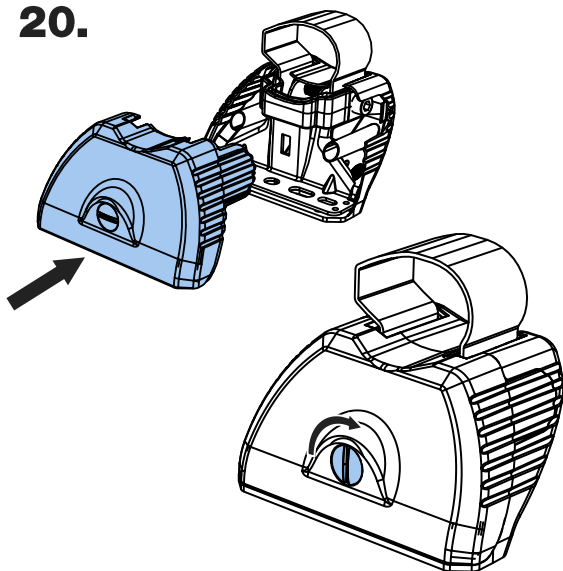

21.

